

[Manuals.plus](#) /

› [Leopold](#) /

› Leopold FC 750R PD Mechanical Keyboard User Manual

Leopold FC 750R PD

Leopold FC 750R PD Mechanical Keyboard User Manual

Model: FC 750R PD

1. INTRODUCTION

Thank you for choosing the Leopold FC 750R PD Mechanical Keyboard. This high-quality 87-key tenkeyless keyboard is designed for durability and a superior typing experience, featuring CHERRY MX mechanical switches and PBT double-shot keycaps. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new keyboard.




Front view of the Leopold FC 750R PD mechanical keyboard, showcasing its compact 87-key tenkeyless layout and dark-colored PBT keycaps.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Leopold FC 750R PD Mechanical Keyboard
- USB Cable
- PS/2 Adapter
- Keycap Puller
- Additional Keycaps (e.g., Ctrl, Caps Lock)

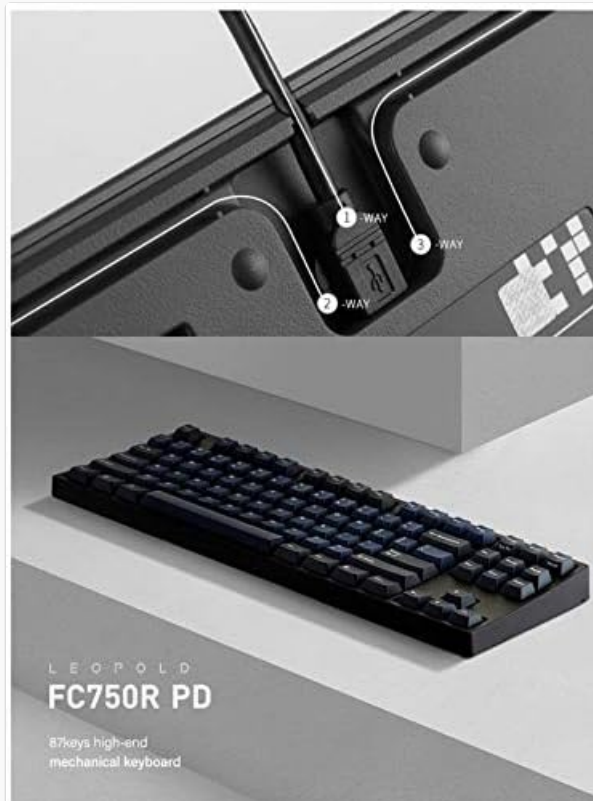

The underside of the keyboard, showing the three-way cable routing channels for organized desk setup. Also pictured are the included USB cable, PS/2 adapter, and keycap puller.

3. SETUP INSTRUCTIONS

3.1 Connecting the Keyboard

1. Locate the USB port on your computer.
2. Connect the provided USB cable to the keyboard's USB port.
3. Plug the other end of the USB cable into an available USB port on your computer.
4. For PS/2 connection (if desired and supported by your computer), attach the PS/2 adapter to the USB cable before connecting to the computer's PS/2 port. Note that PS/2 connection may require a system reboot for proper detection.

The keyboard is plug-and-play and should be automatically recognized by your operating system (Windows 10/8/7/VISTA/XP).

3.2 Adjusting Keyboard Height

The keyboard features adjustable feet on the underside, allowing you to set your preferred typing angle. Gently flip out the feet to raise the keyboard. There are two stages of adjustment for ergonomic comfort.



Close-up images of the keyboard's adjustable feet, demonstrating the two-stage height adjustment and non-slip rubber pads for stable positioning.

4. OPERATING INSTRUCTIONS

4.1 Basic Key Functions

The FC 750R PD features a standard 87-key tenkeyless layout. All keys function as labeled. The keyboard utilizes CHERRY MX mechanical switches for a consistent and tactile typing experience.




Detailed view of the keyboard with some keycaps removed, showing the underlying CHERRY MX switch stems and the double-shot PBT

keycap construction.

4.2 LED Indicators

The keyboard includes blue LED indicators for:

- **Caps Lock:** Illuminates when Caps Lock is active.
- **Scroll Lock:** Illuminates when Scroll Lock is active.

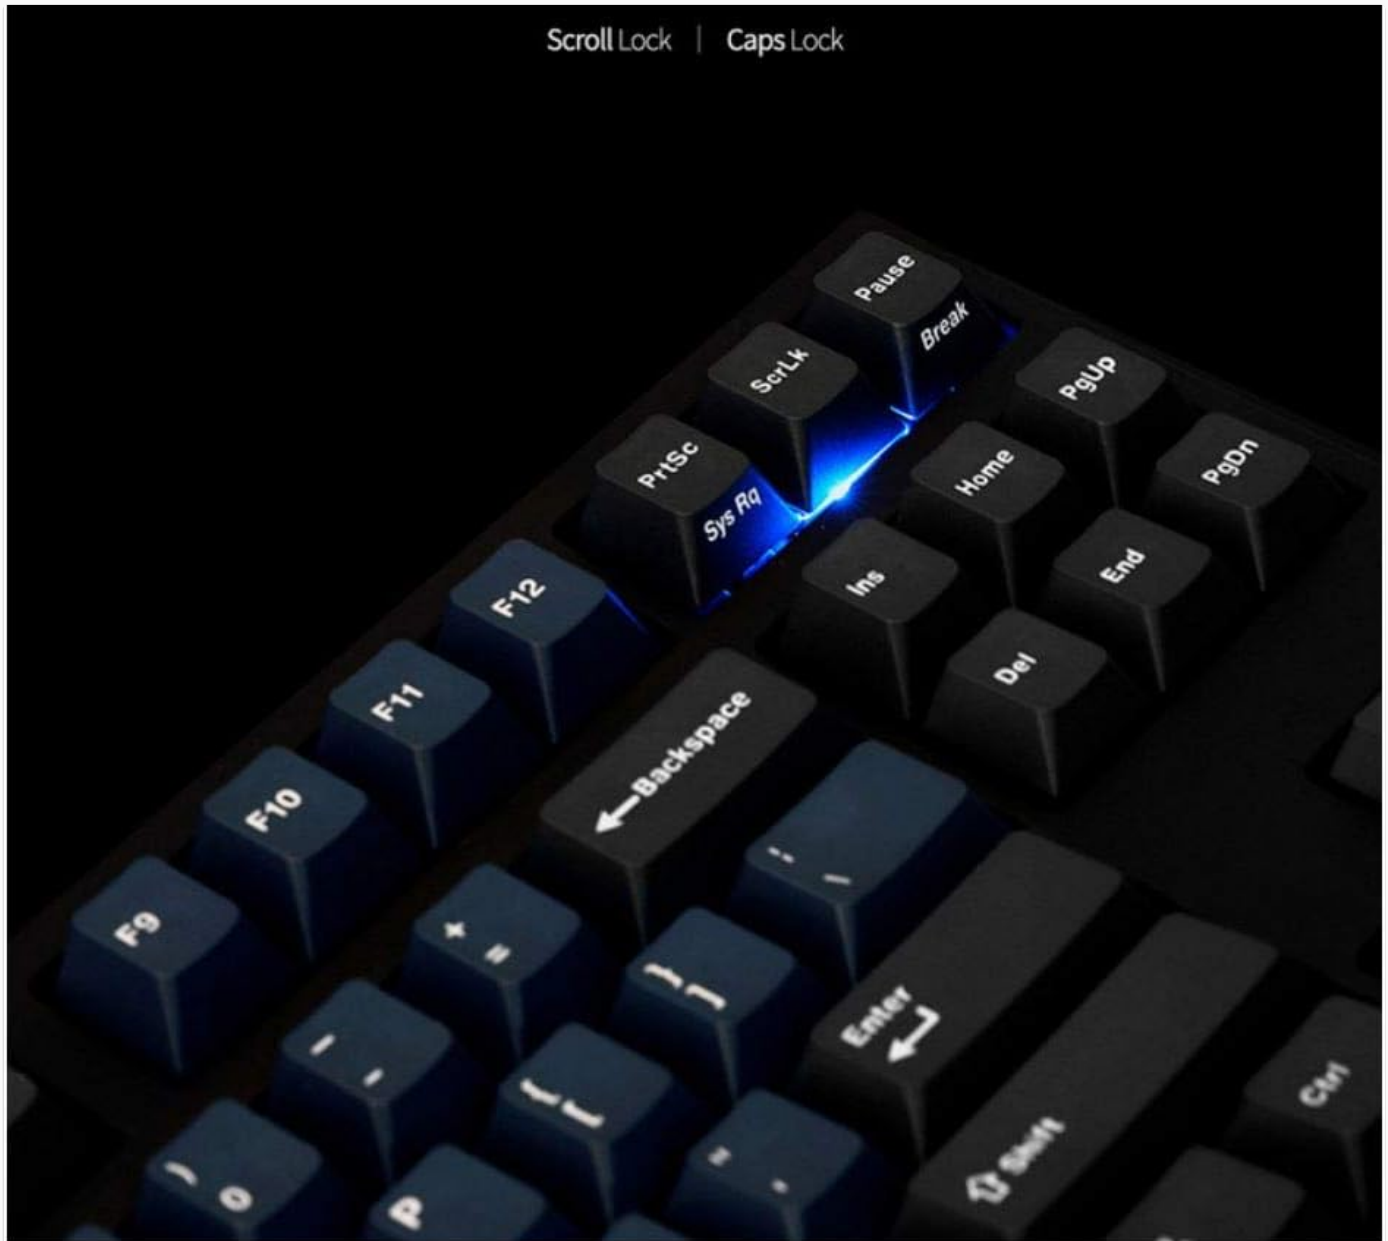

A close-up view of the blue LED indicators for Scroll Lock and Caps Lock, located above the numeric keypad area, providing visual feedback on keyboard status.

4.3 Cable Management

The underside of the keyboard features integrated cable routing channels. You can route the USB cable to exit from the left, center, or right side of the keyboard to maintain a tidy desk setup.

5. MAINTENANCE

5.1 Cleaning the Keyboard

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution to wipe the keycaps and casing. Avoid excessive moisture.
- For dust and debris between keycaps, use compressed air or the included keycap puller to carefully remove keycaps and clean the switch area.
- Ensure the keyboard is completely dry before reconnecting it to your computer.

5.2 Keycap Removal and Replacement

Use the provided keycap puller to gently remove keycaps. Hook the puller onto opposite sides of the keycap and pull straight up. When replacing, align the keycap with the switch stem and press down gently until it clicks into place.

6. TROUBLESHOOTING

If you encounter issues with your Leopold FC 750R PD keyboard, please refer to the following common solutions:

- **Keyboard not responding:**
 - Ensure the USB cable is securely connected to both the keyboard and the computer.
 - Try connecting the keyboard to a different USB port on your computer.
 - If using a USB hub, try connecting directly to the computer.
 - Restart your computer.
- **Specific keys not working:**
 - Check for any debris under the keycap. Carefully remove the keycap and clean the switch area.
 - Ensure the keycap is properly seated on the switch stem.
- **LED indicators not working:**
 - Verify that the corresponding function (Caps Lock, Scroll Lock) is active.
 - Reconnect the keyboard or restart your computer.


If the problem persists after attempting these steps, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model	FC 750R PD
Type of Switch	CHERRY MX (Brown Switch variant)
Number of Keys	87 Keys (Tenkeyless)
Keycaps	1.5mm PBT Double Shot
Key Pitch	19mm
PCB	FR-4 Dual Layer
Interface	USB & PS/2
Weight	1kg

Dimensions (L x W x H)	362 x 140 x 33mm (14.25 x 5.51 x 1.3 inches)
Compatible OS	Windows 10/8/7/VISTA/XP
Material	Polybutylene Terephthalate (Keycaps)
Special Feature	Ergonomic design, Sound Dampening

FC750R PD

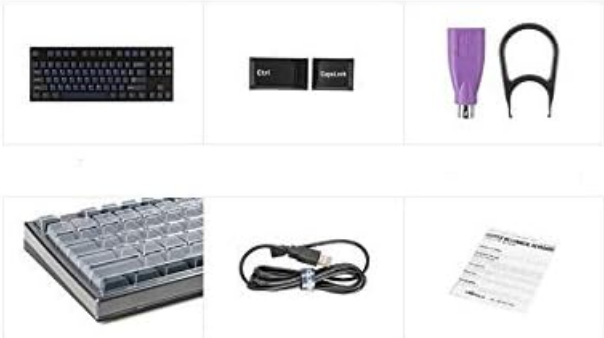

FC750R PD information

TYPE OF SWITCH	CHERRY MX	INTERFACE	USB & PS2
NUMBER OF KEYS	87 KEYS	WEIGHT	1Kg
KEY PITCH	19mm	DIMENSIONS	362(W)*140(D)*33(H)/mm
KEY STROKE	4 ±0.5mm	COMPATIBLE OS	WINDOWS 10 / 8 / 7 / VISTA / XP
PCB	FR4 DUAL LAYER		

A visual representation of the key specifications for the FC 750R PD keyboard, including switch type, number of keys, key pitch, key stroke, PCB type, interface, weight, dimensions, and compatible operating systems.

8. WARRANTY AND SUPPORT

Leopold products are manufactured to high-quality standards. For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Leopold website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question