

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [EAGLE PEAK](#) /

› EAGLE PEAK 13x13 Straight Leg Pop Up Canopy Tent Instant Outdoor Canopy Easy Single Person Set up Folding Shelter w/Auto Extending Eaves 169 Square Feet of Shade (Beige)

EAGLE PEAK E169EPT

EAGLE PEAK 13x13 Straight Leg Pop Up Canopy Tent Instruction Manual

Model: E169EPT | Brand: EAGLE PEAK

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your EAGLE PEAK 13x13 Straight Leg Pop Up Canopy Tent, an instant outdoor shelter designed for ease of use and extensive shade coverage.

INTRODUCTION

The EAGLE PEAK 13x13 Straight Leg Pop Up Canopy Tent is engineered for quick and easy outdoor shelter. Featuring the patented Peak Push system, this canopy allows for single-person setup in seconds, providing 169 square feet of shade. Its design includes a vented top for improved airflow and automatically extending eaves for maximum coverage. Constructed with durable, CPAI-84 certified, flame-resistant, water-resistant 150D oxford fabric with UPF 50+ UV sun protection, it sits on a sturdy powder-coated steel frame for rust resistance. The compact and portable design, complete with a wheeled carrying bag, makes it ideal for various outdoor activities.



Figure 1: EAGLE PEAK 13x13 Straight Leg Pop Up Canopy Tent and accessories.

SETUP INSTRUCTIONS

The EAGLE PEAK canopy is designed for a quick and easy setup, often achievable by one person. Follow these steps for proper assembly:

1. **Unpack the Canopy:** Remove the canopy frame and top from the wheeled carrying bag. Lay the folded frame on a flat, open surface.
2. **Partially Extend the Frame:** Gently pull the outer legs of the frame outwards to partially extend it. Do not fully extend yet.
3. **Attach the Canopy Top:** Drape the canopy fabric over the partially extended frame. Secure the corners of the fabric to the frame's corner points. Ensure the fabric is correctly oriented with the vented top aligned.
4. **Engage the Center Lock (Peak Push System):** From underneath the canopy, push the central hub upwards until it clicks into place. This patented Peak Push system locks the frame securely.
5. **Extend the Legs:** Extend each telescoping leg to your desired height by pressing the push-button sliders and pulling the inner leg section downwards until it locks into position. There are typically three height settings.
6. **Secure the Canopy:** For optimal stability, especially in windy conditions, utilize the included weight bags and stakes. Fill the weight bags with sand or other heavy material and attach them to the canopy legs. Use the stakes to anchor the legs to the ground.

1-PERSON SETUP **IN UNDER 1 MINUTE**



1 Push

+



1 Person

+



1 Minute

No Tools Required

STEP 01

Unfold the steel frame and attach the UV canopy top



STEP 02

Push the Center-Lock Hub upward until the frame clicks into place



STEP 03

Choose your height level using the push-button sliders



Figure 2: Step-by-step guide for single-person canopy setup.

UPF 50+ SUN PROTECTION CANOPY

STAY COOL & COVERED

Durable 150D Oxford Fabric with Reflective Silver Coating for Maximum UV Protection

UPF
50+

UVA
99%



Reflective Silver Coating



Color Fade-Resistant



Water-Resistant Fabric

Figure 3: Detail of the patented Peak Push center lock system.

Your browser does not support the video tag.

Video 1: Official setup demonstration for the EAGLE PEAK 13' x 13' Straight Leg Pop Up Canopy Tent. This video illustrates the unfolding of the frame, attachment of the canopy, and the use of the center lock mechanism for quick assembly.

OPERATING GUIDELINES

Once set up, your EAGLE PEAK canopy provides a comfortable and protected outdoor space. Consider the following operational aspects:

- **Shade Coverage:** The 13x13 ft straight-leg design offers a spacious 169 square feet of shade, comfortably accommodating 8 or more people. The auto-extending eaves provide additional coverage without manual adjustment.
- **Ventilation:** The dual-vented roof design allows for improved airflow, reducing heat buildup under the canopy and enhancing comfort on warm days.
- **UV Protection:** The 150D oxford fabric canopy top provides UPF 50+ UV sun protection, blocking harmful UV

rays.

- **Adjustable Height:** The telescoping 3-position steel frame allows you to adjust the canopy's height to suit your specific needs or environmental conditions.
- **Portability:** When not in use, the canopy folds down compactly and fits into the included 600x300D wheeled carrying bag, making transport and storage convenient.

SPACIOUS 13X13 FT POP-UP CANOPY TENT WITH 169 SQ. FT. OF SHADE

Straight-leg design offers maximum shade and headroom



Figure 4: Canopy dimensions and key features.



A *PATENTED* CANOPY CENTER LOCK

The Peak Push system, a patented canopy center lock, allows one or more people to easily open and close the canopy from the center without the hassle of locking and unlocking the canopy leg sliders. One simple, pinch-free push and you're ready to go!



Figure 5: Dual-vented roof for improved airflow.



Figure 6: Compact rolling carry bag for easy transport.

MAINTENANCE

Proper maintenance will extend the life of your EAGLE PEAK canopy. Follow these guidelines for care and storage:

- **Cleaning the Canopy Fabric:**

- Clean the fabric top with mild soap and water. Do not use harsh detergents or bleach, as this may damage the fabric or its protective coatings.
- Rinse thoroughly with clean water and allow the fabric to air dry completely before folding and storing to prevent mildew.

- **Frame Care:**

- Wipe down the steel frame with a damp cloth to remove dirt and debris.

- Inspect the frame for any signs of rust or damage. The frame is powder-coated for rust resistance, but prolonged exposure to moisture can still cause issues.
- Ensure all moving parts and connection hardware are clean and free of obstructions.

- **Storage:**

- Always ensure the canopy fabric and frame are completely dry before packing into the carrying bag.
- Store the canopy in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep the carrying bag clean and free of punctures to protect the canopy during storage and transport.

TROUBLESHOOTING

Here are solutions to common issues you might encounter with your canopy:

Problem	Possible Cause	Solution
Canopy is unstable or blows over easily.	Insufficient anchoring; strong winds.	Ensure all four weight bags are filled and attached to the legs. Use all included stakes to secure the legs to the ground. Do not use the canopy in severe weather conditions, including strong winds, heavy rain, or thunderstorms.
Frame is difficult to open or close.	Frame components are not aligned; dirt or debris in joints.	Ensure the frame is on a level surface. Check for any obstructions in the joints or sliding mechanisms. Gently wiggle the frame to help align components. Apply a silicone-based lubricant to moving parts if necessary.
Water pooling on the canopy top.	Improper tensioning of the fabric; heavy rainfall.	Ensure the canopy fabric is taut and evenly distributed over the frame. Adjust leg heights if possible to create a slight slope for water runoff. The vented top helps with drainage, but heavy rain may still cause pooling.
Fabric tearing at stress points.	Excessive force during setup/takedown; prolonged exposure to elements.	Handle the canopy fabric carefully during setup and takedown. Avoid dragging the fabric on rough surfaces. Store the canopy properly when not in use to protect it from harsh weather.

Safety Note: This portable freestanding shelter is designed for outdoor use and features flame-resistant, water-resistant, and UV-protective materials. To ensure safe use, follow all instructions provided for setup, use, and dismantling. Be aware of potential hazards such as wind exposure, fire risk, and sun exposure. Always anchor the shelter according to the manufacturer's instructions, and never exceed the recommended capacity. Consult the product manual for detailed safety information.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	EAGLE PEAK
Model Number	E169EPT
Product Dimensions	155.9"L x 155.9"W x 118.1"H
Floor Area	169 Square Feet
Material	Polyester, Alloy Steel
Frame Material	Alloy Steel
Item Weight	39.9 Pounds
Water Resistance Level	Water Resistant
UV Protection	Yes (UPF 50+)
Occupancy	8 or more people
Color	Beige
Assembly Required	No (Pop up design)
UPC	688397976735

WARRANTY AND SUPPORT

EAGLE PEAK Promise: EAGLE PEAK offers a 1-year limited after-sale protection from the original date of purchase. This warranty covers the frame, canopies, and bags. For any questions or issues, please contact our professional service team.

For further assistance, please visit the official EAGLE PEAK website or refer to the contact information provided with your product packaging.