

DE'LONGHI ECAM 356.57.B

De'Longhi Dinamica ECAM 356.57.B Automatic Espresso Machine User Manual

Model: ECAM 356.57.B

1. INTRODUCTION

Thank you for choosing the De'Longhi Dinamica ECAM 356.57.B Automatic Espresso Machine. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read all instructions carefully before operating the machine and retain this manual for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the machine is unplugged before cleaning or maintenance.
- Do not immerse the machine, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Avoid contact with hot surfaces and steam. Use handles or knobs.
- Do not operate the machine with a damaged cord or plug. Contact authorized service personnel.
- Use only cold, fresh water in the water tank.
- This appliance is intended for household use only.

3. PRODUCT OVERVIEW

The De'Longhi Dinamica ECAM 356.57.B is a fully automatic espresso machine designed to deliver a variety of coffee beverages with ease. Familiarize yourself with its main components for optimal use.



Figure 3.1: Front view of the De'Longhi Dinamica ECAM 356.57.B espresso machine, showcasing its sleek design and accessible components.

Key Components:

- **Control Panel:** Intuitive display and buttons for beverage selection and settings.
- **Bean Hopper:** For whole coffee beans.
- **Water Tank:** Removable tank for fresh water.
- **Milk Carafe:** Detachable container for milk, used for milk-based beverages.
- **Coffee Spouts:** Adjustable height for various cup sizes.
- **Drip Tray:** Collects excess water and coffee drips.
- **Ground Coffee Chute:** For pre-ground coffee.
- **Brewing Unit:** The heart of the machine, where coffee is brewed.

4. SETUP

Follow these steps for the initial setup of your espresso machine.

4.1 Unpacking

1. Remove all packaging materials from the machine and its accessories.
2. Place the machine on a stable, flat surface, away from water splashes and heat sources.

4.2 First Use Preparation

1. **Fill the Water Tank:** Remove the water tank, rinse it, and fill it with fresh, cold water up to the MAX level. Reinsert the tank securely.

2. **Fill the Bean Hopper:** Open the lid of the bean hopper and pour fresh coffee beans into it. Do not use ground coffee, instant coffee, or caramelized beans.
3. **Plug In:** Insert the power plug into a suitable wall socket.
4. **Turn On:** Press the ON/OFF button. The machine will perform an automatic rinse cycle. Place a container under the coffee spouts to collect the water.

5. OPERATING THE MACHINE

Your De'Longhi Dinamica ECAM 356.57.B offers a variety of customizable coffee beverages. This section guides you through making your favorite drinks.



Figure 5.1: A hand selecting a beverage from the intuitive control panel of the De'Longhi Dinamica ECAM 356.57.B.

5.1 Making Coffee (e.g., Espresso, Coffee)

1. Ensure the water tank is filled and the bean hopper contains coffee beans.
2. Place one or two cups under the coffee spouts.
3. Select your desired beverage from the control panel (e.g., Espresso, Coffee).
4. The machine will automatically grind the beans, brew, and dispense the coffee.
5. You can adjust the coffee strength and quantity before brewing, if desired, using the on-screen options.

5.2 Making Milk-Based Beverages (e.g., Cappuccino, Latte Macchiato)

1. Fill the milk carafe with fresh, cold milk.
2. Attach the milk carafe to the machine's frother spout.
3. Place a suitable cup under the coffee and milk spouts.
4. Select your desired milk-based beverage (e.g., Cappuccino, Latte Macchiato).
5. The machine will automatically froth the milk and dispense it, followed by the coffee.



Figure 5.2: The De'Longhi Dinamica ECAM 356.57.B dispensing a milk-based beverage into a glass, demonstrating its automatic frothing capability.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and optimal performance of your espresso machine.

6.1 Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray and grounds container daily.
- **Milk Carafe:** After each use, perform the automatic cleaning cycle for the milk carafe. Disassemble and wash all components of the carafe regularly.
- **Coffee Spouts:** Wipe the coffee spouts with a damp cloth.

6.2 Weekly Cleaning

- **Brewing Unit:** The brewing unit should be removed and rinsed under running water at least once a week. Allow it to air dry before reinserting.



Figure 6.1: A hand rinsing the removable brewing unit under running water, a crucial step for weekly maintenance.

6.3 Descaling

The machine will prompt you when descaling is required. Use only De'Longhi descaling solution and follow the instructions provided with the descaler or on the machine's display.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your espresso machine.

Problem	Possible Cause	Solution
No coffee dispensed	Water tank empty; brewing unit clogged; machine needs descaling.	Fill water tank; clean brewing unit; perform descaling cycle.
Coffee is too weak/strong	Grind setting incorrect; coffee quantity setting incorrect.	Adjust grind setting (finer for stronger, coarser for weaker); adjust coffee strength setting on display.
Milk not frothing properly	Milk carafe dirty; milk type unsuitable; milk too warm.	Clean milk carafe thoroughly; use cold, fresh, semi-skimmed or skimmed milk; ensure milk is cold.
Machine displays 'Descaling required'	Mineral buildup in the machine.	Perform a descaling cycle as instructed in the manual or on the display.

8. SPECIFICATIONS

Here are the technical specifications for the De'Longhi Dinamica ECAM 356.57.B.

- **Model Name:** ECAM 356.57.B
- **Brand:** De'Longhi
- **Type:** Automatic Espresso Machine
- **Color:** Black
- **Power:** 1450 Watts
- **Voltage:** 220 Volts
- **Dimensions (D x W x H):** 51D x 51B x 31H centimeters
- **Weight:** 9.5 Kilograms
- **Coffee Input Type:** Whole Bean, Ground Coffee
- **Special Features:** Milk Frother
- **GTIN:** 08004399334762

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your selling partner. The provided product data indicates that warranty details are to be filled by the selling partner. For technical support, spare parts, or service, please visit the official De'Longhi website or contact their customer service in your region. Always provide your machine's model number (ECAM 356.57.B) and serial

number when seeking assistance.

© 2023 De'Longhi. All rights reserved.