

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Girmi](#) /
- > [Girmi FM04 Combined Microwave Oven User Manual](#)

## Girmi FM0401

# Girmi FM04 Combined Microwave Oven

User Manual

Model: FM0401 | Brand: Girmi

## 1. INTRODUCTION

Thank you for choosing the Girmi FM04 Combined Microwave Oven. This appliance is designed for convenient and efficient cooking, reheating, and defrosting. It features a 20-liter capacity, 700W microwave power, and an 800W grill function, offering three cooking modes: microwave, grill, and combined. Please read this manual thoroughly before operating the appliance to ensure safe and optimal use.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not operate the oven if the door is open or damaged, as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not attempt to adjust, repair, or modify the oven yourself. Only qualified service personnel should perform servicing.
- Ensure the appliance is placed on a stable, level surface, away from heat sources and water.
- Always use microwave-safe cookware. Metal containers or dishes with metallic trim are not suitable for microwave cooking.
- Supervise children closely when the appliance is in use.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Regularly clean the oven cavity, door, and seals to prevent food residue buildup.

## 3. PRODUCT COMPONENTS

The Girmi FM04 microwave oven comes with the following main components and accessories:

- Microwave Oven Unit
- Glass Turntable (Diameter: 24.5 cm)
- Turntable Ring with Rollers
- Grill Rack
- User Manual and Warranty Information



**Figure 3.1:** Front view of the Girmi FM04 Combined Microwave Oven. This image shows the overall design of the appliance, including the door, control panel, and ventilation.



**Figure 3.2:** Interior view of the microwave oven, showing the removable glass turntable and turntable ring. This setup ensures even heating of food.



**Figure 3.3:** Interior view demonstrating the placement of the grill rack on top of the glass turntable. The grill rack is used for grilling functions.

## 4. SETUP

---

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check for any damage during transit.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation space: at least 20 cm of space above the oven, 10 cm at the rear, and 5 cm on each side.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (230 Volts).
4. **Turntable Assembly:** Place the turntable ring in the center of the oven cavity. Then, place the glass turntable securely on top of the turntable ring. Ensure it rotates freely.
5. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth.

## 5. OPERATING INSTRUCTIONS

---

The Girmi FM04 features two control dials: a Time dial and a Power/Mode dial.



**Figure 5.1:** The Time dial, used to set cooking duration up to 30 minutes.



**Figure 5.2:** The Power/Mode dial, selecting microwave power levels, grill, combined modes, or defrost.

## 5.1. Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the **Power/Mode dial** to the desired microwave power level. The symbols indicate:
  - One drop: Low power
  - Two drops: Medium power
  - Three drops: High power (700W)
4. Turn the **Time dial** to set the desired cooking time (up to 30 minutes). The oven will start automatically.
5. When the set time expires, an audible signal will sound, and the oven will stop.

## 5.2. Grill Cooking

1. Place food on the grill rack, which should be placed on the glass turntable.
2. Close the oven door securely.
3. Turn the **Power/Mode dial** to the grill symbol (800W).
4. Turn the **Time dial** to set the desired grilling time.
5. For best results, turn food halfway through the grilling process.

## 5.3. Combined Cooking

Combined cooking modes utilize both microwave and grill functions for faster cooking and browning.

1. Place food on the grill rack.
2. Close the oven door securely.
3. Turn the **Power/Mode dial** to one of the combined settings (C1, C2, or C3). These settings offer different ratios of microwave to grill power.
4. Turn the **Time dial** to set the desired cooking time.

## 5.4. Defrost Function

1. Place frozen food directly on the glass turntable.

2. Close the oven door securely.
3. Turn the **Power/Mode dial** to the defrost symbol (snowflake).
4. Turn the **Time dial** to set the desired defrosting time. The defrost time will vary based on the type and weight of the food.
5. Check food periodically and turn it over if necessary to ensure even defrosting.

## 6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool down.
- **Interior Cleaning:** Wipe the inside of the oven with a damp cloth after each use. For stubborn stains, use a mild detergent or a microwave-safe cleaner. Do not use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Door and Seals:** Regularly clean the door, door seals, and adjacent parts with a damp cloth to remove any spills or splatters.
- **Glass Turntable and Ring:** The glass turntable and turntable ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Grill Rack:** Wash the grill rack in warm soapy water.

## 7. TROUBLESHOOTING

If you encounter issues with your Girmi FM04 microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Time dial not set.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse/circuit breaker; Set the Time dial.
Food not heating	Incorrect power level selected; Cooking time too short; Non-microwave-safe dish used.	Select a higher power level; Increase cooking time; Use microwave-safe cookware.
Turntable not rotating	Turntable not correctly placed; Obstruction under turntable.	Ensure turntable and ring are correctly positioned; Remove any obstructions.
Excessive noise during operation	Turntable or accessories rattling; Food container touching oven walls.	Adjust turntable/accessories; Ensure food container is centered and not touching walls.
Smoke or sparks inside oven	Metal objects inside; Food residue buildup; Damaged oven interior.	Immediately turn off and unplug the oven. Remove any metal objects. Clean the interior thoroughly. If damage is visible, contact service.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Girmi
Model Number	FM0401
Capacity	20 Liters
Microwave Power	700 Watts
Grill Power	800 Watts
Input Power	1150 Watts
Voltage	230 Volts
Cooking Modes	Microwave, Grill, Combined (C1, C2, C3)
Special Features	Defrost Function, 30-minute Timer with audible signal, Interior Lamp
Exterior Dimensions (L x D x H)	45.5 x 35 x 25.5 cm
Weight	10.7 Kilograms
Material	Metal
Interior Coating	Glass
Installation Type	Countertop
Included Components	Microwave, Grill Rack, Glass Turntable, Turntable Ring, Manual

## 9. WARRANTY AND SUPPORT

This Girmi FM04 Combined Microwave Oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or warranty claims, please contact Girmi customer support or the retailer from whom you purchased the product. Keep your proof of purchase for warranty validation.