

TIZO HA158CL46

Tizo Design Vertical 4x6 Lucite Picture Frame User Manual

Model: HA158CL46

INTRODUCTION

Thank you for choosing the Tizo Design Vertical 4x6 Lucite Picture Frame. This manual provides essential information for the proper setup, operation, and maintenance of your new picture frame. Designed with durable 1-inch thick clear lucite and magnetic closures, this frame offers an elegant and practical way to display your cherished memories.



Image: Front view of the Tizo Design 4x6 Lucite Picture Frame, showcasing its clear lucite construction and minimalist design.

SAFETY INFORMATION

- Handle with care to avoid dropping, which may cause damage to the lucite.
- Keep out of reach of small children to prevent accidental injury or damage to the frame.

- Avoid exposing the frame to extreme temperatures or direct sunlight for prolonged periods, as this may affect the lucite material.
- Do not use abrasive cleaners or materials on the lucite, as they can scratch the surface.

PARTS LIST

Your Tizo Design Lucite Picture Frame consists of the following components:

- **Front Lucite Panel:** The main clear panel that covers your photo.
- **Back Lucite Panel with Easel:** The rear clear panel featuring an integrated white lucite easel for tabletop display.
- **Magnetic Closures:** Embedded magnets at the bottom of the frame that secure the front and back panels together.



Image: Rear view of the Tizo Design Lucite Picture Frame, showing the integrated easel stand for vertical tabletop display.

Follow these steps to set up your Tizo Design Lucite Picture Frame:

1. **Prepare Your Photo:** Ensure your photo is sized 4 inches by 6 inches (10 cm x 15 cm) for optimal fit.
2. **Separate Panels:** Gently pull the front lucite panel away from the back lucite panel. The magnetic closures at the bottom will release with a slight pull.
3. **Insert Photo:** Carefully slide your 4x6 inch photo between the two lucite panels. Ensure the photo is centered and aligned as desired.
4. **Re-attach Panels:** Align the front panel with the back panel, ensuring the bottom edges meet. The magnetic closures will snap the panels securely together.
5. **Position Frame:** Place the frame on a flat, stable surface using the integrated easel back. The frame is designed to stand vertically.

Tizo | Home & Office Décor

Keep your fondest memories
on display & brighten up any space



Image: A Tizo Design Lucite Picture Frame displaying a black and white photo of a couple, placed on a white desk next to a small plant, illustrating its use in home or office decor.

OPERATING

The Tizo Design Lucite Picture Frame is designed for simple operation:

- **Changing Photos:** To change the photo, simply repeat the "Separate Panels" and "Insert Photo" steps from the Setup section. The magnetic closures allow for easy and frequent photo changes without damaging the frame.
- **Display Orientation:** This specific model is designed for vertical display only due to its easel back configuration.

MAINTENANCE

To keep your Tizo Design Lucite Picture Frame in pristine condition, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth (such as a microfiber cloth) to gently wipe the lucite surfaces. For smudges or fingerprints, dampen the cloth slightly with water or a mild, non-abrasive acrylic cleaner.
- **Avoid Chemicals:** Do not use ammonia-based cleaners (like window cleaner), abrasive cleaners, or solvents (such as alcohol, acetone, or paint thinner) as these can damage the lucite and cause hazing or cracking.
- **Dusting:** Regularly dust the frame with a dry, soft cloth to prevent dust buildup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame panels do not close securely.	Photo is not properly aligned or an obstruction is present.	Ensure the photo is flat and correctly positioned between the panels. Check for any debris near the magnetic closures.
Frame appears scratched or hazy.	Improper cleaning agents or abrasive materials used.	Refer to the Maintenance section for proper cleaning instructions. Minor scratches may be buffed out with specialized acrylic polish (not included).
Frame is unstable on surface.	Uneven surface or easel not fully extended.	Place the frame on a flat, stable surface. Ensure the easel back is fully extended and locked into its display position.

SPECIFICATIONS

- Brand:** TIZO
- Model:** HA158CL46
- Color:** Clear
- Product Dimensions:** 6.25"L x 4"W (for 4x6 inch photos)
- Frame Material:** Acrylic (Lucite)
- Frame Type:** Floater Frame with Easel Back
- Orientation:** Vertical
- Item Weight:** Approximately 1 pound (16 ounces)
- Special Feature:** Magnetic Closures, 1-inch thick lucite

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or to purchase replacement parts, please visit the official TIZO website or contact their customer service department. Details can typically be found on the product packaging or the brand's online store page.

TIZO Store Link: [Visit the TIZO Store on Amazon](#)

© 2025 TIZO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question