

Travelwey B08BHLPR7V

Travelwey Digital Alarm Clock User Manual

Model: B08BHLPR7V

1. INTRODUCTION

Thank you for choosing the Travelwey Digital Alarm Clock. This clock is engineered for straightforward operation, making it ideal for users of all ages, including children and seniors. Its design focuses on essential functions without unnecessary complexities, ensuring a reliable and user-friendly experience.

Key features include a large, easy-to-read display, adjustable brightness, a convenient night light, and a robust alarm system with a snooze function. The clock operates on AC power and includes a battery backup to maintain settings during power interruptions.



Figure 1: Front view of the Travelwey Digital Alarm Clock.

2. PRODUCT FEATURES

The Travelway Digital Alarm Clock is designed with user convenience in mind, incorporating several practical features:

- **Extremely Simple Operation:** Designed for ease of use, requiring minimal effort to set and operate.
- **Night Light:** A larger-than-average night light, activated by a simple press of the top button, provides illumination.
- **Loud Alarm and Snooze:** Features an alarm with adjustable volume (Low or High) that sounds for 5 minutes. A 9-minute snooze can be repeatedly pressed.
- **Jumbo Illuminated Digits with Dimmable Slider:** Clear, extra-bright digits with a dimmer slider for personalized brightness levels, ensuring comfort at night.
- **AC Electric Powered with Battery Backup:** Operates via power cord with two AAA batteries (not included) for backup during power outages, retaining time and alarm settings.
- **12 and 24 Hour Formats:** Supports both 12-hour and 24-hour time display options.

OUR CUSTOMERS SPOKE, WE LISTENED...



Our new LED Alarm Clock, Version 4.0, incorporates significant improvements over our original version, including:

- | | | |
|---|---|--|
| ■ DIMMER SLIDER
replaces high/low switch and now allows 0-100% brightness level | ■ BATTERY BACKUP DURATION
during an outage increased to several weeks | ■ ALARM SHUT-OFF
(but remain set for the next day) implemented |
| ■ JEWEL FREQUENCY PRECISION
replaces grid frequency, highly accurate | ■ RUBBER FEET
prevents slippage | ■ ON DEMAND TIME DISPLAY
during an outage implemented |
| ■ AAA BATTERIES
replace 9V battery, more convenient | ■ RED ALARM ON/OFF BUTTON
replaces black slider, far easier to set | ■ "PM" AND "BELL" ICONS
replace red dots, easier to see when the alarm is ON |
| ■ 5 MINUTE ALARM SHUT OFF,
previously none | ■ ALARM and TIME SET
buttons changed places, more user friendly | |
| ■ 12 AND 24 HOUR FORMATS | | |

All in all, you now have a *SIMPLE, BASIC, EASY TO USE, ALARM CLOCK.*



Figure 2: Overview of improved features based on customer feedback.

		90% OF OTHER MODELS
VARIABLE DIMMER NIGHT LIGHT BATTERY BACK UP ULTRA SIMPLE CONTROLS (Suitable for all ages) 12 & 24HR FORMAT	✓ ✓ ✓ ✓ ✓	✗ ✗ ✗ ✗ ✗

Figure 3: Feature comparison highlighting Travelway's advantages.

3. SETUP

3.1 Power Connection

To power your Travelway Digital Alarm Clock, simply plug the provided power cord into a standard AC electrical outlet. The clock display will illuminate, indicating it is receiving power.

3.2 Battery Backup Installation

For uninterrupted operation during power outages, install two AAA batteries (not included) into the battery compartment located on the back of the clock. This backup ensures that time and alarm settings are retained, and the alarm will still sound even if the main power is lost (the display will go blank to conserve battery life).



Figure 4: Rear view of the clock, showing power input and battery compartment.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time

1. Locate the **TIME SET** button on the back of the clock.
2. Press and hold the **TIME SET** button.
3. While holding **TIME SET**, use the large **HOUR** and **MINUTE** buttons (located on either side of the snooze button on the top) to adjust the time.
4. A small red dot on the display will indicate PM hours in 12-hour format.
5. Release the **TIME SET** button to save the current time.

4.2 Setting the Alarm

1. Locate the **ALARM SET** button on the back of the clock.
2. Press and hold the **ALARM SET** button.
3. While holding **ALARM SET**, use the large **HOUR** and **MINUTE** buttons to set your desired alarm time.
4. Release the **ALARM SET** button to save the alarm time.
5. To activate or deactivate the alarm, use the red **ALARM ON/OFF** switch on the back of the clock. A small red dot

(bell icon) on the display indicates when the alarm is active.

4.3 Snooze Function

When the alarm sounds, press the large **SNOOZE/LIGHT** button on the top of the clock. This will temporarily silence the alarm for 9 minutes. You can press the snooze button repeatedly until the alarm is manually switched off using the **ALARM ON/OFF** switch.

4.4 Adjusting Display Brightness

The clock features a dimmer slider on the back to adjust the brightness of the LED display. Slide the **DISPLAY DIMMER** switch to your preferred level, from very bright to completely off, to suit your comfort, especially at night.

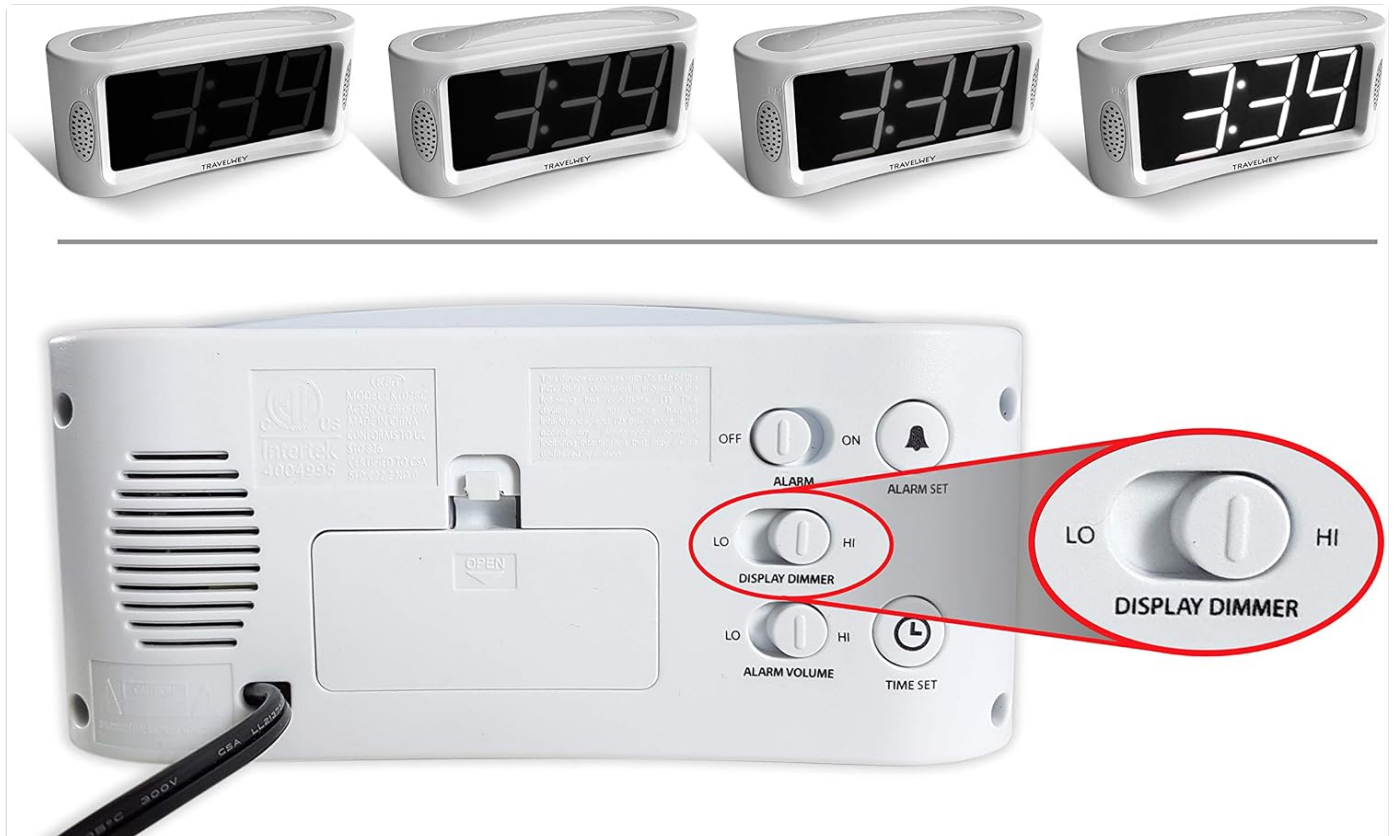


Figure 5: Location of the Display Dimmer slider.

4.5 Using the Night Light

To activate the built-in night light, simply press the large **SNOOZE/LIGHT** button on the top of the clock. Press it again to turn the night light off. This feature is useful for quick illumination in a dark room without needing to turn on main lights.



12 & 24hr OPTION



Figure 6: Night light in operation.

4.6 12/24 Hour Format Option

The clock supports both 12-hour and 24-hour time display formats. To switch between formats, locate the corresponding switch or button on the back of the clock (refer to Figure 4 for general control layout). In 12-hour format, a 'PM' indicator will appear for afternoon hours.



Figure 7: 12-hour vs. 24-hour display options.

4.7 Alarm Volume Control

Adjust the alarm volume using the **ALARM VOLUME** switch on the back of the clock. You can select between Low and High settings to ensure the alarm is at a suitable level for you.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Travelwey Digital Alarm Clock, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the clock with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or strong chemicals, as these can damage the surface and display.
- **Battery Replacement:** If the clock is used with battery backup, replace the two AAA batteries periodically (e.g., once a year) or if you notice the time not being retained during power interruptions. Ensure correct polarity when inserting new batteries.
- **Placement:** Place the clock on a stable, flat surface away from direct sunlight, excessive heat, or moisture.

6. TROUBLESHOOTING GUIDE

If you encounter any issues with your Travelway Digital Alarm Clock, please refer to the following table for common problems and their solutions:

Problem	Possible Cause	Solution
Display is blank during a power outage.	Battery backup is active, display turns off to conserve power.	This is normal operation. Time and alarm settings are retained, and the alarm will still sound.
Alarm display is too bright or too dim.	Display brightness setting needs adjustment.	Use the DISPLAY DIMMER slider on the back of the clock to adjust brightness to your preference.
Alarm volume is too loud or too quiet.	Alarm volume setting needs adjustment.	Use the ALARM VOLUME switch on the back of the clock to select Low or High volume.
Time or alarm settings are not retained after unplugging.	No battery backup installed or batteries are depleted.	Install two fresh AAA batteries in the battery compartment for backup functionality.

7. PRODUCT SPECIFICATIONS

Specification	Detail
Brand	Travelway
Model	B08BHLPR7V
Color	White
Display Type	Digital LED
Special Feature	Dimmable Display, Night Light, Snooze
Power Source	Corded Electric, Battery Powered (2x AAA for backup)
Dimensions	6.5 x 2.01 x 2.76 inches
Item Weight	8.8 ounces
Frame Material	Acrylonitrile Butadiene Styrene

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Travelway products are manufactured with quality and reliability in mind. For specific warranty details regarding your Digital Alarm Clock, please refer to the documentation included with your purchase or visit the official Travelway website. Please retain your proof of purchase for any warranty claims.

8.2 Customer Support

If you require further assistance, have questions not covered in this manual, or need technical support, please contact Travelway customer service. Contact information can typically be found on the product packaging or on the Travelway brand's official online presence.

© 2024 Travelway. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question