

ALLIMITY WXZY-IRC802N-03-ACEF

ALLIMITY Replacement Remote Control Instruction Manual

For TCL Thomson 4K TV Models: IRC802N, RC802N, WXZY-IRC802N-03-ACEF

INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY replacement remote control, designed for various TCL Thomson 4K TV models. This remote offers direct functionality without complex setup procedures. Please read this manual carefully to ensure proper use and to maximize your viewing experience.

SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted batteries promptly.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.
- Keep batteries out of reach of children.

SETUP

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

**Note:** This remote control is designed for immediate use with compatible TCL Thomson 4K TVs and typically requires no programming or pairing. Rechargeable batteries may not be compatible or provide optimal performance.

OPERATING INSTRUCTIONS

Point the remote control directly at your television's infrared receiver. Ensure there are no obstructions between the remote and the TV.



Figure 1: Overview of the ALLIMITY Replacement Remote Control.

## Button Functions

- **Power Button:** (Red button at top right) Turns the TV on or off.

- **Mute Button:** (Speaker with cross icon) Mutes or unmutes the TV sound.
- **Number Pad (0-9):** Directly select channels.
- **PRE-CH:** Returns to the previously viewed channel.
- **LIST:** Displays the channel list.
- **Volume Up/Down (+/-):** Adjusts the volume level.
- **Channel Up/Down (P▲/P▼):** Changes the TV channel.
- **Settings Button:** (Gear icon) Accesses the TV's settings menu.
- **Home Button:** (House icon) Returns to the TV's home screen or smart TV interface.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **Back/Return Button:** (Curved arrow icon) Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **GUIDE:** Displays the electronic program guide (EPG).
- **TEXT:** Accesses Teletext services.
- **SUBT (Subtitles):** Toggles subtitles on or off.
- **LANG (Language):** Changes the audio language.
- **Info Button (i):** Displays information about the current program or content.
- **Content Rating Button (18+):** May be used for parental control or content rating information.
- **Media Control Buttons (Rewind ◀◀, Play/Pause ▶, Fast Forward ▶▶, Stop ■):** Controls media playback.
- **ZOOM:** Adjusts the screen zoom level.
- **NETFLIX:** Direct access button for the Netflix application.

## TROUBLESHOOTING

| Problem                                                  | Possible Cause                                                                   | Solution                                                                                                                                                     |
|----------------------------------------------------------|----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote control not working.                              | Dead or incorrectly inserted batteries.                                          | Replace batteries with new alkaline batteries, ensuring correct polarity (+/-).                                                                              |
| Remote control has short range or intermittent response. | Weak batteries; obstruction between remote and TV; remote not pointed correctly. | Replace batteries. Ensure a clear line of sight to the TV's IR receiver. Point the remote directly at the TV.                                                |
| Specific buttons do not function as expected.            | Compatibility issue with specific TV model features; remote malfunction.         | Verify your TV model is listed as compatible. Some advanced smart TV functions may require the original remote. If issues persist, contact customer support. |

## SPECIFICATIONS

**Brand:** ALLIMITY

**Model Number:** WXZY-IRC802N-03-ACEF (also known as IRC802N, RC802N)

**Compatible Devices:** TCL Thomson 4K TV models including U43P6006, U43P6016, U43P6036, U43P6046, U49P6006, U49P6016, U49P6036, U49P6046, U50P6016, U50P6046, U55P6006, U55P6016, U55P6036, U55P6046, U55P6096, U60P6026, U60P6036, U60P6046, U65P6006, U65P6016, U65P6036, U65P6046, U65P6096.

**Connectivity Technology:** Infrared (IR)

**Battery Type:** 2 x AAA Alkaline batteries (not included)

**Maximum Range:** Approximately 10 meters (33 feet)

**Special Features:** Ergonomic design, direct access Netflix button.

**Product Dimensions:** 12 x 7.7 x 0.3 cm (approximately 4.7 x 3.0 x 0.1 inches)

**Weight:** 300 g (approximately 10.6 oz)

## WARRANTY AND SUPPORT

Specific warranty details for this replacement remote control are not provided in the product information. For warranty claims, technical support, or further assistance, please contact the seller or manufacturer directly through your purchase platform.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08BHX9X5V>

More documents and user manuals: <https://manuals.plus/>