

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Oakcastle](#) /

› [Oakcastle MP100 Mini Portable MP3 Player User Manual](#)

Oakcastle MP100

Oakcastle MP100 Mini Portable MP3 Player User Manual

Model: MP100

1. INTRODUCTION

Thank you for choosing the Oakcastle MP100 Mini Portable MP3 Player. This device is designed to provide a compact and versatile audio experience, featuring Bluetooth connectivity, FM radio, and expandable storage. Please read this manual carefully to ensure proper use and maintenance of your MP3 player.

2. PACKAGE CONTENTS

The Oakcastle MP100 package includes the following items:

- Oakcastle MP3 Player
- Wired Earphones
- USB Charging Cable
- Instruction Guide



Image: Contents of the Oakcastle MP100 MP3 Player package, showing the player, wired earphones, USB charging cable, and the instruction manual.

3. PRODUCT OVERVIEW

The Oakcastle MP100 is a lightweight and compact MP3 player designed for portability. It features a clear display, intuitive controls, and a durable water-resistant silicone case with a sports clip.



Image: Front view of the Oakcastle MP100 MP3 Player, highlighting its compact size, screen interface, and control buttons.



Image: Rear view of the Oakcastle MP100 MP3 Player, displaying its model number (MP100), input/output specifications, and physical dimensions (5.8cm height, 3.6cm width).

4. SETUP

4.1 Charging the Device

Before first use, fully charge your MP3 player. Connect the supplied USB cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge typically takes a few hours.

4.2 Transferring Music Files

1. Connect the MP3 player to your computer using the USB cable.
2. The player will appear as a removable disk drive on your computer.
3. Drag and drop your desired music files (MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, SCELPE) into the player's internal storage or an inserted Micro SD card.
4. Safely eject the device from your computer before disconnecting the USB cable.

4.3 Inserting a Micro SD Card

The MP100 supports Micro SD cards up to 128GB for expanded storage. Locate the Micro SD card slot on the side of the player. Gently insert the card until it clicks into place. To remove, push the card in slightly until it springs out.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To power on, press and hold the power button until the screen illuminates. To power off, press and hold the power button until the device shuts down.

5.2 Basic Music Playback

- **Play/Pause:** Press the central play/pause button.
- **Next/Previous Track:** Use the forward/backward buttons.
- **Volume Control:** Use the '+' and '-' buttons to adjust the volume.

5.3 Bluetooth Pairing

The MP100 features Bluetooth 4.0 for wireless audio. To pair with Bluetooth headphones or speakers:

1. Ensure your Bluetooth audio device is in pairing mode.
2. On the MP100, navigate to the Bluetooth menu.
3. Select 'Search for devices' and choose your device from the list.
4. Once paired, audio will stream wirelessly.

OAKCASTLE



BLUETOOTH CONNECTIVITY



Image: The Oakcastle MP100 MP3 Player demonstrating its Bluetooth connectivity feature, allowing wireless audio streaming.

5.4 FM Radio

To use the FM radio, connect the wired earphones as they act as the antenna. Navigate to the FM Radio menu, then select 'Auto Search' to find available stations or tune manually.

5.5 Voice Recorder

The MP100 includes a voice recorder function. Navigate to the 'Recorder' menu, then select 'Start Recording' to begin. Recordings are saved to the device's memory.

5.6 File Navigation

Use the menu button (M) to access the main menu. Use the navigation buttons to browse through music, folders, and other functions. Press the play/pause button to select an option.

6. MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the screen and body with a soft, dry cloth. Do not use abrasive cleaners.

- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- For optimal battery life, avoid fully discharging the battery frequently.

7. TROUBLESHOOTING

If you encounter issues with your Oakcastle MP100, please refer to the following common solutions:

- **Device is frozen or unresponsive:** Press and hold the power button for approximately 10-15 seconds to force a restart.
- **Battery not charging or low battery warning:** Ensure the USB cable is securely connected to both the player and a working power source. Try a different USB port or charger.
- **No sound:** Check if the volume is turned up. Ensure headphones are properly connected or Bluetooth is successfully paired. Test with different headphones or Bluetooth devices.
- **Cannot find Bluetooth device:** Ensure your Bluetooth device is in pairing mode and within range. Restart both the MP3 player and the Bluetooth device.
- **Files not appearing:** Verify that the music files are in a supported format and have been transferred correctly to the internal memory or Micro SD card.

Your browser does not support the video tag.

Video: An official overview video demonstrating the key features and usage of the Oakcastle MP100 MP3 Player.

8. SPECIFICATIONS

Feature	Specification
Product Dimensions	2.28 x 1.42 x 0.67 inches
Item Weight	0.952 ounces
Internal Memory	16 GB
Expandable Memory	Up to 128GB (Micro SD card not included)
Battery	1 Lithium Polymer (included)
Battery Life	Up to 30 hours (with wired headphones)
Bluetooth Version	4.0
Supported Audio Formats	MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, SCEL P
Special Features	FM Radio, Voice Recorder, Waterproof Case, Sports Clip

9. WARRANTY AND SUPPORT

The Oakcastle MP100 Mini Portable MP3 Player comes with a manufacturer's warranty. For detailed warranty information, product support, or to register your device, please visit the official Oakcastle website or contact their customer service. Keep your proof of purchase for warranty claims.

