

## KEMEI KM-1319

# KEMEI KM-1319 Baby Hair Clipper Instruction Manual

Model: KM-1319

## 1. SAFETY INFORMATION

Please read all safety instructions carefully before using the KEMEI KM-1319 Baby Hair Clipper. Retain this manual for future reference.

- Always supervise children when using this product.
- Keep the trimmer away from water sources to prevent electrical shock. This device is waterproof for cleaning, but should not be submerged or used while bathing.
- Avoid contact with skin and eyes during operation.
- Follow recommended cleaning and maintenance procedures as outlined in this manual.
- Always unplug the trimmer when not in use or before cleaning.
- Keep the trimmer and all accessories out of reach of children when not in use.
- Do not attempt to repair or modify the device yourself. Contact customer support for assistance.

## 2. PRODUCT OVERVIEW

The KEMEI KM-1319 Baby Hair Clipper is designed for safe and quiet hair trimming for infants and children. It features a ceramic blade, R-shaped rounded corners, and a low-noise motor.

### 2.1. Package Contents

- 1 x KEMEI KM-1319 Hair Trimmer
- 3 x Guide Combs (1mm, 2mm, 3mm)
- 1 x Cleaning Brush
- 1 x USB Charging Cable
- 1 x User's Manual (this document)



Image: KEMEI KM-1319 Baby Hair Clipper with its included accessories: three guide combs, a cleaning brush, and a USB charging cable.

## 2.2. Component Identification

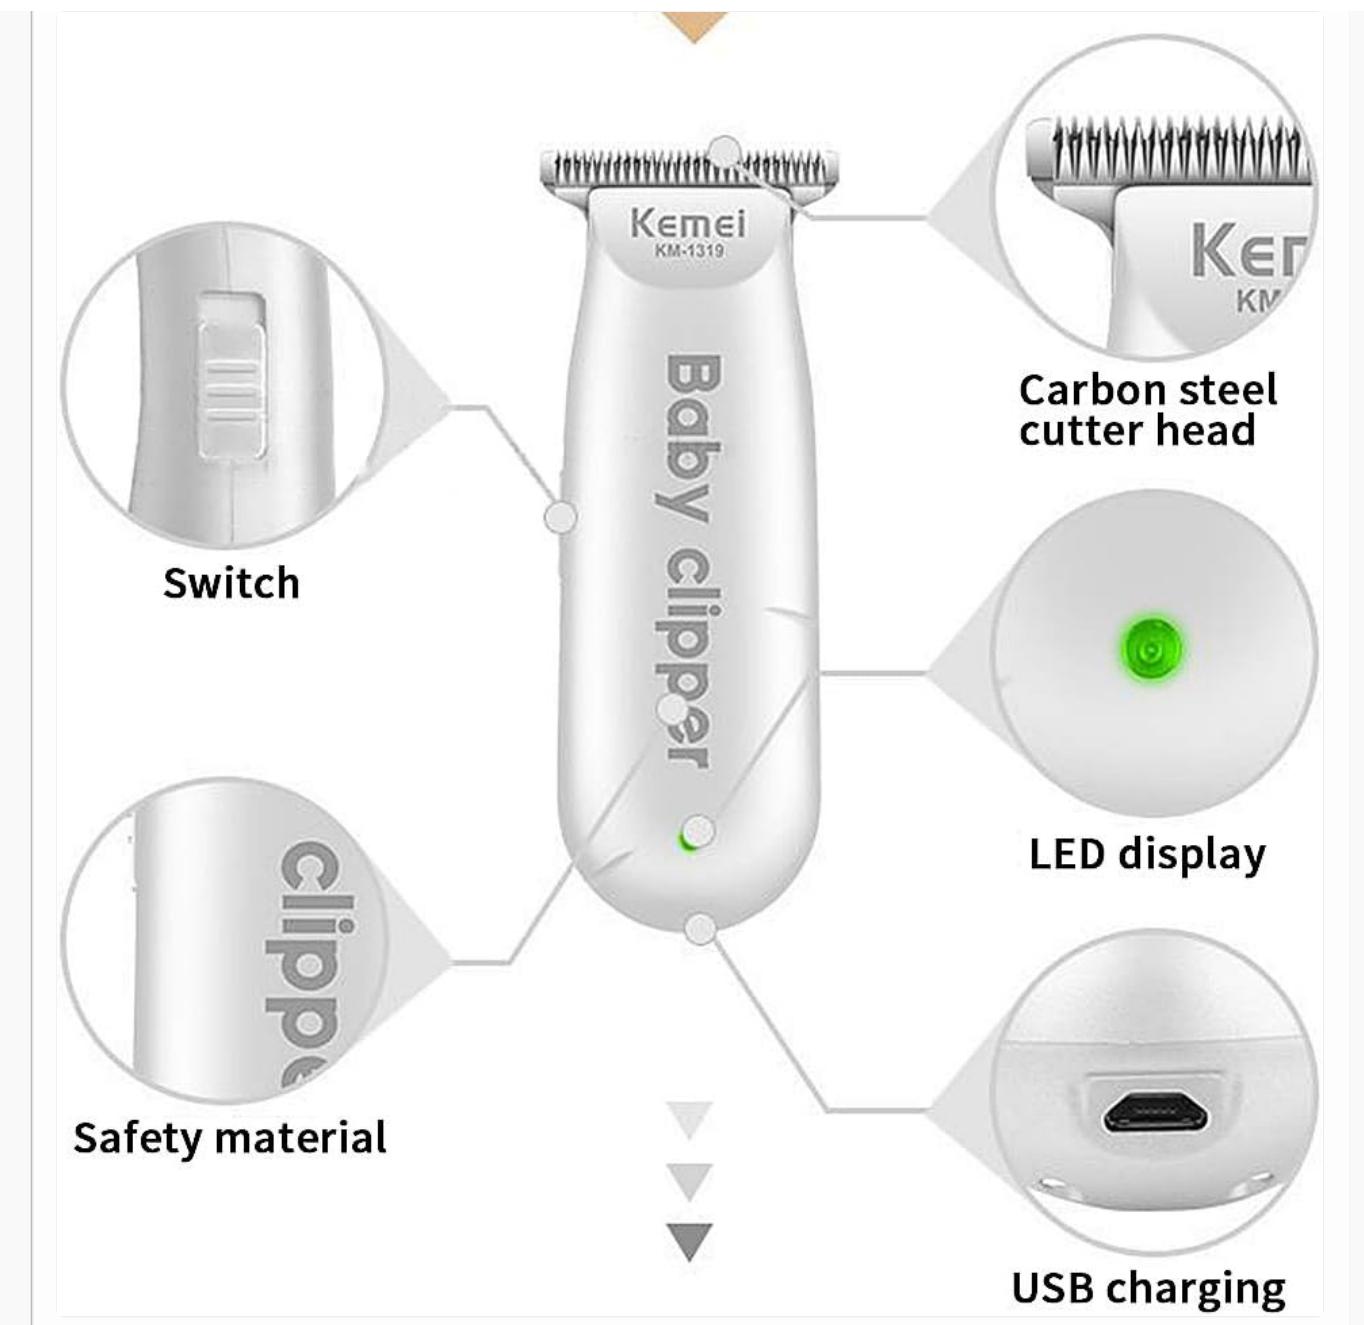


Image: Diagram illustrating the main components of the KEMEI KM-1319 Baby Hair Clipper, including the carbon steel cutter head, power switch, LED display, and USB charging port.

- **Cutter Head:** Features R-shaped rounded corners and ceramic blades for gentle trimming.
- **Power Switch:** One-touch button for turning the clipper on and off.
- **LED Display:** Indicates power status.
- **USB Charging Port:** For recharging the internal battery.

### 3. SETUP

#### 3.1. Charging the Clipper

1. Ensure the clipper is turned off.
2. Connect the USB charging cable to the charging port at the bottom of the clipper.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.

4. The LED indicator will illuminate during charging. A full charge takes approximately 1.5 hours.
5. Once fully charged, the clipper provides up to 2 hours of cordless operation. The clipper can also be used while plugged in.



Image: Close-up view of the KEMEI KM-1319 Baby Hair Clipper's USB charging port and the LED indicator light, which shows charging status.

### 3.2. Attaching Guide Combs

The clipper comes with three guide combs (1mm, 2mm, 3mm) to help achieve desired hair lengths.

1. Ensure the clipper is turned off.
2. Select the desired guide comb (1mm, 2mm, or 3mm).
3. Align the comb with the clipper head and gently push it on until it clicks into place.
4. To remove, gently pull the comb away from the clipper head.

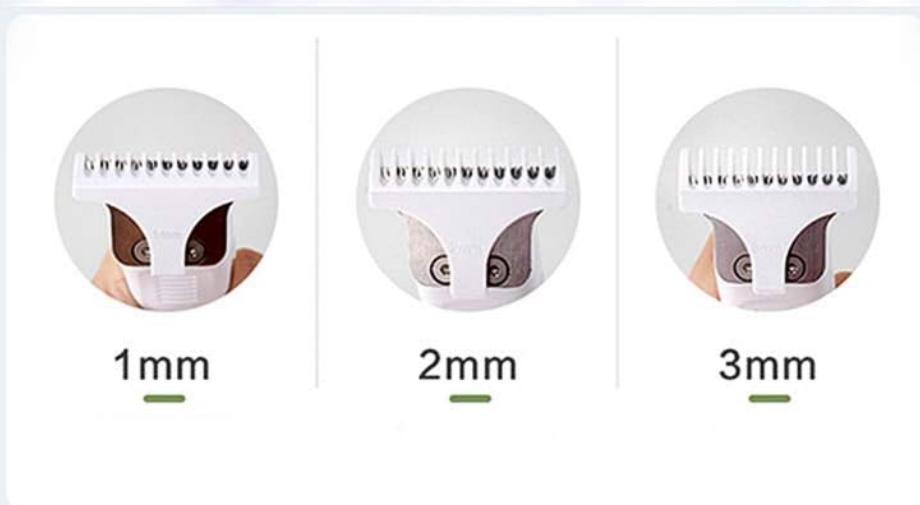


Image: Illustration showing the KEMEI KM-1319 Baby Hair Clipper with its three guide combs (1mm, 2mm, and 3mm) attached, demonstrating the different cutting lengths.

## 4. OPERATING INSTRUCTIONS

### 4.1. Preparing for Haircut

- Ensure the child's hair is clean and dry.
- Place a cape or towel around the child's shoulders to catch cut hair.
- Choose the appropriate guide comb for the desired hair length. For beginners, it is recommended to start with a longer comb (e.g., 3mm) and adjust as needed.

### 4.2. Trimming Hair

1. Press the power switch to turn on the clipper. The LED indicator will light up.
2. Hold the clipper firmly and gently move it against the direction of hair growth.
3. Use smooth, even strokes. Do not apply excessive pressure.
4. Regularly check the hair length and adjust the guide comb if necessary.

5. For detailing around ears or sideburns, remove the guide comb and use the clipper carefully without it.
6. After use, press the power switch to turn off the clipper.



Image: An adult carefully using the KEMEI KM-1319 Baby Hair Clipper to trim an infant's hair, demonstrating gentle and supervised use.

## 5. MAINTENANCE

### 5.1. Cleaning the Clipper

The clipper's blade is washable for easy cleaning.

1. Ensure the clipper is turned off and unplugged from any power source.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to remove loose hair from the blade and clipper body.
4. Rinse the blade under running water. Do not submerge the entire clipper body.
5. Allow the blade and clipper to air dry completely before storing or next use.

## 5.2. Storage

Store the clipper and its accessories in a cool, dry place, away from direct sunlight and moisture. Keep it out of reach of children.

## 6. TROUBLESHOOTING

- **Clipper not turning on:**

Ensure the clipper is fully charged. Connect it to the USB charging cable and allow it to charge for at least 1.5 hours. If it still doesn't turn on, contact customer support.

- **Poor cutting performance:**

Check if the blade is clean and free of hair debris. Clean the blade thoroughly using the cleaning brush and rinsing under water. Ensure the guide comb is correctly attached.

- **Clipper making unusual noise:**

Turn off the clipper and inspect the blade for any obstructions or damage. Clean the blade area. If the noise persists, discontinue use and contact customer support.

- **Battery not holding charge:**

Ensure you are using a functional USB power source and cable. If the battery life significantly decreases over time, it may indicate battery degradation. Contact customer support for options.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	KM-1319 (MFN-1319)
Brand	KEMEI
Color	White
Blade Material	Ceramic, Stainless Steel
Power Source	Battery Powered (Rechargeable Lithium Polymer)
Battery Capacity	900mAh
Rated Voltage	110-240V
Charging Time	Approx. 1.5 hours
Operating Time	Approx. 2 hours
Sound Level	Less than 50dB
Guide Combs	1mm, 2mm, 3mm
Dimensions (approx.)	11cm (length) x 4cm (width)

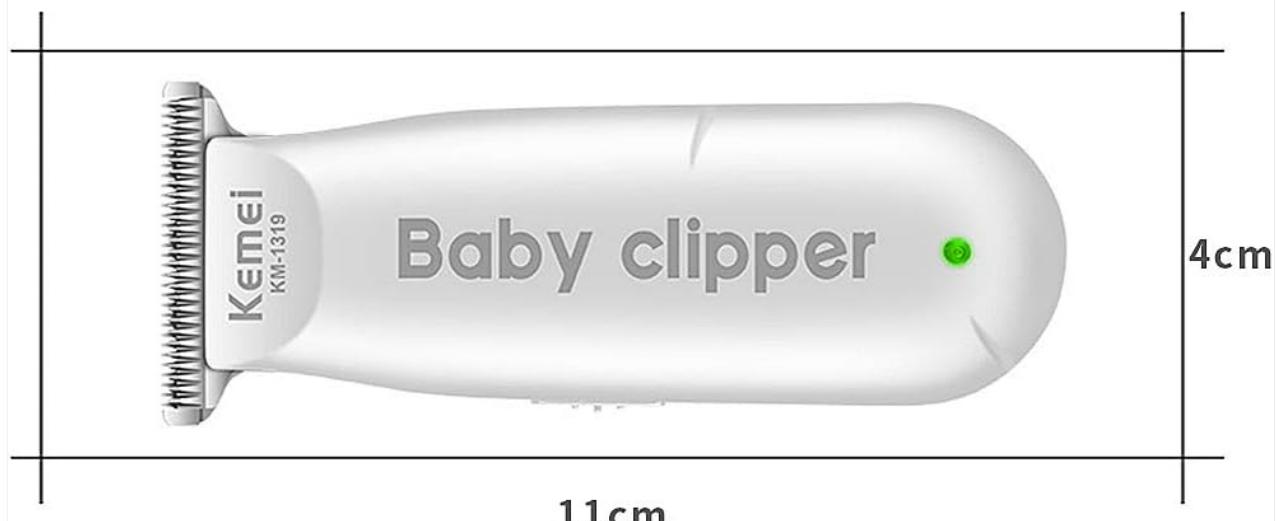


Image: Diagram showing the approximate dimensions of the KEMEI KM-1319 Baby Hair Clipper, measuring about 11cm in length and 4cm in width.

## 8. WARRANTY AND SUPPORT

### 8.1. Limited Warranty

This KEMEI product is covered by a limited warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

### 8.2. Customer Support

For technical assistance, warranty inquiries, or replacement parts, please contact KEMEI customer support through the retailer where the product was purchased or visit the official KEMEI website for contact information.