

[Manuals.plus](#) /

› [JOYIN](#) /

› JOYIN Kids Tool Set Instruction Manual

JOYIN 11717

JOYIN Kids Tool Set Instruction Manual

Model: 11717

Brand: JOYIN

INTRODUCTION

Thank you for choosing the JOYIN 19-Piece Kids Tool Set. This comprehensive set is designed to provide a fun and educational pretend play experience for children aged 3 years and up. It encourages imaginative role-play, helps develop fine motor skills, and introduces basic concepts of tools and construction in a safe environment.

The set includes a realistic electronic drill with interchangeable bits and a functional tool belt, allowing your child to engage in hands-on activities and mimic real-life building scenarios.



Image: The complete JOYIN 19-Piece Kids Tool Set, showcasing the tool belt, electronic drill, and various hand tools like a hammer, screwdrivers, and pliers.

PRODUCT CONTENTS

The JOYIN 19-Piece Kids Tool Set includes the following items:

- 1 x Adjustable Tool Belt
- 1 x Electronic Power Drill Toy
- 3 x Replaceable Drill Bits (various types)
- 1 x Real Tape Ruler
- Various other pretend play tools (e.g., hammer, screwdrivers, pliers, screws, nuts, and wooden planks)



SUPER VALUE PACK

Image: A detailed view of all 19 components included in the tool set, highlighting the variety of tools and accessories.

SETUP

Electronic Power Drill Battery Installation

1. Locate the battery compartment on the handle of the electronic power drill.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert 2 x AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Attaching Drill Bits

- Select one of the three replaceable drill bits.
- Insert the chosen drill bit firmly into the chuck of the electronic power drill until it clicks into place.
- To remove, gently pull the bit out of the chuck.

SIMULATION ELECTRIC DRILL

3 Replaceable
Drill Bits



Image: Detailed view of the electronic drill, illustrating the battery insertion point, the three interchangeable drill bits, the trigger, and the reversing switch.

OPERATING INSTRUCTIONS

Using the Electronic Power Drill

- Once batteries are installed and a bit is attached, press the trigger to activate the drill. The chuck will auto-rotate and produce a buzzing sound, simulating a real drill.
- Use the reversing switch to change the direction of rotation, allowing for both "drilling in" and "unscrewing" actions.

Wearing the Tool Belt

- Adjust the tool belt to fit comfortably around your child's waist using the adjustable buckle.
- Place the various tools into the designated pockets and loops on the belt for easy access during play.



Image: A child demonstrating the tool belt in use, highlighting its practical features for storing tools and its adjustable design.

Using Other Tools

- The set includes a variety of hand tools such as a hammer, screwdrivers, and pliers. These tools are designed for pretend play and are safe for children.
- The real tape ruler can be used to measure objects, introducing basic measurement concepts.
- Encourage your child to use the tools to "fix" or "build" things around the house, fostering creativity and problem-solving skills.



ENJOY A GREAT PLAY EXPERIENCE

Fabric tape measure

Image: A child using the fabric tape measure, demonstrating its use for pretend measurement activities.



Image: An adult and child engaging in play with the tool set, illustrating interactive and educational use.

MAINTENANCE

- **Cleaning:** Wipe all tools and the tool belt with a damp cloth as needed. Do not immerse the electronic drill in water.
- **Storage:** Store the tool set in a dry place away from direct sunlight when not in use. Ensure all pieces are accounted for to prevent loss.
- **Battery Care:** Remove batteries from the electronic drill if it will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Electronic drill not working.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new AA batteries.
Drill bit falls out easily.	Bit not fully inserted.	Ensure the drill bit is pushed firmly into the chuck until it clicks.
Tools appear damaged or broken.	Excessive force during play or manufacturing defect.	Discontinue use of broken parts. Contact customer support for assistance.

SPECIFICATIONS

- **Model Number:** 11717
- **Package Dimensions:** 8.27 x 6.42 x 5.28 inches
- **Item Weight:** 1.37 pounds
- **Manufacturer Recommended Age:** 3 years and up
- **Power Drill Batteries:** 2 x AA (not included)
- **Manufacturer:** Joyin Inc



Image: A visual representation of the dimensions for the main components of the tool set.

Safety Information

- This product is designed for children aged 3 years and up. Adult supervision is recommended during play.
- All components are made from child-safe, non-toxic materials and meet US toy standards. Safety tests have been approved.
- Small parts may pose a choking hazard for children under 3 years. Keep away from infants and toddlers.
- Do not use the tools for purposes other than pretend play. They are not designed for real construction or repair.
- Ensure batteries are inserted correctly and disposed of properly.

Warranty and Support

JOYIN is committed to customer satisfaction. If you have any questions, concerns, or if the product does not meet your expectations, please do not hesitate to contact our customer support team. We are dedicated to ensuring every moment brings you joy.

For support, please refer to the contact information provided on the product packaging or visit the official JOYIN website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08BL6NL5P>

More documents and user manuals: <https://manuals.plus/>