

KODAK Mini 3 Retro

KODAK Mini 3 Retro 4PASS Portable Photo Printer User Manual

Model: Mini 3 Retro (P210RY)

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your KODAK Mini 3 Retro 4PASS Portable Photo Printer. The printer utilizes advanced 4PASS technology to produce high-quality, durable 3x3 inch photos. Its compact design and Bluetooth connectivity allow for convenient printing directly from your smartphone or tablet.

Key features include:

- **4PASS Technology:** Ensures vivid, crystal-clear prints with a protective laminated layer.
- **3x3 Inch Prints:** Produces square photos, with options for bordered or borderless output.
- **Bluetooth Connectivity:** Seamlessly connects to your mobile devices.
- **KODAK Photo Printer App:** Offers editing features, filters, frames, and collage options.
- **Portable Design:** Lightweight and compact for easy transport.

AFFORDABLE COST

Save on every print.



The KODAK Mini 3 Retro Portable Photo Printer, designed for instant photo printing.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- KODAK Mini 3 Retro Printer
- Initial Cartridge (8 Sheets)
- Quick Start Manual

Note: A USB-C type charging cable is not included and must be provided separately.

KODAK

The perfect starter pack

What's in the box?

- ① Initial Cartridge (8 Sheets)
- ② Quick Start Manual
- ③ Printer



* Charging cable is not included (USB-C Type Needed)

Illustration of the items included in the KODAK Mini 3 Retro printer package.

3. SETUP

3.1 Charging the Printer

Before first use, fully charge the printer using a USB-C cable and a compatible power adapter. The charging indicator will show the charging status.

3.2 Installing the KODAK Photo Printer App

Download the official KODAK Photo Printer application from your device's app store (Google Play Store for Android or Apple App Store for iOS). This app is required to operate the printer.

3.3 Inserting the Cartridge

1. Open the cartridge cover on the side of the printer.
2. Insert the new photo cartridge into the slot, ensuring it is oriented correctly.
3. Push the cartridge firmly until it clicks into place.
4. Close the cartridge cover.

 
Visual guide for replacing the photo cartridge in the KODAK Mini 3 Retro printer.

Your browser does not support the video tag.

This video demonstrates the process of setting up and using the KODAK Mini 3 Retro printer, including cartridge installation.

3.4 Connecting via Bluetooth

Ensure Bluetooth is enabled on your smartphone or tablet. Open the KODAK Photo Printer app, and it will guide you through connecting to your Mini 3 Retro printer. The printer's Bluetooth name will typically be 'KODAK Mini 3 Retro'.

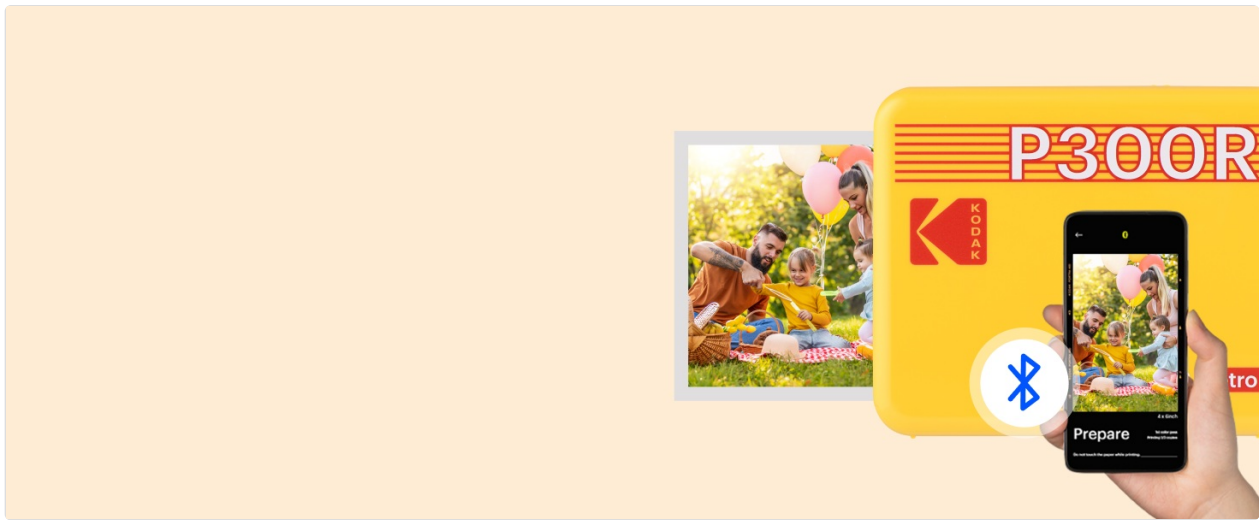

The KODAK Mini 3 Retro printer connects wirelessly to your phone via Bluetooth for easy printing.

4. OPERATING INSTRUCTIONS

4.1 Printing Photos

1. Open the KODAK Photo Printer app on your connected device.
2. Select the photo you wish to print from your gallery.
3. Utilize the app's editing features (filters, frames, cropping) if desired.
4. Choose your preferred print type (bordered or borderless).
5. Tap the print button. The printer will process and print the photo in layers.

BLUETOOTH PRINTER

Easily print photos from your phone with our app.



Print photos directly from your smartphone using the KODAK Photo Printer app.

 
Your browser does not support the video tag.

This video provides an overview of the KODAK Mini 3 Retro Portable Instant Photo Printer and its printing capabilities.


4.2 Using the KODAK Photo Printer App

The KODAK Photo Printer app offers various functionalities to enhance your photos before printing:

- **Editing Tools:** Adjust brightness, contrast, saturation, and more.
- **Filters:** Apply various photographic filters to change the mood of your images.
- **Frames:** Choose from a selection of decorative frames to add a personal touch.
- **Collage Function:** Create multi-photo collages for unique prints.

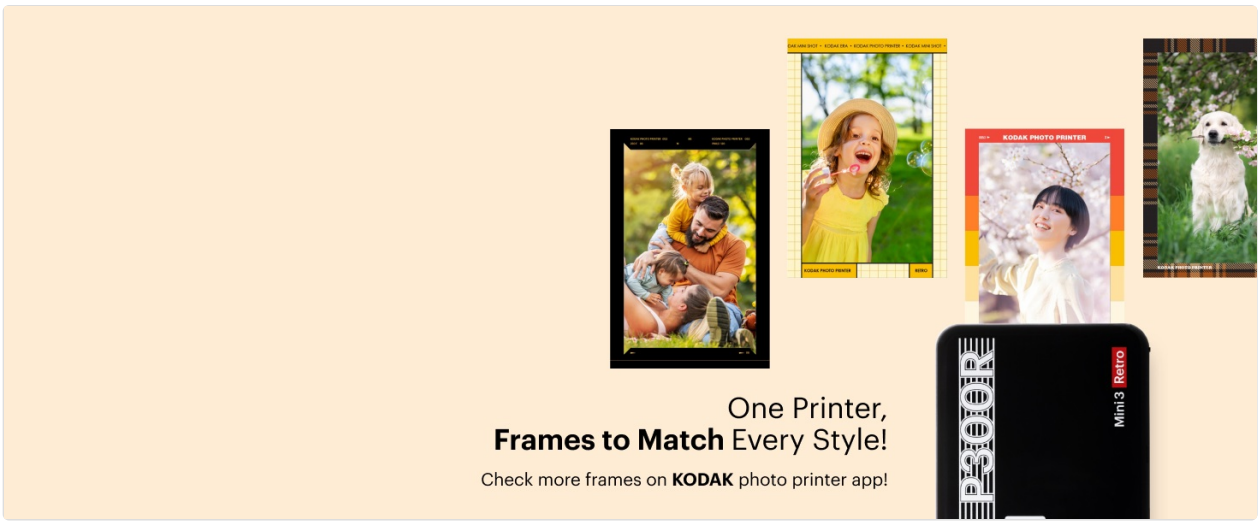

 The KODAK Photo Printer app allows users to choose frames and make edits before printing.

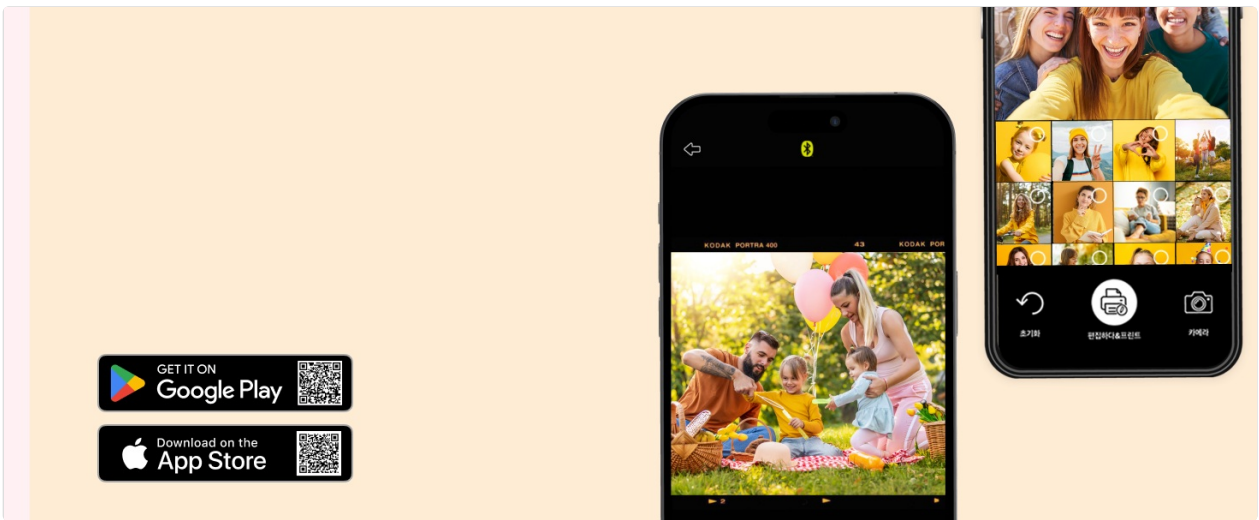


The KODAK Photo Printer App provides a user-friendly interface for managing your prints.

4.3 Bordered vs. Borderless Prints

The KODAK Mini 3 Retro offers flexibility in print styles:

 - **Bordered Prints:** Ideal for adding notes or dates, creating a classic instant photo look.
- **Borderless Prints:** Maximizes the image area for a larger photo display.

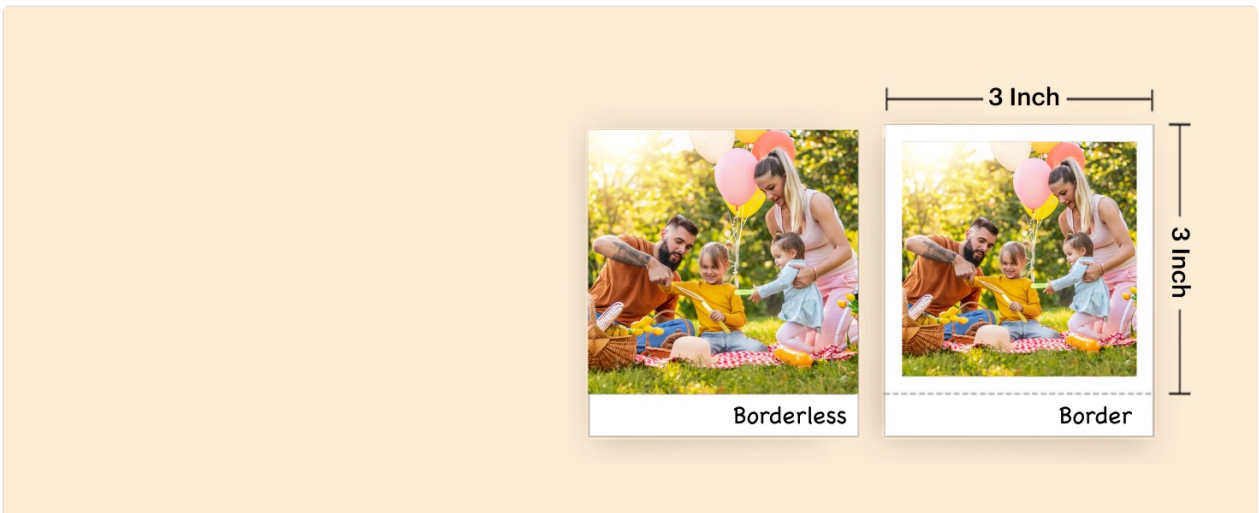


Choose between bordered or borderless photo prints to suit your preference.

5. MAINTENANCE

5.1 Replacing the Cartridge

 When the current cartridge is empty, replace it with a new KODAK Mini 3 Retro compatible cartridge. Follow the steps outlined in section 3.3 for proper installation. Ensure you use genuine KODAK cartridges for optimal print quality and printer longevity.

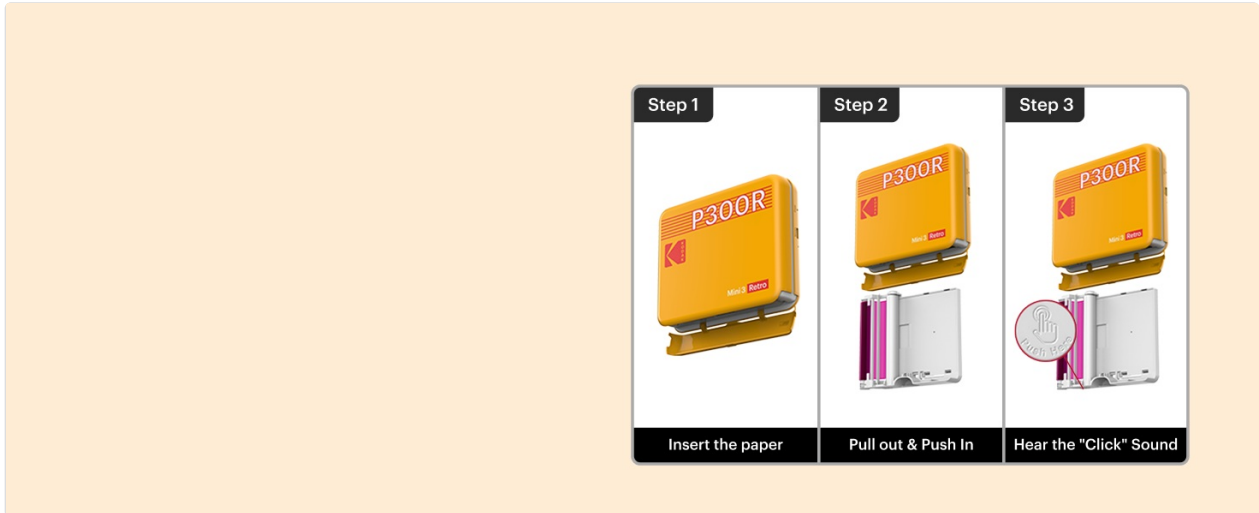

Ensure you have replacement cartridges available for continuous printing.

5.2 Cleaning the Printer

To maintain print quality, periodically clean the exterior of the printer with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. Do not attempt to clean the internal components unless specifically instructed by KODAK support.

6. TROUBLESHOOTING

6.1 Common Issues and Solutions

Issue	Possible Cause / Solution
Printer not connecting via Bluetooth	Ensure Bluetooth is enabled on your device and the printer is powered on. Try restarting both the printer and your device. Re-pair the devices in your Bluetooth settings.
Cartridge not recognized	Ensure the cartridge is correctly inserted and clicked into place. Verify it is a genuine KODAK Mini 3 Retro compatible cartridge. Try removing and reinserting the cartridge.
Poor print quality / Incorrect colors	Check if the cartridge is running low on ink or paper. Ensure the photo quality on your device is sufficient. Avoid touching the print surface during the printing process.
App issues (e.g., incorrect cropping, orientation)	Ensure your KODAK Photo Printer app is updated to the latest version. Try clearing the app's cache or reinstalling the app. If issues persist, contact KODAK customer support.
Printer not turning on	Ensure the printer is fully charged. Connect it to a power source and wait a few minutes before attempting to turn it on.

7. SPECIFICATIONS

Feature	Detail
Brand	KODAK
Model Name	Mini 3 Retro
Model Number	P210RY
Connectivity Technology	Bluetooth
Printing Technology	Dye Sublimation (4PASS)
Special Features	Borderless Printing, Portable
Color	Yellow (for this variant)
Printer Output	Color
Maximum Print Speed (Color)	1 ppm
Item Weight	459 Grams
Item Dimensions (D x W x H)	4"D x 5"W x 1"H
Compatible Devices	Smartphones, Tablets
Control Method	App
Maximum Media Size	3x3 inches
Paper Size	3x3 inch
Maximum Print Resolution	300 dpi
Initial Page Print Time	10 seconds or less
Duplex Printing	Simplex (No)
UPC	192143003045

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Specific warranty details for the KODAK Mini 3 Retro printer are typically provided with the product packaging or can be found on the official KODAK website. Please refer to these resources for comprehensive warranty terms and conditions.

8.2 Customer Support

For further assistance, technical support, or inquiries regarding your KODAK Mini 3 Retro printer, please visit the official KODAK support website or refer to the full User Manual PDF available online. A digital version of the user manual can be accessed [here](#).

