

[Manuals.plus](#) /

> [Gamory](#) /

> Gamory Wireless Controller for PlayStation 4/Pro/Slim - User Manual

## Gamory 2075B\_SML

# Gamory Wireless Controller for PlayStation 4/Pro/Slim - User Manual

Model: 2075B\_SML

## 1. INTRODUCTION

---

This manual provides instructions for the Gamory Wireless Controller, designed for use with PlayStation 4, PS4 Pro, and PS4 Slim consoles. It offers an enhanced gaming experience with various integrated features. Please read this manual thoroughly before using the product to ensure proper operation and longevity.



Image 1.1: Front view of the Gamory Wireless Controller. This image displays the controller's ergonomic design, illuminated buttons, and central touchpad.


## 2. PRODUCT FEATURES

---

The Gamory Wireless Controller incorporates several features designed to optimize your gaming experience:

- **Ergonomic Design with Illuminated Buttons:** The controller is shaped for comfortable grip, and its buttons light up during use, enhancing visual appeal.
- **Wide Compatibility:** Compatible with PS4, PS4 Pro, and PS4 Slim. Can also connect to PS3 and PC via USB cable for wired use (with limited functionality).
- **Integrated Speaker & 3.5mm Audio Jack:** Features a built-in speaker for in-game audio cues and a 3.5mm stereo headset jack for private audio.
- **Dual Motors & Six-Axis Gyroscope:** Provides timely vibration feedback and motion sensing for immersive gameplay.
- **Responsive Touchpad:** Offers new interaction possibilities within compatible games.

- **Efficient Rechargeable Battery:** Built-in 600mAh lithium battery provides 5-8 hours of playtime on a 2-3 hour charge.

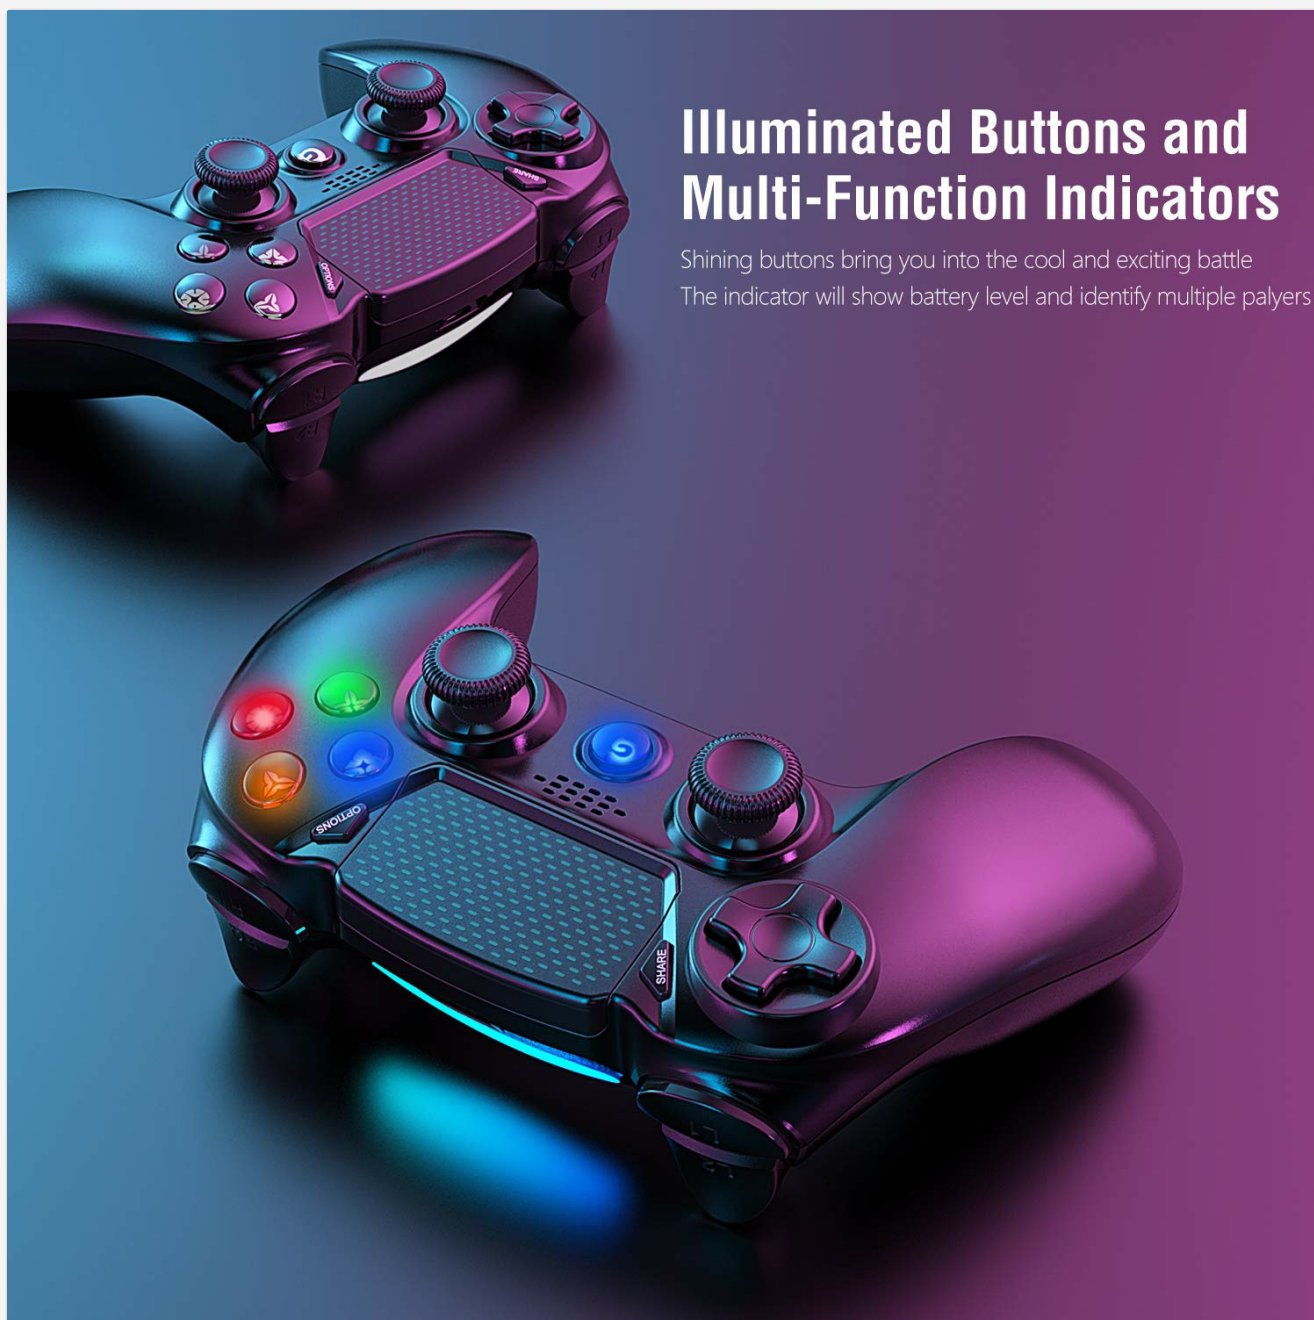

## Illuminated Buttons and Multi-Function Indicators

Shining buttons bring you into the cool and exciting battle  
The indicator will show battery level and identify multiple players

Image 2.1: Close-up of the controller highlighting the illuminated buttons and multi-function indicators. These indicators show battery level and identify multiple players.

## Built-in Dual Motors

Cooperate with the vibration generated by the game attack to enhance the realism of the game



Image 2.2: Illustration depicting the built-in dual motors within the controller, which provide vibration feedback to enhance game realism.

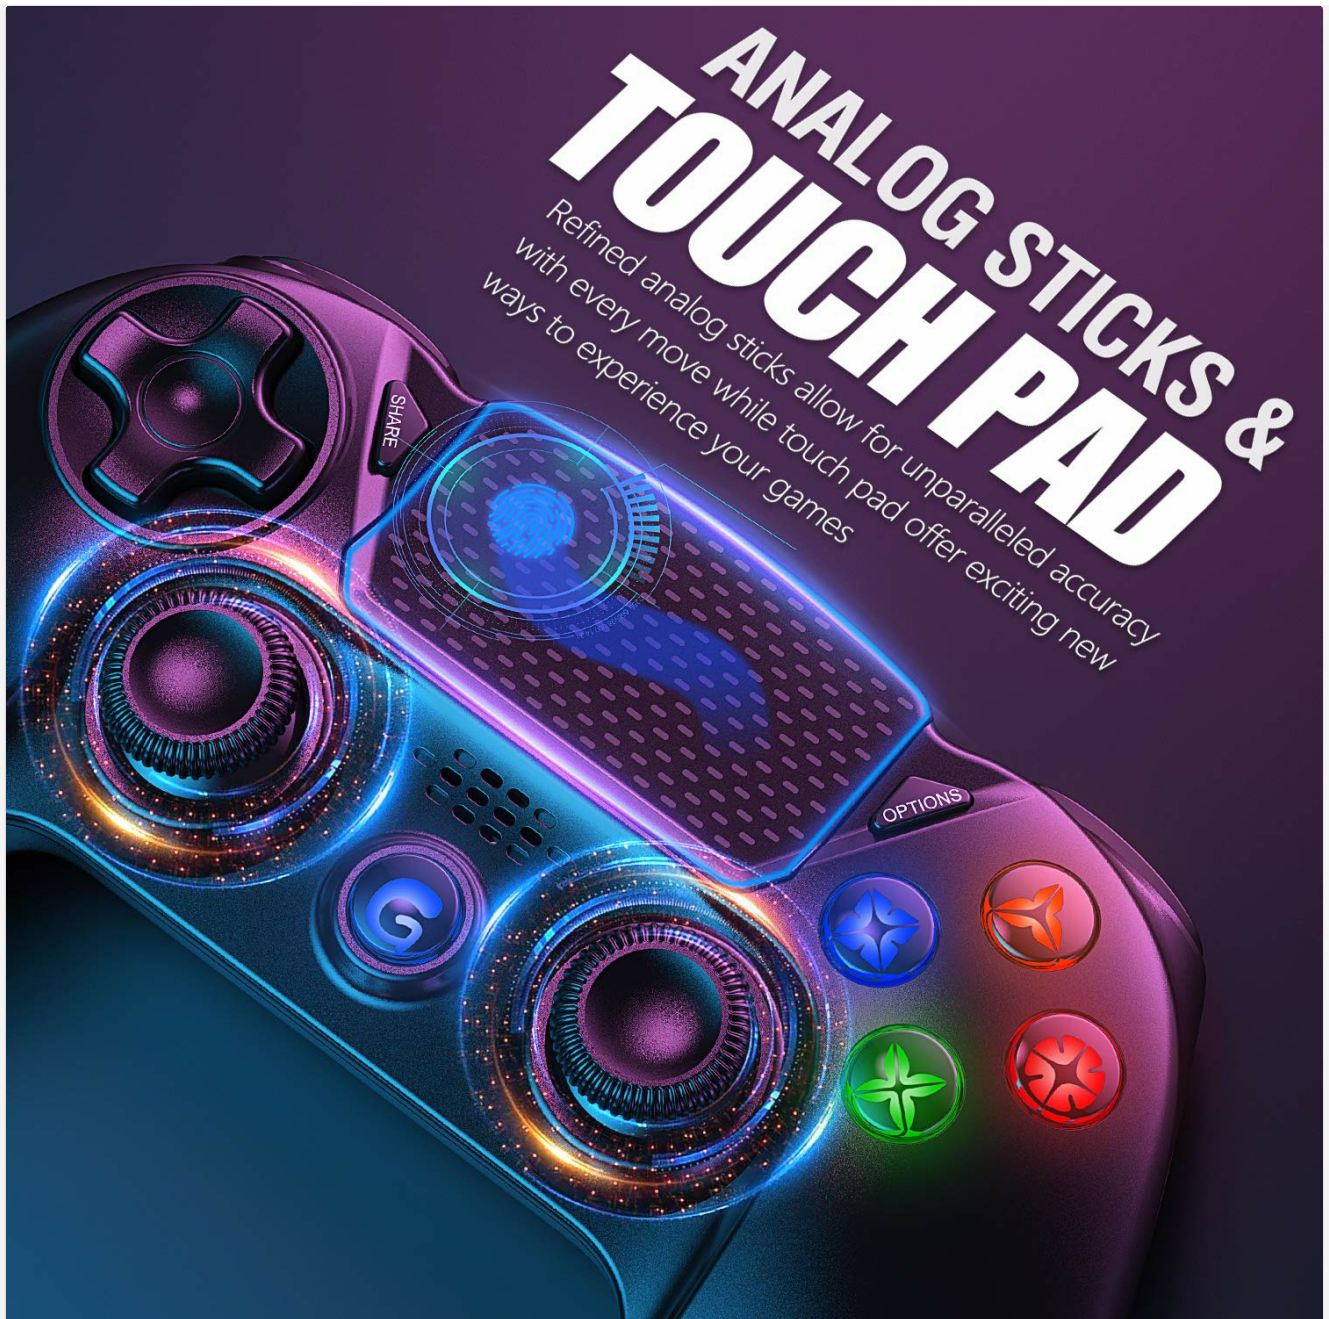


Image 2.3: View of the controller's analog sticks and touchpad. The touchpad offers new ways to interact with games, while the analog sticks provide precise control.



## 3.5MM Audio Port & Built-in Speaker

Audio function enhances the sense of presence and creates an extraordinary game atmosphere

Image 2.4: The controller's 3.5mm audio port and built-in speaker. This allows for immersive audio experiences, either privately through headphones or via the integrated speaker.

# Sensitive 6-Axis Somatosensory

Operate the game by shaking or swinging the controller to enhance the fun of the game



**Support Movement**



**Directions Control**



**Adjust Vision**

Image 2.5: Visual representation of the controller's sensitive 6-axis somatosensory capabilities, illustrating how movement, direction control, and vision adjustment can be achieved by shaking or swinging the controller.

# Ergonomic Design

Powered by included 3.3FT  
Micro-USB data cable



Image 2.6: Diagram illustrating the ergonomic design of the Gamory controller and labeling key components such as the touchpad, Micro USB port, light bar, and speaker/stereo headset function.

## 3. SETUP

### 3.1 Initial Pairing with PlayStation 4

1. Ensure your PlayStation 4 console is powered on.
2. Connect the Gamory Wireless Controller to your PS4 system using the provided USB charge cable.
3. Press the PlayStation button (central button with 'G' logo) on the controller.
4. The controller will pair with the system. Once paired, you can disconnect the USB cable and use the controller wirelessly.
5. For subsequent uses, the controller will automatically connect to the last paired PS4 system by pressing the PlayStation button.

**Note:** This pairing process is required for the first use or when connecting the controller to a different PS4 system.

## 3.2 Charging the Controller

- Connect the controller to a PS4 console, PC, or a USB wall adapter using the supplied USB charge cable.
- The light bar on the controller will indicate charging status.
- A full charge typically takes 2-3 hours and provides 5-8 hours of playtime.
- The controller features a charging indicator light and a low-voltage display light. It will automatically enter sleep mode after 10 minutes of inactivity when connected.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Basic Controls

The controller features standard PlayStation button layouts, including:

- **Directional Pad (D-Pad):** For directional input.
- **Action Buttons (Triangle, Circle, Cross, Square):** For in-game actions.
- **Analog Sticks:** Two clickable analog sticks for precise movement and camera control.
- **SHARE Button:** For sharing screenshots and video clips.
- **OPTIONS Button:** For accessing in-game menus and options.
- **PlayStation Button (G logo):** For accessing the PS4 home screen, turning the console on/off, and pairing.
- **L1/R1 and L2/R2 Buttons:** Shoulder and trigger buttons for various in-game functions.

### 4.2 Advanced Features

- **Touchpad:** The central touchpad can be used for navigation, gestures, or specific in-game interactions depending on the game.
- **Motion Control (6-Axis Sensing):** The built-in 3D accelerating sensor and Gyro sensor allow for motion-based controls in compatible games.
- **Built-in Speaker:** Enhances immersion by playing specific in-game sounds directly from the controller.
- **3.5mm Headset Jack:** Connect a compatible headset for game audio and voice chat. *Note: For optimal performance, using original PS4 headsets is recommended as some third-party headsets may have compatibility issues.*

### 4.3 Connecting to PS3 and PC (Wired Mode)

The controller can be used with a PS3 console or a PC by connecting it via a USB cable. In this wired mode, certain functions are limited:

- Six-axis induction (motion control) and vibration functions are **not supported**.
- The menu key function of the PS3 console is **not supported**.

## 5. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.

- **Avoid Drops:** Protect the controller from physical shocks and drops, which can damage internal components.

## 6. TROUBLESHOOTING

---

- **Controller not connecting:**

- Ensure the controller is charged.
- Perform the initial pairing process again using the USB cable.
- Restart your PS4 console.

- **Input lag or disconnection:**

- Ensure there are no strong wireless interference sources nearby.
- Move closer to the PS4 console.
- Re-pair the controller.

- **Headset audio not working:**

- Check if the headset is fully plugged into the 3.5mm jack.
- Verify headset compatibility, especially if it's not an official PS4 headset.
- Check audio settings on your PS4 console.

- **Controller not charging:**

- Ensure the USB cable is securely connected to both the controller and the power source.
- Try a different USB port or power adapter.
- Use the provided USB cable.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	2075B_SML
Brand	Gamory
Connectivity	Wireless (Bluetooth), Wired (USB)
Compatibility	PlayStation 4, PS4 Pro, PS4 Slim, PS3 (wired), PC (wired)
Battery Type	Built-in 600mAh Lithium Battery
Charging Time	Approx. 2-3 hours
Playtime (Wireless)	Approx. 5-8 hours
Special Features	Touchpad, Dual Vibration, 6-Axis Motion Sensor, Built-in Speaker, 3.5mm Headset Jack, Illuminated Buttons

Feature	Detail
Package Dimensions	16.5 x 12 x 7.3 cm
Item Weight	290 g

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Gamory website. Keep your proof of purchase for warranty claims.