

ROIDMI RS60

Roidmi RS60 Cordless Vacuum Cleaner User Manual

Model: RS60 | Brand: ROIDMI

1. INTRODUCTION

Thank you for choosing the Roidmi RS60 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read this manual thoroughly before first use and retain it for future reference.

Safety Information

- This appliance is for household use only. Do not use it for commercial or industrial purposes.
- Do not use the vacuum cleaner to pick up water or other liquids, hot ashes, cigarette butts, sharp objects, or hazardous materials.
- Keep the appliance away from children and pets.
- Ensure the power adapter is compatible with your local voltage (220 Volts).
- Do not operate the vacuum cleaner if any part is damaged. Contact customer support for assistance.
- Always unplug the charger from the power outlet before cleaning or performing maintenance.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- Main Vacuum Unit with Dustbin and OLED Display
- Extension Wand
- Soft Roller Brush Head (for all surfaces)
- Crevice Tool
- Dusting Brush
- Magnetic Wet Accessory (Water Tank)
- Pet Grooming Tool (if included in your model)
- Charging Adapter

- Magnetic Wall Mount and Charging Plate
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Roidmi RS60 vacuum cleaner.



Figure 3.1: Roidmi RS60 Cordless Vacuum Cleaner in its upright position, showcasing the main unit, extension wand, and floor brush.



Figure 3.2: The Roidmi RS60 standing upright, highlighting its sleek design and the illuminated brush head.

Key Components:

- **Main Unit:** Contains the motor, dustbin, battery, and OLED display.
- **OLED Display:** Shows battery level, cleaning mode, and error indicators.
- **Extension Wand:** Connects the main unit to the floor brush or other attachments for extended reach.
- **Soft Roller Brush Head:** Designed for effective cleaning on all floor types without needing to switch heads. Features anti-tangle technology.
- **Dustbin:** Transparent container for collecting dust and debris.
- **Filtration System:** Six-level filtration with double antibacterial properties.

4. SETUP

4.1 Assembly

1. Insert the extension wand into the main unit until it clicks securely.
2. Attach the desired cleaning head (e.g., soft roller brush head) to the other end of the extension wand until it clicks.
3. For handheld use, attach accessories directly to the main unit.

4.2 Initial Charging

Before first use, fully charge the vacuum cleaner. The battery has a capacity of 2500 mAh.



Figure 4.1: The Roidmi RS60 being positioned onto its magnetic wall mount for charging. The mount keeps the vacuum upright against the wall while charging.

1. **Magnetic Wall Mount:** Install the magnetic wall mount in a convenient location near a power outlet. Ensure the height allows the charging pins to connect when the vacuum is resting on the floor. Connect the charging adapter to the wall mount. Place the vacuum onto the mount; it will magnetically secure and begin charging.
2. **Direct Charging:** Alternatively, you can connect the charging adapter directly to the charging port on the back of the main unit's handle.

3. The OLED display will indicate charging status. A full charge typically takes approximately 2 hours.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off and Mode Selection



Figure 5.1: The OLED display on the Roidmi RS60, which provides real-time information such as battery status and current cleaning mode.

- **Power On:** Press the power button on the main unit. The vacuum will start in the default cleaning mode.
- **Change Mode:** Press the mode selection button to cycle through the 3 available speed settings (Low, Medium, High). The OLED display will show the current mode.
- **Power Off:** Press the power button again to turn off the vacuum cleaner.

5.2 Using Attachments



Figure 5.2: A person using the Roidmi RS60 to clean a bedroom floor, demonstrating its maneuverability for general floor cleaning.



Figure 5.3: The flexible design of the Roidmi RS60's brush head allows it to easily reach and clean under furniture.

- **Soft Roller Brush Head:** Ideal for daily cleaning on all floor types, including hard floors and carpets. The anti-tangle design helps prevent hair from wrapping around the brush.
- **Crevice Tool:** Attach directly to the main unit or extension wand for cleaning narrow gaps, corners, and edges.



Figure 5.4: The Roidmi RS60 used in handheld configuration with the crevice tool, perfect for cleaning tight spaces like sofa cushions.

- **Dusting Brush:** Use for delicate surfaces, upholstery, and curtains.



Figure 5.5: The Roidmi RS60 in handheld mode with a brush attachment, suitable for cleaning fabric surfaces such as beds or upholstery.

- **Magnetic Wet Accessory:** Fill the antibacterial water tank with clean water. Attach it to the vacuum for simultaneous vacuuming and wet wiping of hard floors.
- **Pet Grooming Tool:** (If included) Use this attachment for grooming pets and simultaneously vacuuming loose fur.



Figure 5.6: The Roidmi RS60's pet grooming tool in use, designed to collect loose pet hair directly into the vacuum.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Roidmi RS60.

6.1 Emptying the Dustbin



Figure 6.1: Demonstrating how to easily detach and empty the dustbin of the Roidmi RS60 into a waste receptacle.

1. Ensure the vacuum is turned off and disconnected from charging.
2. Press the dustbin release button to detach the dustbin from the main unit.
3. Open the dustbin lid and empty the contents into a trash bin.
4. Reattach the dustbin until it clicks securely.

6.2 Cleaning Filters

The Roidmi RS60 features a six-level filtration system. Clean filters regularly to maintain suction power.

1. Remove the dustbin as described above.
2. Carefully remove the filter components (metal mesh filter, front and back filters).
3. Tap filters gently to remove loose dust. For thorough cleaning, rinse washable filters under cold running water.
4. Ensure all filter components are completely dry before reassembling them into the dustbin and then back into the main unit.

6.3 Cleaning the Brush Head

The anti-tangle brush head requires occasional cleaning to remove trapped hair or debris.

1. Turn off the vacuum and detach the brush head.
2. Locate the brush roll release mechanism and remove the brush roll.
3. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
4. Clean any debris from the brush head casing.
5. Reinsert the brush roll and secure it.

6.4 Cleaning the Magnetic Wet Accessory

After using the wet accessory, empty any remaining water and rinse the tank with clean water. Allow it to air dry completely before storage.

7. TROUBLESHOOTING

If you encounter issues with your Roidmi RS60, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly

Problem	Possible Cause	Solution
Weak suction power	Dustbin is full Filters are clogged Brush head is blocked Hose/wand is blocked	Empty the dustbin Clean or replace filters Remove blockages from brush head Check and clear any blockages in the extension wand or main unit intake
Brush head not rotating	Hair or debris tangled in brush roll Brush head attachment not properly secured	Clean the brush roll Ensure the brush head is securely attached to the wand or main unit
Vacuum not charging	Charger not connected properly Power outlet issue Magnetic mount not aligned	Check charger connection to vacuum and power outlet Test power outlet with another device Ensure vacuum is correctly seated on the magnetic mount or charger is directly connected
OLED display shows error	Specific error code (refer to display) General malfunction	Consult the Roidmi app for specific error code meanings (if applicable) Turn off, restart, or contact customer support if persistent

If the problem persists after attempting these solutions, please contact Roidmi customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	RS60
Brand	ROIDMI
Color	Silver
Product Dimensions	28 x 15 x 68 cm
Item Weight	6.6 Kilograms
Dustbin Capacity	0.55 Liters (approx.)
Battery Capacity	2500 mAh
Voltage	220 Volts
Noise Level	70 dB
Special Features	Cordless, Smart OLED Display, Anti-Tangle Brush Head, Magnetic-Wet Accessory, App Connectivity

Feature	Detail
Filtration System	Six-level filtration + Double Antibacterial

9. WARRANTY AND SUPPORT




Warranty Information

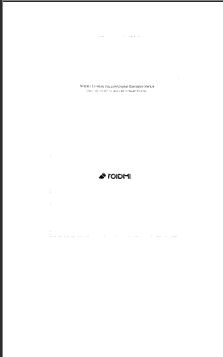
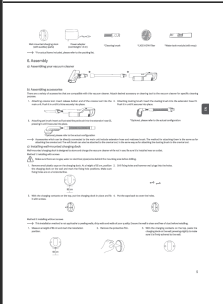

The Roidmi RS60 Cordless Vacuum Cleaner comes with a **5-year motor warranty**. This warranty covers defects in materials and workmanship of the motor under normal household use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or to purchase replacement parts, please contact Roidmi customer support through their official website or the retailer where the product was purchased. Have your model number (RS60) and purchase date ready when contacting support.

Related Documents - RS60

	<p>ROIDMI X30 Pro RS60 Vacuum Cleaner: FCC & Compliance Specifications</p> <p>Official FCC and regulatory compliance information for the ROIDMI X30 Pro and RS60 vacuum cleaner models, including technical specifications and certifications.</p>
	<p>ROIDMI Robot Vacuum and Mop Cleaner Operation Manual</p> <p>Comprehensive operation manual for the ROIDMI Robot Vacuum and Mop Cleaner, detailing safety instructions, product overview, installation, usage, maintenance, troubleshooting, and technical specifications.</p>
	<p>ROIDMI Cordless Vacuum Cleaner Operation Manual</p> <p>Comprehensive operation manual for the ROIDMI Cordless Vacuum Cleaner, detailing assembly, usage, maintenance, troubleshooting, and technical specifications. Learn how to use your vacuum cleaner effectively and safely.</p>

	<p>ROIDMI Cordless Vacuum Cleaner Operation Manual - User Guide</p> <p>Comprehensive operation manual for theROIDMI Cordless Vacuum Cleaner, covering safety precautions, product description, installation, usage, cleaning, troubleshooting, and warranty information.</p>
	<p>ROIDMI Cordless Vacuum Cleaner User Manual: Assembly, Operation, Maintenance, and Technical Data</p> <p>A comprehensive user manual for theROIDMI cordless vacuum cleaner (models XCQDS03RM, XCQ14RM, XCQ28RM), detailing assembly, operation, charging, cleaning, troubleshooting, technical specifications, disposal, and warranty information.</p>
	<p>ROIDMI Cordless Vacuum Cleaner Operation Manual</p> <p>Comprehensive operation manual for theROIDMI Cordless Vacuum Cleaner, covering safety instructions, product overview, assembly, operation, cleaning, maintenance, troubleshooting, and technical data. Includes important safety warnings and FCC compliance information.</p>