

WOSPORTS H-100-cr

Wosports Golf Rangefinder User Manual

Model: H-100-cr

1. PRODUCT OVERVIEW

The Wosports Golf Rangefinder is a versatile laser measurement device designed for both golf and hunting. It offers precise distance measurement, slope compensation, flag-lock with vibration, and speed/scan/angle measurement capabilities. Its compact and durable design ensures reliable performance in various outdoor conditions.

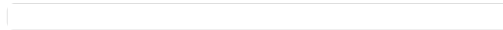 


Image: Front-angle view of the Wosports Golf Rangefinder, showcasing its blue and black casing with the WOSPORTS logo.

Package Contents:

- Wosports Golf Rangefinder (H-100-cr)
- Carrying Case
- Cleaning Cloth
- User Manual
- Lanyard

Key Features:

- **650 Yards Range:** Accurate distance measurement up to 650 yards.
- **Flag-Lock with Vibration:** Quickly locks onto the flagstick with a short vibration to confirm target acquisition.
- **Slope Compensation:** Provides adjusted distances for uphill and downhill shots (can be turned off for tournament play).
- **Multiple Measurement Modes:** Includes Distance, Speed, Scan, and Angle measurement.
- **6x Magnification:** Clear and bright optics for easy target identification.
- **Innovative Battery Cover:** Integrated design prevents loss of the battery cover.

Parts Diagram:



Image: Side view of the Wosports Golf Rangefinder, showing the H-100 model designation and the WOSPORTS logo.

1. Objective Lens
2. Eyepiece/Diopter Adjustment
3. Power/Measure Button
4. Mode Button
5. Battery Compartment (Integrated Cover)

2. SETUP

Battery Installation:

The Wosports Golf Rangefinder comes with an innovative, inseparable battery cover design. To install or replace the battery:

1. Locate the battery compartment on the underside of the device.
2. Twist the integrated battery cover counter-clockwise to open. The cover will remain attached to the device.
3. Insert the included CR2 battery, ensuring the positive (+) and negative (-) terminals are aligned correctly as indicated inside the compartment.
4. Twist the battery cover clockwise to securely close the compartment.

Note: The device uses one CR2 3V battery. Ensure the battery is inserted correctly to avoid damage to the unit.

3. OPERATING INSTRUCTIONS

Powering On/Off:

- To power on, press the **Power/Measure** button once. The display will activate.
- The device will automatically power off after approximately 8 seconds of inactivity to conserve battery.

Diopter Adjustment:

Rotate the eyepiece to adjust the focus until the display and target appear clear and sharp.

Switching Measurement Units (Meters/Yards):

In the powered-on state, **long press** the **Mode** button for more than 3 seconds to switch between Meters (M) and Yards (Y).

Mode Selection:

Press the **Mode** button briefly to cycle through the available measurement modes. The current mode will be indicated on the display.

A. Golf Mode (M2/M3 - Flagpole Lock with Vibration & Slope):

This mode is ideal for golf. It features flagpole lock technology and provides slope-adjusted distances.

- Aim the crosshairs at the flagstick or desired target.
- Press and hold the **Power/Measure** button.

- The device will scan and lock onto the nearest target (flagpole) within 180 yards, providing a short vibration and displaying the distance.
- The slope-adjusted distance will also be displayed (if slope function is enabled).

B. Hunting Mode (Fog & Speed):

Designed for hunting, this mode offers fog compensation and speed measurement.

- **Fog Mode:** Helps in conditions with light fog, providing more accurate readings.
- **Speed Mode:** Allows you to measure the speed of a moving object. Aim at the object and press the **Power/Measure** button. The speed will be displayed in km/h or mph.

C. Scan Mode:

For continuous measurement of multiple targets or moving objects.

- In Scan mode, press and hold the **Power/Measure** button.
- Pan the rangefinder across different targets. The distance readings will continuously update on the display.

4. MAINTENANCE

Cleaning the Lenses:

- Use the provided cleaning cloth or a soft, lint-free cloth to gently wipe the lenses.
- Do not use abrasive materials or harsh chemicals, as they can damage the lens coatings.
- For stubborn spots, a small amount of lens cleaning fluid designed for optics can be used.

General Care and Storage:

- Store the rangefinder in its protective carrying case when not in use.
- Keep the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the device to severe impacts.
- If the device will not be used for an extended period, remove the battery to prevent leakage.

5. TROUBLESHOOTING

Common Issues and Solutions:

- **Device not powering on:**
 - Check if the battery is inserted correctly with the correct polarity.
 - Replace the battery with a new CR2 3V battery.
- **Inaccurate or inconsistent readings:**
 - Ensure the target is within the effective range (5-650 yards).
 - Clean the objective and eyepiece lenses with the provided cloth.
 - Ensure there are no obstructions between the rangefinder and the target.
 - Avoid measuring through glass or highly reflective surfaces.
 - Inquire about environmental conditions (heavy fog, rain) that might affect performance.
- **Display is dim or flickering:**

- The battery may be low. Replace it with a new one.
- **Flag-lock not working:**
 - Ensure the flagstick is within 180 yards for optimal flagpole locking.
 - Keep the rangefinder steady while scanning for the flag.

6. SPECIFICATIONS

Feature	Specification
Model Number	H-100-cr
Measurement Range	5 - 650 Yards
Magnification	6x
Measurement Accuracy	±1 Yard
Battery Type	CR2 3V (Included)
Item Dimensions (LxWxH)	2.76 x 0.79 x 1.57 inches
Package Weight	0.32 Kilograms
Color	Blue
Material	Acrylonitrile Butadiene Styrene
UPC	753575621476
Date First Available	June 22, 2020

7. WARRANTY & SUPPORT

Warranty Information:

This Wosports Golf Rangefinder comes with a **90-day limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

Customer Support:

Wosports is committed to providing excellent customer service. For any questions, technical assistance, or warranty claims, please contact Wosports customer support. Wosports provides lifetime customer support for this product.

Please refer to the contact information provided on the Wosports official website or the product packaging for the most up-to-date support channels.

