



[Manuals.plus](#) /

› [Tamagotchi](#) /

› Tamagotchi Nano x Demon Slayer - Tanjirotchi User Manual

Tamagotchi 88426

Tamagotchi Nano x Demon Slayer - Tanjirotchi User Manual

Your guide to raising and training your digital Demon Slayer companion.

INTRODUCTION

Welcome to the world of Demon Slayer Tamagotchi! This compact digital pet allows you to raise and train your own Demon Slayer character. Your training methods will influence the character's growth and evolution into various Breath users. This manual provides essential information for setting up, operating, and maintaining your device.

SETUP

Unboxing

Carefully remove your Tamagotchi Nano from its packaging. Ensure all components are present: the Tamagotchi device and its attached chain.

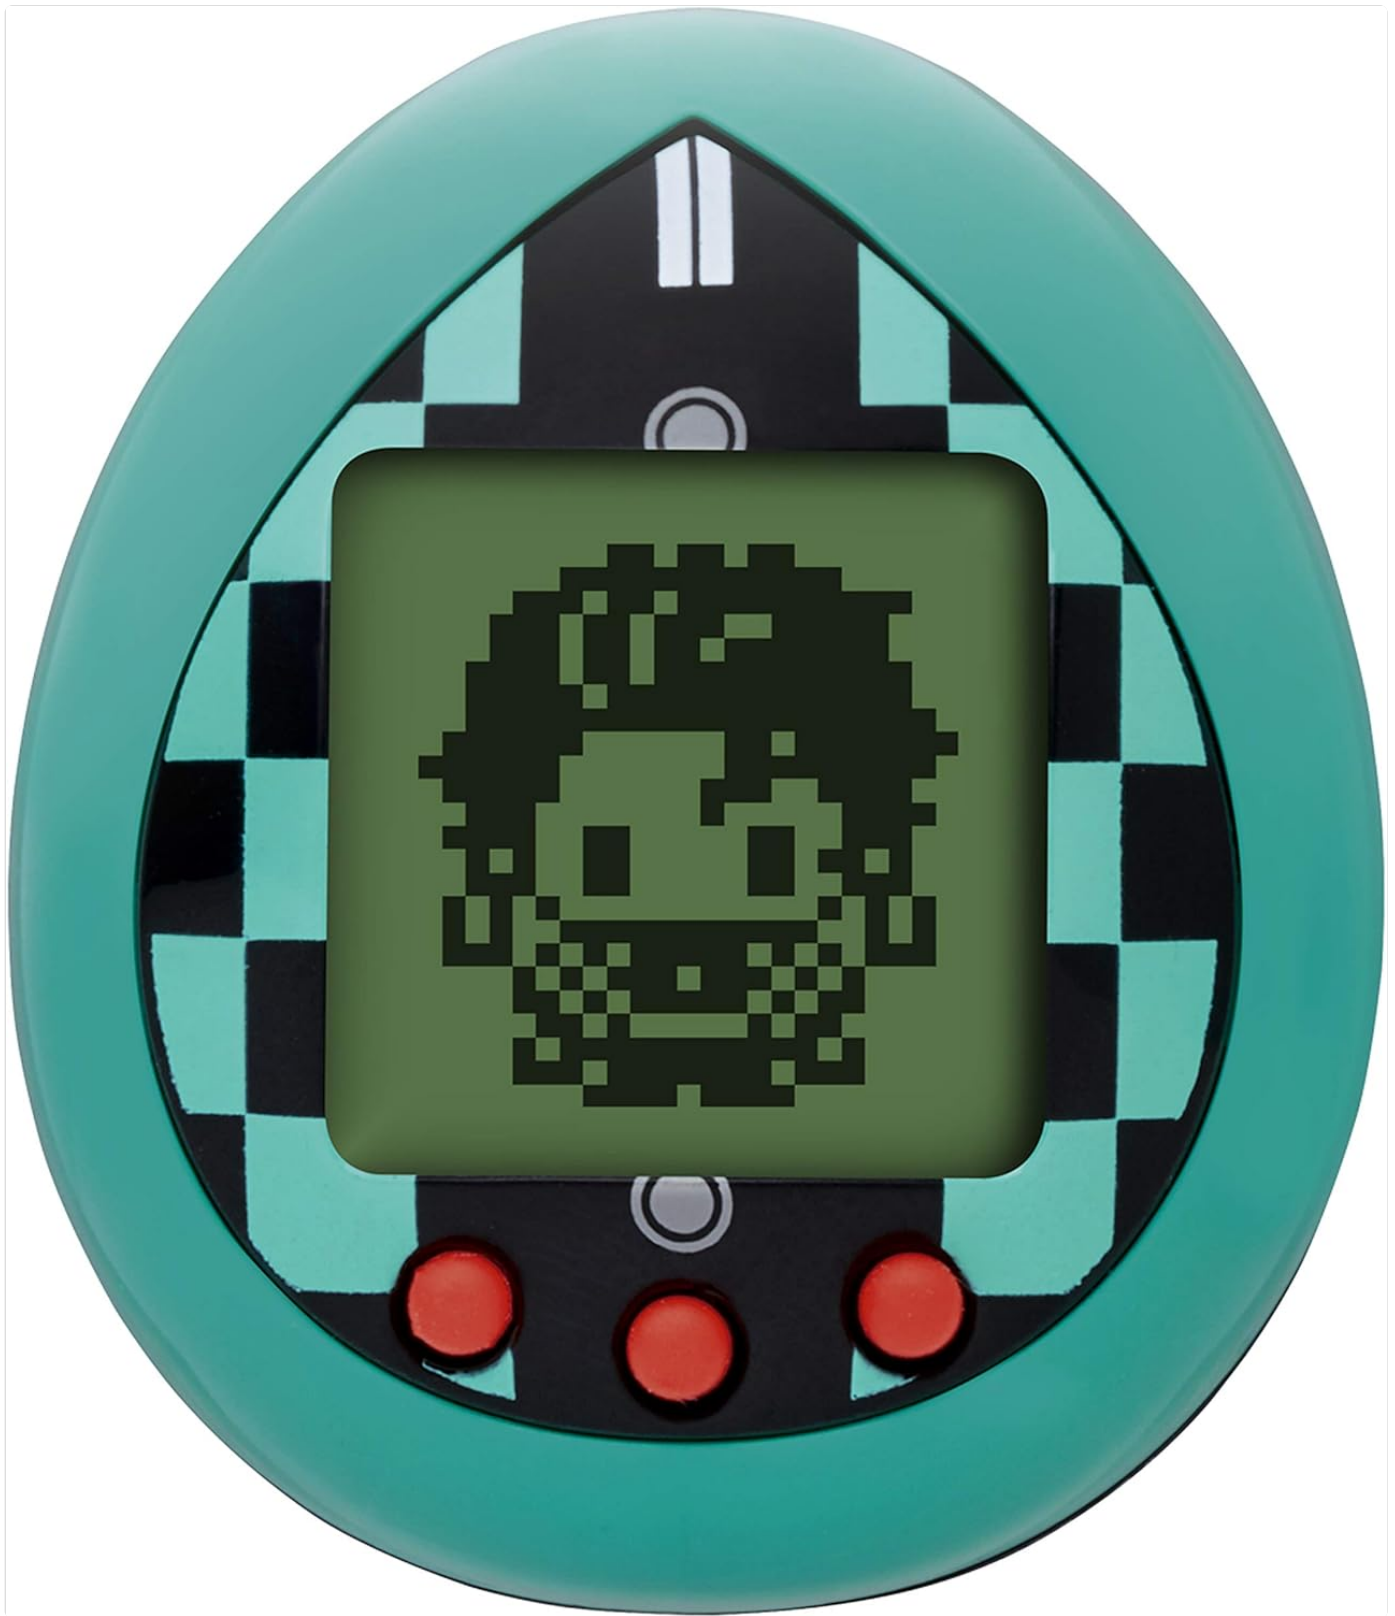


Figure 1: Front view of the Tamagotchi Nano Tanjirotchi device.

Battery Installation

Your Tamagotchi Nano comes with pre-installed batteries. To activate the device, locate the small plastic pull-tab protruding from the side or back of the unit. Gently pull this tab out completely. The screen should then activate.







Figure 2: Side view illustrating the battery activation pull tab.

The device requires 2 x LR44 (1.5V) batteries for operation. When replacing batteries, ensure correct polarity (+ and - signs). Do not mix old and new batteries, or alkaline and rechargeable batteries.

Initial Setup

Upon activation, you may need to set the time. Use the 'A' button to select options, 'B' button to confirm, and 'C' button to cancel or go back. Follow the on-screen prompts to complete the initial setup.

OPERATING YOUR TAMAGOTCHI NANO

Basic Controls

- **Button A (Left):** Selects menu options and cycles through choices.
- **Button B (Middle):** Confirms selections and performs actions.
- **Button C (Right):** Cancels actions, returns to previous screen, or acts as a "home" button.

Character Care

Your Demon Slayer character requires regular care to grow and thrive. Monitor their needs by checking the status screen. Key care actions include:

- **Feeding:** Provide your slayer with rice balls when hungry or green tea when in a bad mood. Access these options through the main menu.
- **Playing Games:** Engage your character in three different mini-games to keep them happy and aid in their training.
- **Responding to Events:** Demons may appear, requiring you to quickly press the first button to defeat them. Neglecting these events or training can lead to your slayer becoming injured. Ensure you treat any injuries promptly to prevent further decline.

Training and Evolution

The growth and evolution of your Demon Slayer character are directly influenced by your training methods and care. By consistently feeding, playing, and responding to their needs, you can guide them to evolve into various powerful Breath users. Experiment with different training approaches to discover all possible character evolutions.

MAINTENANCE

Cleaning

To clean your Tamagotchi Nano, gently wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the screen or casing.

Battery Replacement

When the screen dims or the device stops responding, it may be time to replace the batteries. The Tamagotchi Nano uses 2 x LR44 (1.5V) batteries. To replace them:

1. Carefully open the battery compartment cover on the back of the device.
2. Remove the old batteries.

3. Insert two new LR44 (1.5V) batteries, ensuring the correct "+" and "-" signs are aligned.
4. Replace the battery compartment cover securely.
5. Press the "RESET" button (usually a small recessed button) if the device does not power on automatically. Note: Resetting the device will restart your character's progress.





Figure 3: Back view with battery compartment details.

TROUBLESHOOTING

If you encounter issues with your Tamagotchi Nano, try the following steps:

- **No Display/Power:** Ensure the battery pull-tab has been completely removed. If already removed, try replacing the batteries with new ones.
- **Unresponsive Buttons:** Press the "RESET" button on the back of the device. This will restart the device and your character's progress.
- **Character Injury/Death:** If your slayer becomes injured due to neglect, treat the injury promptly by selecting the appropriate option in the menu. Failure to treat injuries can lead to the character's demise, requiring a reset to start a new character.
- **No Backlight:** This model does not feature a backlight. Ensure you are playing in a well-lit environment.

SPECIFICATIONS

Feature	Detail
Model Number	88426
Item Weight	1.44 ounces (0.04 Kilograms)
Product Dimensions	1.5 x 1.1 x 1.35 inches
Screen Size	0.95 Inches
Power Source	Battery Powered
Battery Type	2 x LR44 batteries
Material	Plastic
Age Range (Recommended)	6 years and up
UPC	045557884260
Manufacturer	Bandai America
Release Date	January 1, 2021

WARRANTY AND SUPPORT

For warranty information and product support, please refer to the official Tamagotchi website or contact Bandai America customer service. Keep your proof of purchase for any warranty claims.

You can also visit the [Official Tamagotchi Store on Amazon](#) for more information and products.

© 2025 Tamagotchi. All rights reserved.