

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZONKO](#) /

› [ZONKO 10.1-inch Android Tablet User Manual](#)

ZONKO K115

ZONKO 10.1-inch Android Tablet User Manual

Model: K115

1. INTRODUCTION

Thank you for choosing the ZONKO 10.1-inch Android Tablet. This manual provides essential information on how to set up, operate, and maintain your device. Please read this manual thoroughly before using your tablet to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

2.1 Device Layout

The ZONKO 10.1-inch Android Tablet features a sleek design with intuitive controls. Familiarize yourself with the various ports, buttons, and cameras for seamless operation.



Figure 2.1: Front view of the ZONKO 10.1-inch Android Tablet, showcasing its display and slim bezels.

2.2 Key Features

- **Display:** 10.1-inch 1280x800 IPS HD Display for vibrant visuals.
- **Performance:** Quad-Core Processor for smooth multitasking.
- **Memory & Storage:** 2GB RAM + 32GB internal storage, expandable up to 128GB via microSD card.
- **Connectivity:** Supports 3G phone calls, Dual SIM cards, and 2.4G Wi-Fi.
- **Cameras:** 2MP front camera and 5MP rear camera.
- **Battery:** 6000mAh built-in rechargeable battery for extended use.
- **Navigation:** Built-in GPS for accurate location services.
- **Operating System:** Android 9 Pie.



Figure 2.2: Visual representation of the tablet's core features, including connectivity, memory, and display size.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your tablet. Connect the provided USB cable to the tablet's charging port and the other end to a power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

3.2 Inserting SIM and MicroSD Cards

Your tablet supports two SIM cards and one MicroSD card for expanded storage. Locate the card slot on the side of the tablet.

1. Gently open the card slot cover.
2. Insert the SIM cards (Nano-SIM or Micro-SIM, depending on your model) into the designated SIM1 and SIM2 slots with the gold contacts facing down.
3. Insert the MicroSD card into the TF card slot until it clicks into place.

4. Close the card slot cover securely.



Figure 3.1: Illustration of SIM and MicroSD card insertion into the tablet's dedicated slots.

3.3 Powering On/Off

- **To Power On:** Press and hold the Power button until the ZONKO logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select 'Power off'.
- **To Restart:** Press and hold the Power button until the power options menu appears, then select 'Restart'.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The tablet uses a capacitive touchscreen. Use the following gestures:

- **Tap:** To select an item or open an app.

- **Tap & Hold:** To access context menus or move icons.
- **Swipe:** To scroll through pages or lists.
- **Pinch:** To zoom in or out on images and web pages.

4.2 Network Connectivity

4.2.1 Wi-Fi Connection

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi ON.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted, then tap **Connect**.

4.2.2 3G Phone Call & Mobile Data

With a valid SIM card inserted, your tablet can make phone calls and access mobile data.

- **Phone Calls:** Open the 'Phone' app, dial the number, and tap the call icon.
- **Mobile Data:** Go to **Settings > Network & internet > Mobile network**. Ensure 'Mobile data' is enabled.

4.3 Camera Usage

The tablet is equipped with a 2MP front camera and a 5MP rear camera. Open the 'Camera' app to capture photos and videos. You can switch between front and rear cameras using the icon on the screen.

4.4 GPS Navigation

The built-in GPS allows for location tracking and navigation. Use pre-installed map applications or download your preferred navigation apps from the Google Play Store.



Figure 4.1: The tablet's screen showing a detailed GPS navigation interface.



Figure 4.3: The tablet being used for multimedia consumption, specifically music streaming.

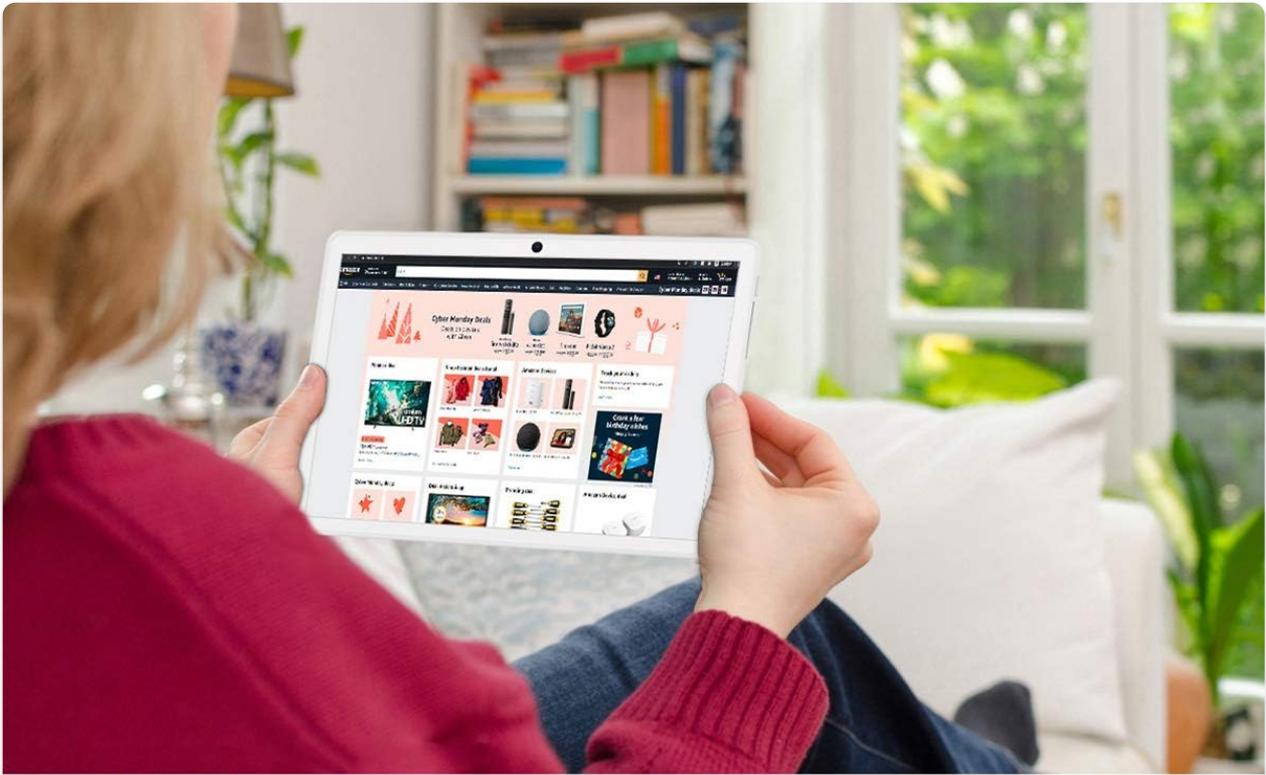


Figure 4.4: Examples of the tablet's versatile use for communication and entertainment.

5. MAINTENANCE

5.1 Battery Care

The tablet is equipped with a 6000mAh battery, providing 6-8 hours of mixed-use. To maximize battery life:

- Avoid extreme temperatures.
- Do not let the battery drain completely before recharging regularly.
- Use the original charger or a certified compatible charger.

6000 mAh Battery

Up to 8H Entertainment



Figure 5.1: Visual representation of the tablet's 6000mAh battery capacity and estimated usage time.

5.2 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

5.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

6. TROUBLESHOOTING

If you encounter issues with your ZONKO tablet, try the following solutions:

- **Tablet not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **Screen frozen:** Press and hold the Power button for about 10-15 seconds to force a restart.
- **Wi-Fi connection issues:** Restart your tablet and Wi-Fi router. Ensure you are within range and have entered the correct password.
- **Apps crashing:** Clear the app's cache (Settings > Apps & notifications > App info > [App Name] >

Storage & cache > Clear cache). If the problem persists, reinstall the app.

- **Slow performance:** Close unnecessary background apps, clear cache, or consider a factory reset (backup your data first).

7. SPECIFICATIONS

Feature	Specification
Model Number	K115
Operating System	Android 9 Pie
Screen Size	10.1 Inches
Screen Resolution	1280x800 IPS HD
Processor	1.3 GHz Quad Core (MediaTek)
RAM	2 GB SDRAM DDR3
Internal Storage	32 GB
Expandable Storage	Up to 128GB (MicroSD)
Rear Camera	5 MP
Front Camera	2 MP
Wireless Type	802.11bgn (2.4G Wi-Fi)
Cellular Connectivity	3G (Dual SIM support)
Battery Capacity	6000mAh Lithium Polymer
Item Weight	1.76 pounds
Product Dimensions	9.69 x 6.65 x 0.2 inches
Color	Silver

8. WARRANTY AND SUPPORT

ZONKO products are designed for reliability and performance. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official ZONKO website. Keep your purchase receipt as proof of purchase for warranty claims.