

Deerma DEM-VC01

Deerma VC01 Cordless Vacuum Cleaner User Manual

Model: DEM-VC01

1. PRODUCT OVERVIEW

The Deerma VC01 is a versatile 2-in-1 cordless vacuum cleaner designed for efficient cleaning of various surfaces. It can be easily transformed from a stick vacuum to a handheld unit, offering flexibility for different cleaning tasks. Its lightweight design and Type-C quick charging capability make it convenient for daily use.


5 vacuum combinations, **2** vacuum modes, **1**kg ultra-light weight, can be held with one hand, and can be easily lifted, clean high places without effort



Image: The Deerma VC01 vacuum cleaner demonstrating its multiple configurations, including stick and handheld modes, highlighting its adaptability for different cleaning needs.

2. PRODUCT COMPONENTS

Familiarize yourself with the components included in your Deerma VC01 package:

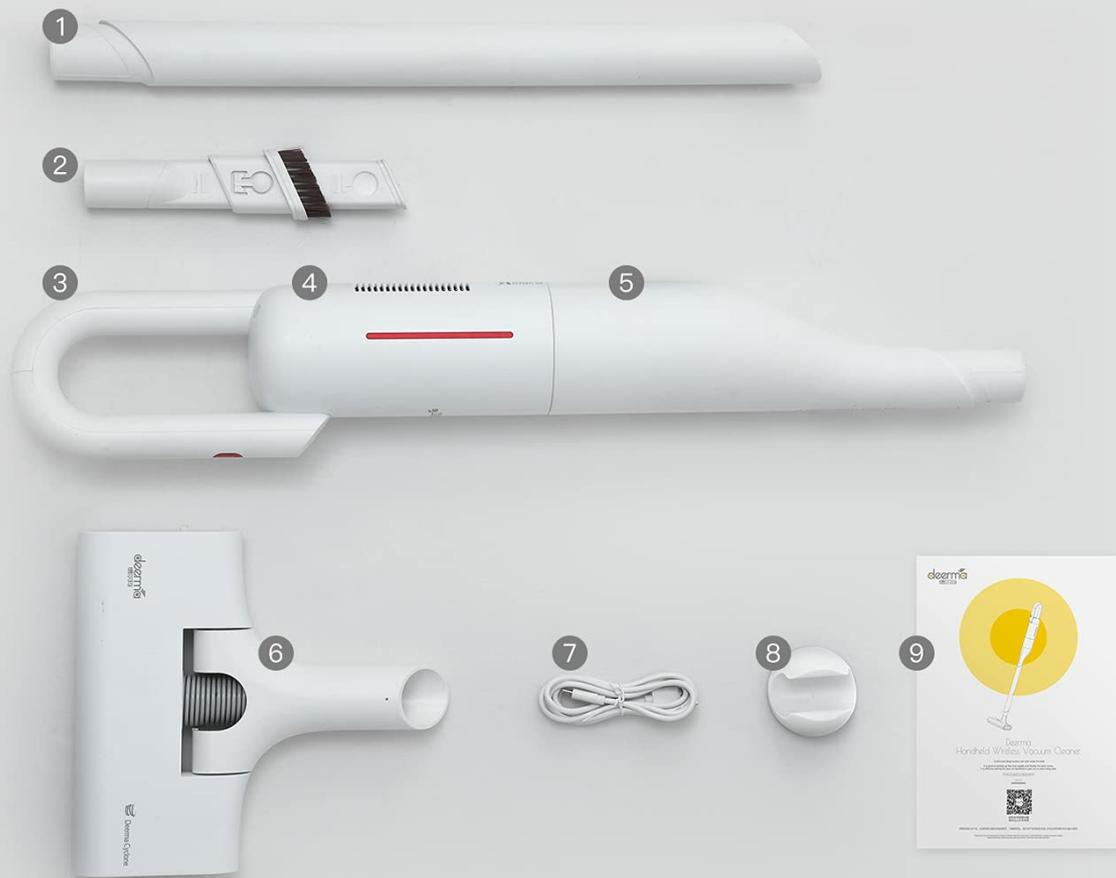

- | | | |
|--------------------|----------------------------|----------------|
| 1 Telescoping wand | 2 2 in 1 slit nozzle/brush | 3 Handle |
| 4 Filter | 5 Dust Cup | 6 floor nozzle |
| 7 Type-C | 8 Silicone Bracket | 9 Manual |

Image: An exploded diagram showing all parts of the Deerma VC01 vacuum cleaner, each numbered for easy identification.

- 1. Telescoping Wand:** Extends reach for floor cleaning and high areas.
- 2. 2-in-1 Slit Nozzle/Brush:** Combines a crevice tool and a brush for versatile cleaning of tight spaces and delicate surfaces.
- 3. Handle:** Ergonomic grip for comfortable use.
- 4. Filter:** Part of the triple filtration system, captures fine dust.
- 5. Dust Cup:** Collects dirt and debris.
- 6. Floor Nozzle:** Main attachment for cleaning floors and carpets.
- 7. Type-C Charging Cable:** For recharging the vacuum's battery.
- 8. Silicone Bracket:** For convenient wall-mounted storage.
- 9. User Manual:** This instruction guide.

3. SETUP AND INITIAL USE

3.1 Assembly

- **For Stick Vacuum:** Connect the telescoping wand to the main vacuum body, then attach the floor nozzle to the other end of the wand.
- **For Handheld Vacuum:** Attach the 2-in-1 slit nozzle/brush directly to the main vacuum body.

3.2 Charging the Battery


Before first use, fully charge the vacuum cleaner. The device uses a Type-C interface for charging.

- Connect the Type-C charging cable to the charging port on the vacuum cleaner.
- Plug the other end of the cable into a compatible USB power adapter (not included) or a power bank.
- A full charge typically takes approximately 3 hours. The indicator lights will show charging status.
- Note: An iPhone adapter is not supported for charging this device.

Type-C interface , easy to carry and charge without socket, can be directly plugged into the computer, power bank charge.



3 hrs full charge

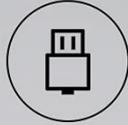

USB charging



*** iPhone adapter is not supported**

***EASY TO POUR DUST
WASHABLE FILTER
CAN BE REUSED***

The whole machine is easy to disassemble and assemble, and the dust cup and filter can be washed and replaced.



Image: The Deerma VC01 vacuum cleaner connected to a Type-C charging cable, illustrating the charging process. The image also shows the dust cup being emptied.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Mode Selection

- Press the power button to turn the vacuum cleaner on. It will start in Standard mode.
- Press the power button again to switch to Strong mode for increased suction.
- Press the power button a third time to turn the vacuum cleaner off.

4.2 Using Attachments

- **Floor Nozzle:** Ideal for cleaning hard floors, tiles, and low-pile carpets.
- **2-in-1 Slit Nozzle/Brush:** Use the crevice tool for narrow gaps, corners, and edges. Slide the brush down for cleaning upholstery, keyboards, or delicate surfaces.

4.3 Cleaning Tips

- For optimal performance, move the vacuum cleaner slowly over the surface.
- The vacuum's design allows it to lay flat, making it easy to clean under furniture and cabinets.

Triple filtration system 200% filtering filter area

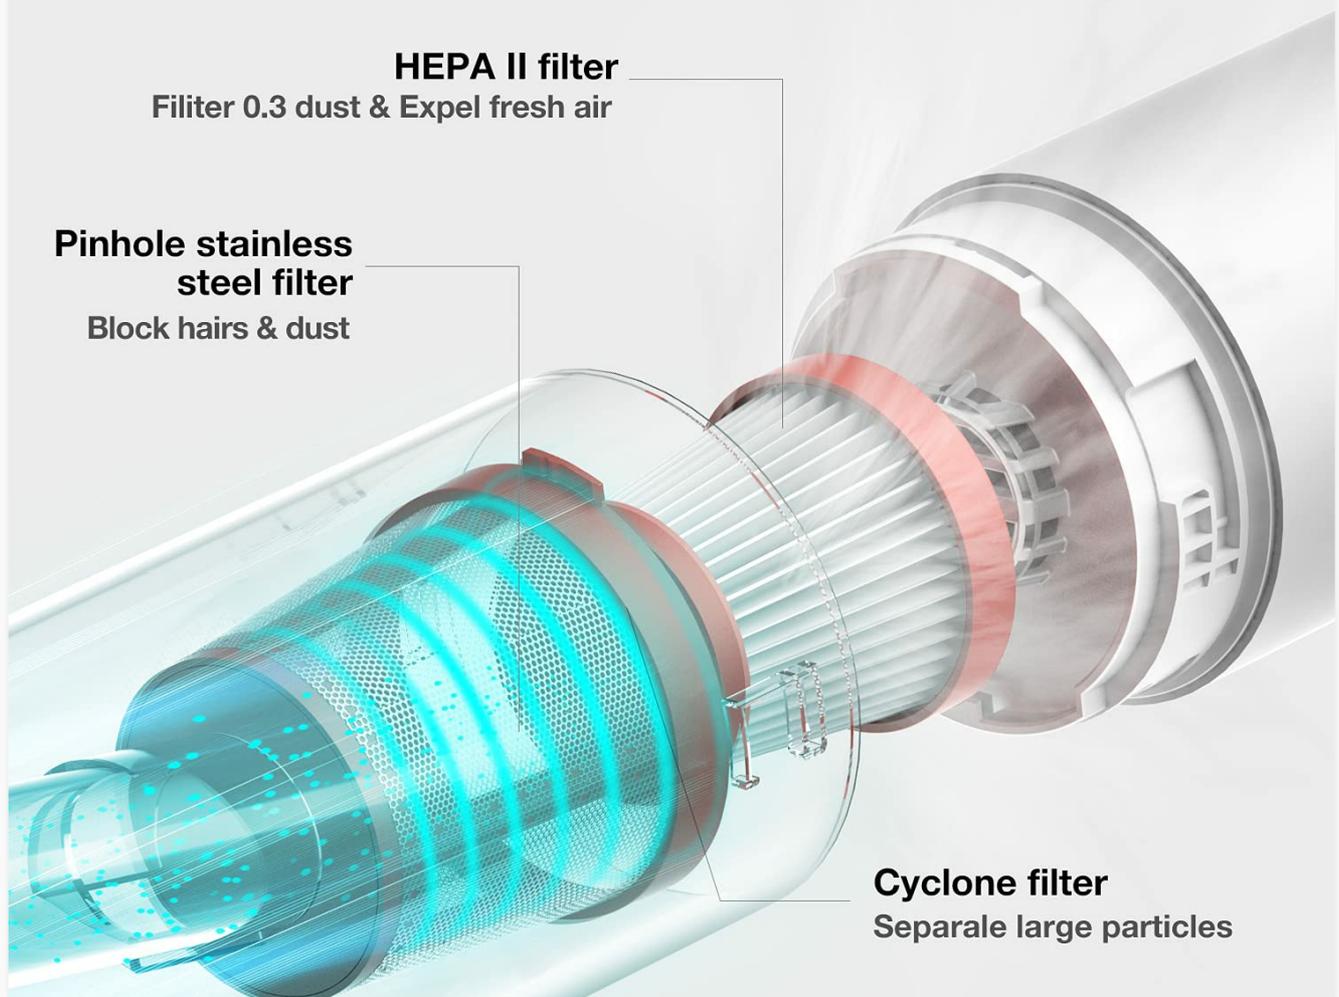


Image: The Deerma VC01 vacuum cleaner positioned flat to demonstrate its ability to clean effectively under low-clearance furniture.



- **Silicone wall bracket**

Easy to place

- **2 in 1**

2 in 1 slit nozzle/brush, suitable for home slits, cars, etc.



Image: The Deerma VC01 vacuum cleaner mounted on its silicone wall bracket for storage, and a close-up showing the 2-in-1 nozzle being used to clean tight spaces.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Cup

- The dust cup should be emptied regularly, especially when it appears full.
- To empty, detach the dust cup from the main body and pour out the collected debris.

5.2 Cleaning the Filter

The Deerma VC01 features a triple filtration system, including a washable filter.

- Remove the filter from the dust cup.

- Rinse the filter under running water until clean.
- Allow the filter to air dry completely before reinserting it into the dust cup. Do not use the vacuum with a wet filter.
- The entire machine is designed for easy disassembly, allowing the dust cup and filter to be washed and replaced as needed.



VC01 Cordless Vacuum Cleaner

Red Dot Design Award winner shape

Type-c USB charging

2.2lb ultra lightweight

30min long running time

8500Pa suction



DX115c vacuum cleaner

Ordinary design

Wired charging

4.5lb

20min

14kPa suction

Image: A detailed diagram illustrating the triple filtration system of the Deerma VC01, showing the Pinhole stainless steel filter, HEPA II filter, and Cyclone filter components.

6. TROUBLESHOOTING

If you encounter issues with your Deerma VC01, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum not turning on	Low battery; improper assembly.	Charge the battery fully. Ensure all components are securely connected.

Problem	Possible Cause	Solution
Reduced suction power	Full dust cup; clogged filter; blockage in nozzle/wand.	Empty the dust cup. Clean or replace the filter. Check and clear any blockages.
Battery not charging	Loose cable connection; incompatible adapter.	Ensure Type-C cable is firmly connected. Use a compatible USB power adapter (not iPhone adapter).
Short battery life	Operating in Strong mode; battery not fully charged.	Use Standard mode for longer runtime. Ensure battery is fully charged before use.

7. SPECIFICATIONS

Key technical specifications for the Deerma VC01 Cordless Vacuum Cleaner:

Feature	Specification
Brand	Deerma
Model Number	DEM-VC01
Special Feature	Lightweight, 2-in-1 Function
Filter Type	Cartridge (Washable)
Cordless	Yes
Dust Cup Capacity	600 Milliliters
Wattage	125 Watts
Maximum Suction	8500 Pa
Recommended Use	Indoor, Hard Floor, Upholstery
Form Factor	Handheld, Stick
Color	White
Product Dimensions	76L x 19W x 15H Centimeters
Noise Level	82 Decibels
Battery Life	Up to 30 Minutes (Standard mode)
Item Weight	2.28 Kilograms
Connectivity	USB Type-C
Battery Type	Lithium Metal (1 included)

Feature	Specification
Battery Capacity	2200 Milliampere Hour (mAh)
Voltage	14.4 Volts

8. WARRANTY AND SUPPORT

For warranty claims, technical support, or service inquiries, please contact the manufacturer or authorized importer.

- **Manufacturer:** Guangdong Deerma Technology Co., Ltd.
- **Importer (India):** ALLIN IMPEX SERVICES PVT LTD, C-38, SECTOR-63, NOIDA, UP, 201301
- **Importer Contact:** MOB: 9313132789, EMAIL: sales@allinexporters.com

Please retain your proof of purchase for any warranty-related requests.