



Manuals.plus /

› AIBORS /

› AIBORS Hair Clippers User Manual

## AIBORS H8112

# AIBORS Professional Hair Clippers User Manual

Brand: AIBORS | Model: H8112

### 1. INTRODUCTION

Thank you for choosing the AIBORS Professional Hair Clippers. This device is designed for efficient and precise hair and beard trimming, suitable for both personal and professional use. Its ergonomic design, powerful motor, and versatile cutting lengths make it an ideal grooming tool for men, and its low noise operation also makes it suitable for children.

Please read this manual thoroughly before first use to ensure proper operation, maintenance, and to maximize the lifespan of your clipper.



Image: The AIBORS Professional Hair Clippers, showcasing the main unit and the included set of guide combs.

## 2. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- 1 x AIBORS Hair Clipper Unit
- 1 x Blade Guard
- 6 x Limit Combs (Guide Combs):
  - 3mm
  - 4.5mm
  - 6mm
  - 10mm
  - 13mm

- 19mm
- 1 x Cleaning Brush
- 1 x Charging Cord
- 1 x User Instruction Manual (this document)

### 3. PRODUCT FEATURES

- **All-in-One Grooming:** Versatile for hair cutting, beard trimming, and suitable for all ages, including children, due to its quiet operation and safety design.
- **Powerful Motor:** Equipped with an 8W heavy-duty D.C. motor, delivering 6200 RPM for fast, efficient, and snag-free cutting.

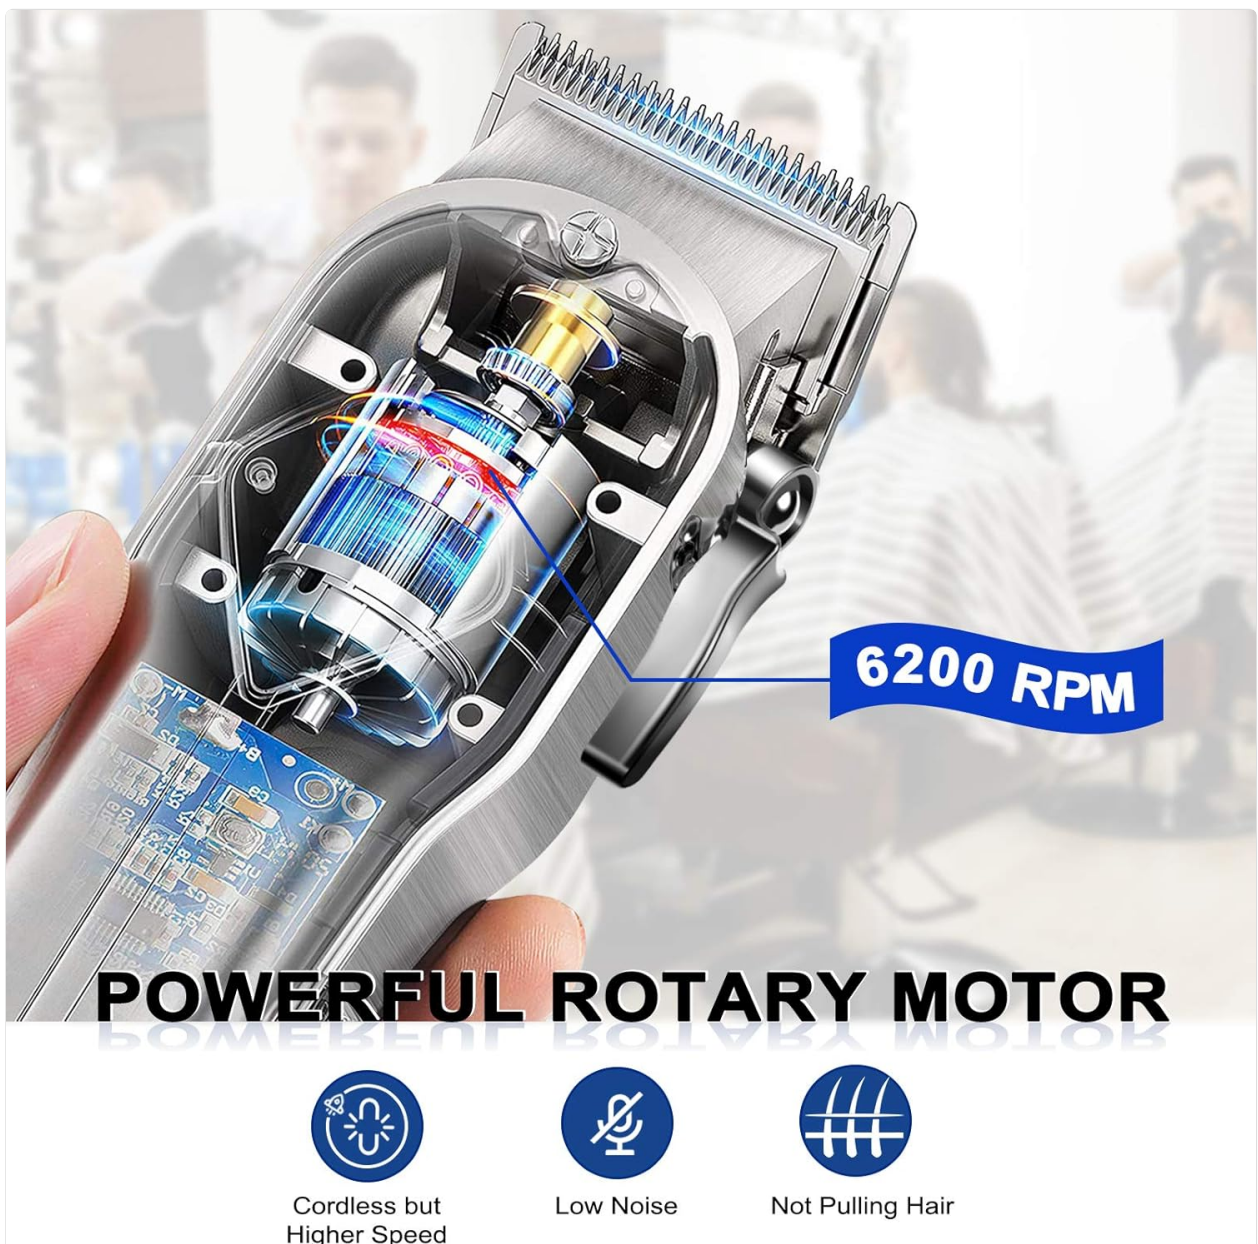


Image: Internal view highlighting the powerful rotary motor, indicating 6200 RPM for efficient cutting.

- **Cordless & Corded Operation:** Offers flexibility for use with or without the charging cord. Ideal for travel or home use.



## **CORDLESS AND CORDED OPERATION CONVENIENT FOR HOME OR TRIP USE**



Image: Demonstrates the clipper's versatility for both corded and cordless operation, suitable for different grooming needs.

- **Long-Lasting Lithium Battery:** Features a built-in 2000mAh lithium-ion battery, providing up to 150-180 minutes of continuous running time after a 3-hour full charge. An LED display indicates battery power.

# ▶ **2000mAh** **Lithium Batter** ◀

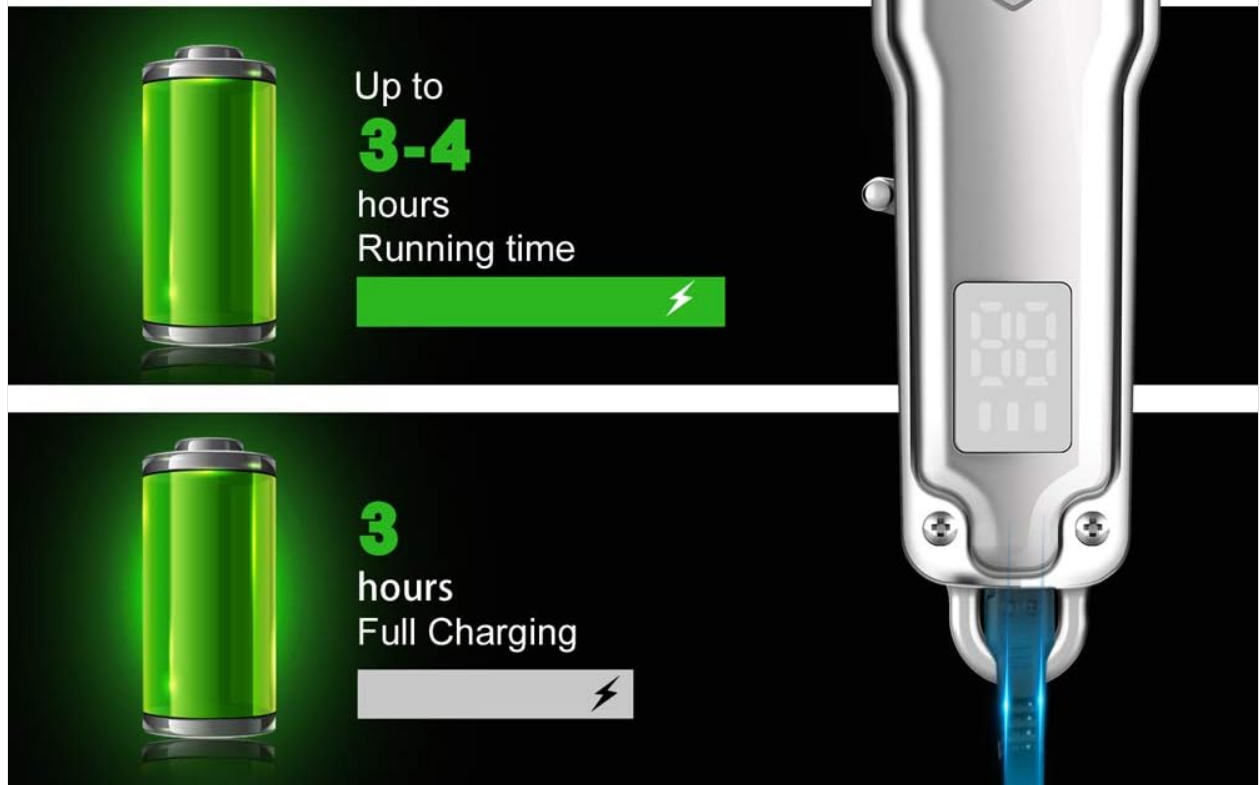


Image: Visual representation of the 2000mAh lithium battery, illustrating its charging time (3 hours) and running time (up to 180 minutes).

- **Self-Sharpening Stainless Steel Blade:** High-quality carbon-steel precision blades designed for smooth, fast, and precise cutting. The blade can be washed directly with water for easy cleaning.



Image: Detailed view of the clipper's blade, highlighting features like no hair clogging, sharpness, and anti-overheating design.

- **Adjustable Cutting Lengths:** Features an adjustable taper lever (0.8mm to 2.0mm) and includes 6 guide combs (3mm, 4.5mm, 6mm, 10mm, 13mm, 19mm) for a wide range of cutting lengths.

# MULTIPLE LENGTH CONTROL



6 Guide Combs and Four Adjustment Lever



3mm



4mm



6mm



10mm



13mm



19mm



0.5/1.3/2.0/2.5

Taper Lever



X6

Guide Combs

## 0.5-25mm Length

Image: Illustrates the various guide comb sizes and the adjustable taper lever for precise length control.

- **Low Noise Design:** Engineered to operate with minimal noise, ensuring a comfortable grooming experience for both adults and children.



**LOW NOISE DESIGN**

-  Strong Power
-  Quiet Design
-  Safe & Durable



40dB 60dB 70dB 80dB 90dB



Image: The clipper in use on a child, demonstrating its quiet operation and suitability for sensitive users.

## 4. SETUP

### 4.1. Charging the Clipper

Before first use, fully charge the clipper for approximately 3 hours. The LED display will indicate the battery level. A full charge provides up to 150-180 minutes of cordless operation.

1. Ensure the clipper is turned off.
2. Connect the charging cord to the charging port at the bottom of the clipper.
3. Plug the other end of the charging cord into a suitable power outlet.
4. The LED display will show the charging progress. Once fully charged, the display will indicate 100%.
5. Disconnect the charging cord once charging is complete.

# HUGE CAPACITY BATTERY



Image: The clipper connected to its charging cord, illustrating the charging process and the "HUGE CAPACITY BATTERY" feature.

## 4.2. Attaching and Removing Guide Combs

The clipper comes with 6 guide combs to achieve various cutting lengths.

1. **To Attach:** Align the guide comb with the clipper blade and push it firmly until it clicks into place. Ensure it is securely fastened.
2. **To Remove:** Gently pull the guide comb upwards from the back, away from the blade.

Always ensure the clipper is turned off before attaching or removing guide combs.

## 5. OPERATING INSTRUCTIONS

### 5.1. Basic Operation

- **Power On/Off:** Locate the power switch on the clipper body. Slide it up to turn the clipper ON and down to

turn it OFF.

- **Corded Use:** If the battery is low or you prefer corded operation, connect the charging cord to the clipper and a power outlet. The clipper can be used while charging.

## 5.2. Adjusting Cutting Length

The AIBORS clipper offers precise length control through its adjustable taper lever and interchangeable guide combs.

- **Taper Lever:** The lever on the side of the clipper allows fine adjustment of the cutting length from 0.8mm to 2.0mm without a guide comb. Move the lever up for a shorter cut and down for a longer cut.
- **Guide Combs:** For longer lengths, attach the desired guide comb (3mm, 4.5mm, 6mm, 10mm, 13mm, 19mm). The guide comb ensures a consistent cutting length across the area.

## 5.3. Hair and Beard Trimming Tips

For best results, follow these general guidelines:

- Ensure hair is clean and dry before trimming.
- Always start with a longer guide comb than you think you need, and gradually reduce the length if necessary.
- Hold the clipper flat against the head or face, moving it against the direction of hair growth.
- Use smooth, overlapping strokes for an even cut.
- For detailing or outlining, remove the guide comb and use the bare blade with the taper lever adjusted to your preference.



Image: A man receiving a haircut using the AIBORS Hair Clipper, demonstrating typical usage.

## 6. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the life of your AIBORS Hair Clippers.

### 6.1. Cleaning

1. **Turn Off:** Always ensure the clipper is turned off and unplugged before cleaning.
2. **Remove Guide Comb:** Detach any attached guide comb.
3. **Brush Away Hair:** Use the provided cleaning brush to remove loose hairs from the blades and the clipper body.
4. **Rinse Blades:** The stainless steel blade can be rinsed under running water. Do NOT submerge the entire clipper unit in water.

5. **Dry Thoroughly:** After rinsing, allow the blade to air dry completely or gently pat dry with a soft cloth before reattaching or storing.

## 6.2. Blade Care

For continued smooth operation, it is recommended to periodically oil the blades.

- Keep blades clean and free of hair debris.
- Avoid dropping the clipper, as this can damage the blades.

## 6.3. Storage

Store the clipper in a cool, dry place, away from direct sunlight and moisture. Use the blade guard to protect the blades when not in use. The inverted suspension design allows for convenient hanging storage.

## 7. TROUBLESHOOTING

If you encounter any issues with your AIBORS Hair Clippers, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully. Ensure the charging cord is properly connected to both the clipper and the power outlet.
Clipper does not hold a charge or battery life is short.	Battery degradation over time.	Ensure the clipper is charged for the recommended 3 hours. If the issue persists after prolonged use, the battery may be nearing the end of its lifespan.
Clipper pulls hair or cuts unevenly.	Blades are dull, dirty, or not properly aligned. Hair buildup in blades.	Clean the blades thoroughly using the cleaning brush and rinse under water. Ensure no hair is trapped. If blades are dull, consider professional sharpening or replacement if available.
Clipper makes unusual noise.	Hair debris or foreign object in the motor area. Lack of lubrication.	Turn off and unplug the clipper. Carefully inspect the blade area for any obstructions and clean thoroughly.

If the problem persists after attempting these solutions, please contact AIBORS customer support for further assistance.

## 8. SPECIFICATIONS

Feature	Detail
Model	H8112
Brand	AIBORS
Power Source	Corded Electric, Battery Powered
Battery Type	2000mAh Lithium-ion
Charging Time	Approx. 3 hours
Running Time	Up to 150-180 minutes
Motor Power	8W, 6200 RPM
Blade Material	Carbon Steel
Body Material	Alloy Steel
Adjustable Taper Lever	0.8mm - 2.0mm
Guide Comb Sizes	3mm, 4.5mm, 6mm, 10mm, 13mm, 19mm
Color	Silver
Dimensions (Package)	22.86 x 21.34 x 6.35 cm
Weight (Package)	670 g
Recommended Uses	Beard trimming, Hair trimming, Body grooming

## 9. WARRANTY AND SUPPORT

AIBORS is committed to providing high-quality products. For information regarding warranty coverage, please refer to the product packaging or the retailer's terms of sale at the time of purchase. Specific warranty details are not provided in this manual.

For technical support, troubleshooting assistance beyond what is covered in this manual, or inquiries about replacement parts, please contact AIBORS customer service through the retailer's platform or the official AIBORS website.

We value your feedback and are here to help ensure your satisfaction with your AIBORS Hair Clippers.