

[Manuals.plus](#) /

› [Hotpoint](#) /

› Hotpoint 8kg Wash 6kg Dry Integrated Washer Dryer User Manual

Hotpoint BIWDHG861484

Hotpoint 8kg Wash 6kg Dry Integrated Washer Dryer User Manual

Model: BIWDHG861484

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Hotpoint 8kg Wash 6kg Dry Integrated Washer Dryer. Please read it thoroughly before installation, use, or maintenance.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent electric shock, fire, or injury.

- Ensure the appliance is properly earthed.
- Do not allow children to play with the appliance.
- Unplug the appliance before cleaning or maintenance.
- Do not install in areas exposed to direct sunlight or extreme temperatures.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washer dryer.

Unpacking

Carefully remove all packaging materials. Check for any damage during transit. Retain packaging for future transport if needed.



Image: Front view of the Hotpoint Integrated Washer Dryer, showing the control panel and drum door.

Location Requirements

The appliance should be installed on a firm, level floor. Ensure adequate ventilation around the unit.

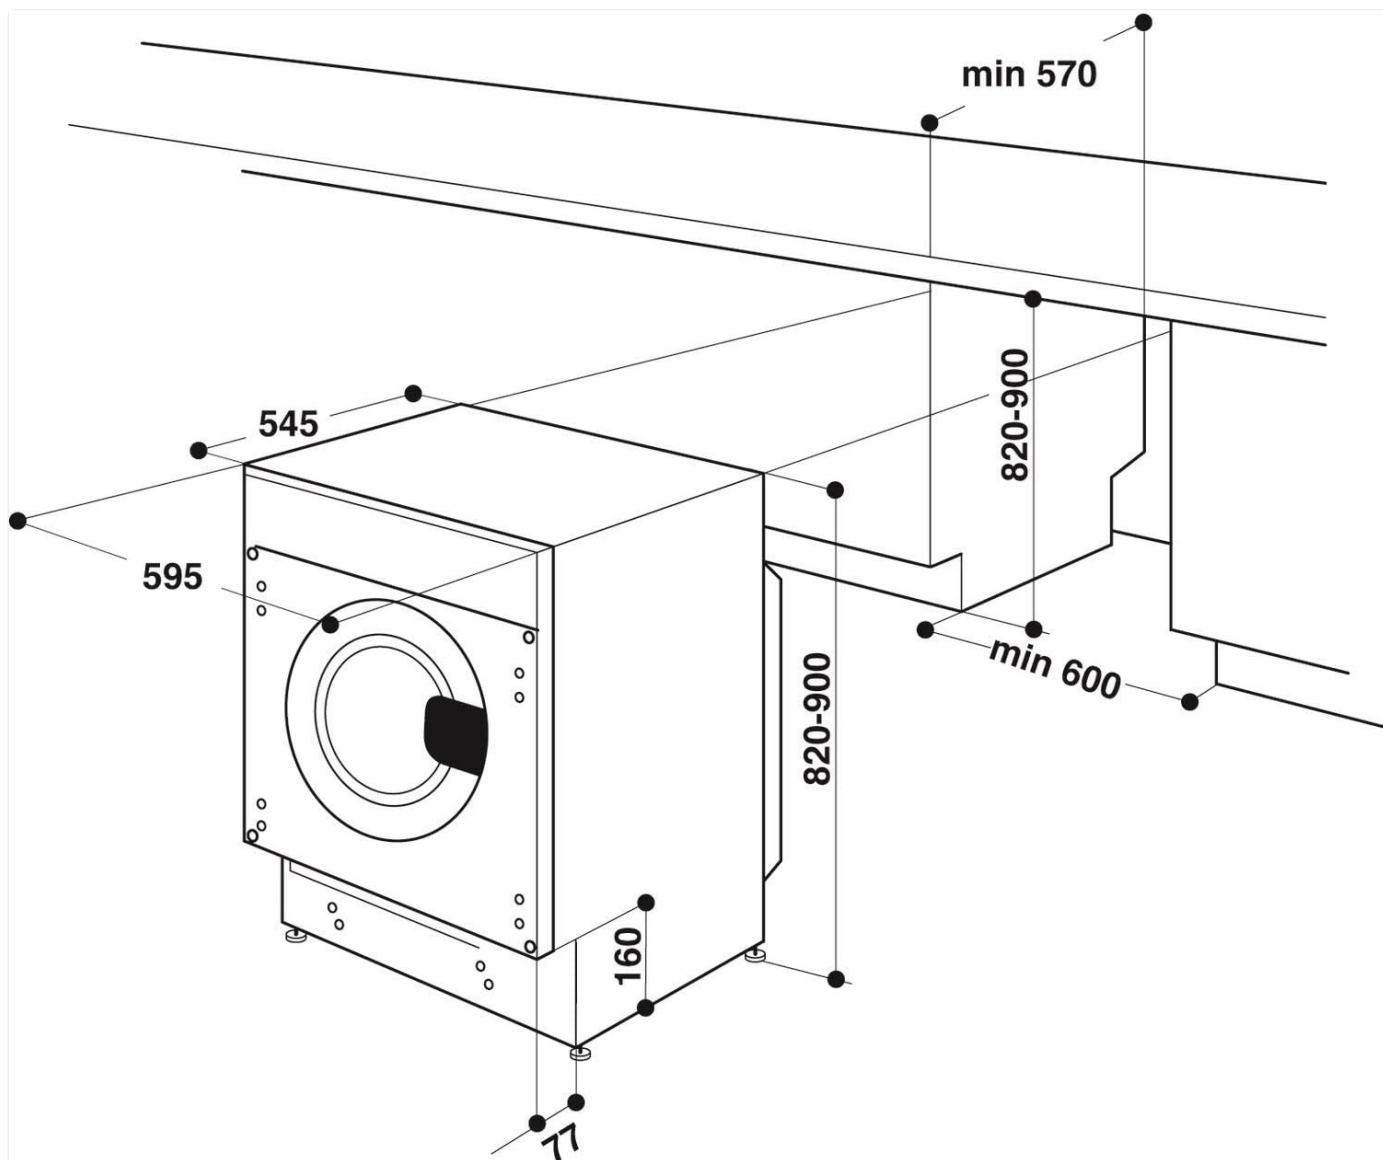


Image: Technical diagram illustrating the dimensions and clearance requirements for installation of the washer dryer.

Connecting Water and Drainage

Connect the water inlet hose to a cold water tap. Ensure the drain hose is securely fitted to a suitable drain pipe.

Electrical Connection

Connect the power cord to a grounded electrical outlet. Refer to the specifications for voltage requirements.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and available wash/dry programs.



Image: Close-up view of the Hotpoint washer dryer control panel, showing the program dial and digital display.

Control Panel Overview

The control panel features a program selector knob, a digital display, and various function buttons.



Image: Detailed view of the control panel, highlighting the temperature, spin speed, start delay, and drying settings buttons.

Loading Laundry

Do not overload the drum. For optimal results, ensure laundry is evenly distributed.

Adding Detergent

Use appropriate detergent for your laundry type and water hardness. Refer to detergent packaging for dosage.

Program Selection

Turn the program selector knob to choose the desired wash or wash & dry cycle.

Hotpoint

INVERTERMOTOR

8+6Kg



ANTI CREASE

- 1 Mixed Wash&Dry
- 2 Shirts and T-shirts
- 3 Pre Iron
- 4 Steam Refresh



CLEAN+

- 5 Cotton
- 6 Synthetics
- 7 Anti Stain Quick
- 8 Anti Stain 40°
- 9 White
- 10 Eco 40-60



SPECIALS

- 11 20°C
 - 12 Delicates
 - 13 Wool 
 - 14 Rapid 30'
-  Rinse & Spin
-  Spin & Drain

Image: Close-up of the program list on the control panel, detailing various wash and dry cycles such as Anti Crease, Clean+, and Specials.

Available Programs:

- **Anti Crease:** Mixed Wash&Dry, Shirts and T-shirts, Pre Iron, Steam Refresh.
- **Clean+:** Cotton, Synthetics, Anti Stain Quick, Anti Stain 40°, White, Eco 40-60.
- **Specials:** 20°C, Delicates, Wool, Rapid 30', Rinse & Spin, Spin & Drain.

Starting a Cycle

Press the 'Start/Pause' button to begin the selected program. The display will show the remaining time.

Delay Start Function

Use the 'Delay Start' button to postpone the start of a cycle for up to 24 hours.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the life of your appliance.

Cleaning the Detergent Dispenser

Remove and clean the detergent dispenser regularly to prevent residue buildup.

Cleaning the Door Seal

Wipe the door seal after each wash to remove lint and moisture, preventing mold growth.

Cleaning the Filter

Periodically clean the pump filter to ensure proper drainage and prevent blockages.

Descaling

Depending on water hardness, descale the appliance every few months using a suitable descaling product.

TROUBLESHOOTING

This section provides solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Water not draining	Drain hose kinked or blocked; Pump filter clogged.	Check and straighten drain hose; Clean the pump filter.
Excessive vibration	Appliance not level; Transit bolts not removed; Uneven load.	Adjust leveling feet; Remove transit bolts (if applicable); Redistribute laundry.
Clothes are too creased after drying	Overloaded dryer; Incorrect drying program; Clothes left in dryer too long.	Reduce load size; Select appropriate drying program; Remove clothes promptly after cycle.

If the issue persists, contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Value
Model Number	BIWDHG861484
Wash Load Capacity	8 kg
Drying Load Capacity	6 kg
Dimensions (H x W x D)	820 x 595 x 557 mm
Item Weight	66 kg
Energy Efficiency Class	A
Annual Energy Consumption	1088 kWh/year
Annual Water Consumption	12000 litres
Noise Level (Washing)	45 dB
Maximum Rotational Speed	1400 RPM
Drum Material	Stainless Steel
Included Components	Power Cord

WARRANTY AND SUPPORT

Your Hotpoint Washer Dryer comes with a manufacturer's warranty.

Warranty Information

Standard 1 year manufacturer's guarantee against parts and labour, and an additional 10 year parts guarantee, provided the product has been registered.

Customer Support

For technical assistance, spare parts, or to register your product, please visit the official Hotpoint website or contact their customer service line. Keep your model number (BIWDHG861484) and purchase details ready.

