

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Globber 452-200-3

Globber GO.UP Sporty Lights User Manual

Model: 452-200-3

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Globber GO.UP Sporty Lights scooter. Please read this manual thoroughly before first use and retain it for future reference.

The Globber GO.UP Sporty Lights is a versatile product designed to adapt to your child's growth, transforming from a ride-on with parental handle to a balance bike, and finally to a three-wheel scooter.

SAFETY INFORMATION

Always ensure your child wears appropriate safety gear, including a helmet, knee pads, and elbow pads, when using the product. Adult supervision is required at all times.

- Do not use on public roads or in heavy traffic.
- Ensure all locking mechanisms are securely engaged before use.
- Regularly check for loose parts or damage.
- Maximum weight limit: 50 kg.
- Recommended age: 12 months+ (ride-on), 3+ years (scooter).

PRODUCT OVERVIEW

The Globber GO.UP Sporty Lights features a durable aluminum frame and light-up wheels. It transitions through three main modes:

1. **Ride-on Mode:** For young children (12 months+) with a seat and parental handle.
2. **Balance Bike Mode:** With the parental handle removed, allowing children to propel themselves while seated.
3. **3-Wheeled Scooter Mode:** For children aged 3 years and up, with height-adjustable handlebars.





Image: The Globber GO.UP Sporty Lights in its ride-on configuration, featuring a seat, parental handle, and light-up wheels. This mode is suitable for younger children.

SETUP AND ASSEMBLY

Assembly requires minimal tools and should be performed by an adult.

1. Ride-on Mode Assembly

- Attach the seat to the scooter deck, ensuring it clicks securely into place.
- Insert the parental handle into the designated slot at the rear of the seat.
- Ensure the footrest is properly positioned if desired.



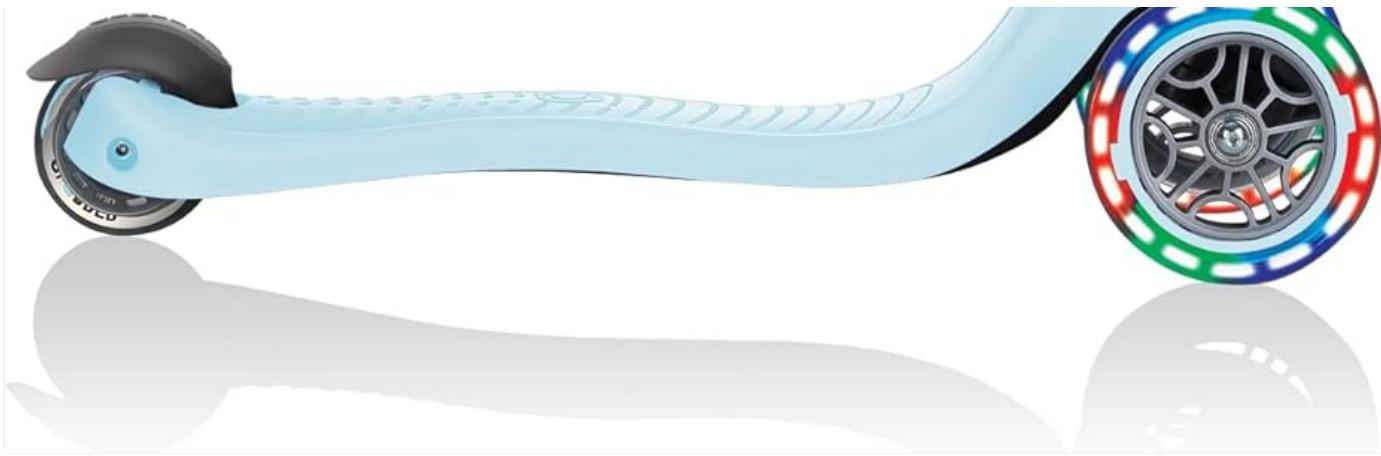


Image: Side view of the Globber GO.UP Sporty Lights in ride-on mode, highlighting the seat and the low footboard design.

2. Balance Bike Mode Conversion

- Remove the parental handle by pressing the release button and pulling it out.
- The seat remains attached, allowing the child to use their feet for propulsion.

3. 3-Wheeled Scooter Mode Conversion

- Remove the seat by pressing the release button and lifting it off.
- Insert the T-bar handlebar into the front steering column until it locks.
- Adjust the handlebar height to the appropriate level for the child (see Operating section).





Image: The Globber GO.UP Sporty Lights configured as a three-wheeled scooter, showing the height-adjustable T-bar handlebar.

OPERATING INSTRUCTIONS

Steering (Scooter Mode)

The Globber GO.UP Sporty Lights uses a lean-to-steer mechanism. To turn, the rider leans their body in the desired direction, which causes the wheels to turn. This helps develop balance and coordination.

Braking (Scooter Mode)

To brake, press down firmly on the rear fender brake with your foot.

Handlebar Height Adjustment

- Locate the quick-release clamp on the T-bar stem.
- Open the clamp, adjust the handlebar to the desired height, ensuring the child can comfortably reach the grips.
- Close the clamp securely. Ensure the handlebar is firmly locked in place before each use.





Image: Front view of the Globber GO.UP Sporty Lights in scooter mode, showcasing the T-bar handlebar and the light-up front wheels.

MAINTENANCE

- **Cleaning:** Wipe down the scooter with a damp cloth. Avoid harsh chemicals.
- **Wheels:** The light-up wheels are powered by motion. No batteries are required for the lights. Regularly check wheels for wear and tear.
- **Bearings:** Keep bearings clean and free of dirt. Avoid riding through water or sand.
- **Fasteners:** Periodically check all screws, bolts, and quick-release mechanisms to ensure they are tight and secure.
- **Storage:** Store the scooter in a dry place away from direct sunlight and extreme temperatures.



Image: Side view of the Globber GO.UP Sporty Lights in scooter mode, showing the full profile of the deck and wheels.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wheels not lighting up.	Insufficient speed or motion.	Ensure the wheels are spinning fast enough. The lights are motion-activated and do not require batteries.
Handlebar feels loose.	Quick-release clamp not fully secured.	Open the quick-release clamp, push the handlebar down firmly, and re-secure the clamp.
Seat not locking into place.	Improper alignment or obstruction.	Ensure the seat post is correctly aligned with the slot and press down firmly until it clicks. Check for any debris.

SPECIFICATIONS

Model: 452-200-3

Product Dimensions: 59.5 x 14.5 x 24.5 cm

Weight: 3.5 kg

Material: Aluminum

Color: Pastel Blue

Recommended Age: 12 months+ (ride-on/balance bike), 3+ years (scooter)

Maximum Weight Limit: 50 kg

Special Features: Seat, Height-adjustable handlebars, Motion-activated light-up wheels

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Globber website or contact your local distributor. Keep your proof of purchase for any warranty claims.

Globber Official Website: www.globber.com



© 2024 Globber. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.