

## DASH DAPP155GBAQ06

# DASH Turbo Pop Popcorn Maker Instruction Manual

Model: DAPP155GBAQ06

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended household use.
- Do not leave the appliance unattended while in use.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

## 2. PRODUCT OVERVIEW

The DASH Turbo Pop Popcorn Maker is a hot air popcorn popper designed for quick and efficient popcorn preparation without the need for oil. It features a compact design, an 8-cup capacity, and a removable butter melting tray.



Image: The DASH Turbo Pop Popcorn Maker in Aqua, showcasing its sleek design.

### Components:

- Popcorn Maker Base
- Top Cover with Chute
- Measuring Cup / Butter Melting Tray

### Specifications:

Feature	Detail
Brand	DASH
Model Number	DAPP155GBAQ06

Color	Aqua
Capacity	8 Cups
Power Source	Electric
Dimensions	6.1"L x 5.2"W x 6.4"H
Item Weight	1.5 Pounds

### 3. SETUP

Before first use, wash the Top Cover and Measuring Cup in warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are dry before assembly.

1. Place the Popcorn Maker Base on a flat, stable, and heat-resistant surface.
2. Snap the Top Cover onto the Body of the Popcorn Maker.
3. Ensure the Measuring Cup is placed securely on top of the Top Cover.

Video: This video demonstrates the easy assembly of the Dash Hot Air Popcorn Popper, including attaching the top cover and placing it on a stable surface.

### 4. OPERATING INSTRUCTIONS

#### How to Pop Popcorn:

1. Ensure the Popcorn Maker is unplugged and cool.
2. Remove the Measuring Cup and Top Cover.
3. Using the provided Measuring Cup (1/3 cup capacity), add between half to all of a Measuring Cup's worth of standard-sized popcorn kernels into the popping chamber. **Caution:** Do not overfill, as this can cause the maker to malfunction or burn popcorn. Do not use small or artisanal kernels, as they may fly out unpopped.
4. Replace the Top Cover and Measuring Cup.
5. Place a large, heat-resistant bowl under the popcorn chute to collect the popped corn.
6. Plug the Popcorn Maker into a standard electrical outlet.
7. Press the Power Button to turn the appliance ON. Popping will begin shortly.
8. Once popping has stopped (approximately 2-3 minutes), press the Power Button to turn the appliance OFF and unplug it from the outlet.

# HEALTHY & FRESH IN 3 EASY STEPS!



Image: A visual guide showing the three easy steps for making popcorn: adding kernels, adding butter (to the melting tray), and pressing the start button.

Video: This video provides a step-by-step demonstration on how to use the Dash Turbo Pop Popcorn Maker, from adding kernels to the final popped product.

## Melting Butter:

The Measuring Cup doubles as a butter melting tray. You can melt butter while the popcorn is popping.

1. Place a tablespoon of butter into the Measuring Cup.
2. Place the Measuring Cup back onto the Top Cover. The heat from the popping chamber will melt the butter.
3. Once the popcorn is done and the butter is melted, carefully remove the Measuring Cup (it will be hot!) and drizzle the melted butter over your popcorn.



Image: The popcorn maker in action, with freshly popped corn flowing into a bowl, demonstrating the hot air popping process.

## 5. MAINTENANCE

Proper cleaning ensures the longevity and optimal performance of your popcorn maker.

## Cleaning:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wash the Top Cover and Measuring Cup in warm, soapy water. Rinse thoroughly and dry. These parts are not dishwasher safe.
3. Wipe the exterior of the Popcorn Maker Base with a cool, damp cloth. Do not immerse the base in water or any other liquid.
4. Do not use abrasive cleaners or scouring pads, as they may scratch the surfaces.

## POPCORN ANYTIME!

Whether for a movie night, snacks on the go, or entertaining friends and family, fresh popcorn is only minutes away!



Image: The popcorn maker highlighting its compact size and 8-cup capacity, along with the measuring cup feature.

## 6. STORAGE

Store the popcorn maker in a safe, dry place when not in use. Ensure it is clean and completely dry before storing.

## 7. TROUBLESHOOTING

If you encounter any issues with your DASH Turbo Pop Popcorn Maker, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Popcorn not popping or few kernels popped	Old or dry kernels; insufficient quantity of kernels; appliance not heating properly.	Use fresh, standard-sized kernels. Ensure enough kernels are added (at least half of the measuring cup). If kernels are old, try soaking them in water overnight (1 tsp water per jar of kernels, shake, seal, let sit overnight) to rehydrate. Ensure the appliance is plugged in and turned on.
Popcorn flying out of the chute unpopped	Kernels are too small or light; too many kernels added.	Use standard-sized popcorn kernels. Do not overfill the popping chamber; adhere to the recommended quantity (half to full measuring cup).
Popcorn burning	Too few kernels; appliance running too long after popping stops.	Ensure at least half of the measuring cup of kernels is used. Turn off and unplug the appliance immediately once popping has ceased.
Appliance not turning on	Not plugged in; power outlet issue.	Check if the power cord is securely plugged into a working outlet. Try a different outlet.

## 8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official DASH website or contact their customer service directly. Keep your purchase receipt for warranty claims.

- **3-Year Protection Plan:** Available for \$5.99 (one-time).
- **4-Year Protection Plan:** Available for \$7.99 (one-time).
- **Complete Protect:** Monthly billing for \$16.99, covers all eligible past and future purchases.

Return Policy: 30-day refund/replacement policy by Amazon.

For further assistance, visit the [DASH Store on Amazon](#).