

[Manuals.plus](#) /

› [KitchenAid](#) /

› KitchenAid Cordless Variable Speed Hand Blender - KHBBV53, Onyx Black Onyx Black Cordless Blender

KitchenAid KHBBV53OB

KitchenAid Cordless Variable Speed Hand Blender - KHBBV53 Instruction Manual

Brand: KitchenAid

Model: KHBBV53OB

INTRODUCTION

The KitchenAid Cordless Variable Speed Hand Blender offers the power and performance you expect from KitchenAid, without the limitations of a cord. Designed with a powerful rechargeable lithium-ion battery, this hand blender provides optimal runtime and performance, allowing you to cook wherever, whatever, and however you choose. It is capable of blending up to 25 bowls of soup on a full charge, with a quick charge option for immediate use.





Figure 1: KitchenAid Cordless Variable Speed Hand Blender (Onyx Black) with charging cable.

SETUP AND ASSEMBLY

Before first use, ensure all components are present and clean.

Unboxing and Initial Charge

1. Carefully remove all components from the packaging: the hand blender motor body, 8" blending arm, blending jar with lid, pan guard, and charger.
2. Before initial use, fully charge the hand blender's lithium-ion battery. Connect the charger to the charging port located on the top of the motor body. The battery indicator light will signal charging status. A full charge typically takes 2 hours or less.



Figure 2: All included components of the KitchenAid Cordless Hand Blender: motor body, blending arm, blending jar with lid, pan guard, and charger.

Assembling the Blending Arm

To attach the 8" blending arm to the motor body, align the blending arm with the motor body and twist until it securely locks into place. Ensure it is firmly attached before operation.





Figure 3: Detailed view of the removable 8" blending arm with its 4-point stainless steel blade design.

Your browser does not support the video tag.

Video 1: Official KitchenAid video demonstrating the assembly, charging, and use of the Cordless Variable Speed Hand Blender.

OPERATING INSTRUCTIONS

The KitchenAid Cordless Hand Blender is designed for intuitive and flexible use, allowing you to blend various ingredients with ease.

Basic Operation

- Ensure the blending arm is securely attached to the motor body.
- Immerse the blending arm into the ingredients. For best results, ensure the blade is fully submerged.
- Press the variable speed trigger switch to begin blending. The more pressure applied to the trigger, the faster the blade will spin, giving you greater control over your recipe.
- The safety switch protects against accidental trigger movement. Always engage the safety switch when not actively blending.



Blends 25 bowls of soup on a full charge*



*Based on 12 ounce bowls (354 ml), 7 batches, Tomato Basil Soup

Figure 4: The cordless design allows for flexible use, such as blending directly in a pot on the stovetop.

Key Features for Blending

- **4-Point Stainless Steel Blade:** Designed to efficiently blend ingredients for smoothies, milkshakes, soups, hummus, and much more.
- **Removable Pan Guard:** Protect your cookware from scratches with the included U.S. patent-pending removable pan guard. Attach it to the blending arm before use when blending in pots or pans.
- **Variable Speed Trigger Switch:** Provides precise control over blending speed, from gentle stirring to powerful pureeing.

Blend, Mix and Puree with ease



4-Point Blade Design

For the perfect puree



Pan Guard

Helps protect cookware



Variable Speed

For greater flexibility and control

Figure 5: Visual representation of the 4-point blade, pan guard, and variable speed trigger for optimal blending.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your KitchenAid Hand Blender.

Cleaning Components

- Always unplug the charger and detach the blending arm from the motor body before cleaning.
- The blending arm, blending jar with lid, and pan guard are all dishwasher-safe for convenient cleaning.
- Wipe the motor body with a damp cloth. Do not immerse the motor body in water or other liquids.

TROUBLESHOOTING

If you encounter any issues with your KitchenAid Hand Blender, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Blender does not turn on.	Battery is depleted.	Charge the battery fully. The battery indicator light will signal when it's time to charge.
Blender stops during operation.	Overload protection activated.	Release the trigger, remove the blending arm from the ingredients, and allow the motor to cool for a few minutes before resuming. Reduce the load or add more liquid.
Ingredients are not blending smoothly.	Insufficient liquid or improper technique.	Add more liquid to the ingredients. Ensure the blade is fully submerged. Use an up-and-down motion for thorough blending.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	KitchenAid
Model Number	KHBBV53OB
Color	Onyx Black
Special Feature	Cordless
Capacity	1 Liters (Blending Jar)
Product Dimensions	2.5"D x 2.5"W x 16.3"H
Included Components	Blending Stick, Lid, Juice Container, Base (Blending Arm, Blending Jar with Lid, Pan Guard, Charger)
Power Source	Battery Powered (1 Lithium Ion battery included)
Number of Speeds	Variable (controlled by trigger)
Item Weight	2.44 pounds

WARRANTY INFORMATION

KitchenAid products typically come with a limited warranty covering defects in material or workmanship. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official KitchenAid website.

CUSTOMER SUPPORT

For further assistance, product registration, or to view the full user manual, please visit the official KitchenAid website or contact their customer service department. You can find contact information and frequently asked questions on their support page.
Official User Manual (PDF): [Download Here](#)

Visit the KitchenAid Store: [KitchenAid Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08BQQZGT8>

More documents and user manuals: <https://manuals.plus/>