

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Frigelux](#) /

› [Frigelux RFDP246RRA++ Retro Vintage Refrigerator Instruction Manual](#)

Frigelux RFDP246RRA++

Frigelux RFDP246RRA++ Retro Vintage Refrigerator Instruction Manual

Model: RFDP246RRA++

Frigelux

Official Frigelux Product Documentation

1. IMPORTANT SAFETY INFORMATION

Read all instructions before using the appliance to ensure safe operation and prevent injury or damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded electrical outlet. Do not use extension cords or adapters. Disconnect power before cleaning or maintenance.
- **Ventilation:** Maintain adequate ventilation around the appliance to prevent overheating. Do not block ventilation openings.
- **Flammable Materials:** Do not store explosive substances or flammable materials inside the appliance.
- **Children Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- **Disposal:** Dispose of the appliance according to local regulations for refrigerants and flammable blowing gas.

2. SETUP AND INSTALLATION

2.1 Unpacking

Carefully remove all packaging materials, including foam, tape, and protective films. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

2.2 Placement

Position the refrigerator on a firm, level surface away from direct sunlight, heat sources (e.g., oven, radiator), and extreme cold. Ensure sufficient space around the appliance for proper air circulation. The dimensions of the appliance are approximately **58 cm (Depth) x 55 cm (Width) x 167 cm (Height)**

The appliance is equipped with **3 adjustable feet** and **2 wheels** for easy positioning and leveling. Adjust the feet to ensure the refrigerator is stable and level, which is crucial for efficient operation and door alignment.



Image 1: Front view of the FrigeluX RFDP246RRA++ Retro Vintage Refrigerator in red.

2.3 Door Reversibility

The refrigerator doors are reversible, allowing them to open from either the left or right side to suit your kitchen layout. Consult a qualified technician or the full service manual for detailed instructions on reversing the doors.

2.4 Initial Cleaning

Before first use, clean the interior and all internal accessories with lukewarm water and a mild detergent. Wipe dry thoroughly.

2.5 Power Connection

After positioning and leveling, wait at least 2-4 hours before plugging the appliance into a dedicated, grounded electrical outlet. This allows the refrigerant to settle. The appliance operates on **240 Volts** and has a power consumption of **75 Watts**.

2.6 First Use

Once plugged in, set the temperature control to a medium setting and allow the refrigerator to cool for several hours (at least 4-6 hours) before loading it with food.

3. OPERATING INSTRUCTIONS

3.1 Temperature Control

The refrigerator features a **mechanical thermostat** for simple and precise temperature adjustment. Rotate the dial to select the desired cooling level. Higher numbers typically indicate colder temperatures.

3.2 Refrigerator Compartment

The refrigerator compartment has a volume of **194 Liters**. It includes **5 adjustable glass shelves**, **3 door balconies** for bottles and smaller items, and **1 vegetable crisper drawer** to keep produce fresh.



Image 2: Interior view showing glass shelves, door balconies, and vegetable crisper.

3.3 Freezer Compartment

The freezer compartment has a volume of **52 Liters** and is rated **4-star**, suitable for long-term storage of frozen foods. In case of a power outage, the freezer maintains autonomy for approximately **8 hours**.

3.4 Interior LED Lighting

The refrigerator is equipped with energy-efficient **LED lighting**, providing clear visibility of the contents.

3.5 Water Dispenser

This model includes a water dispenser feature. Refer to the full product manual for specific instructions on filling, using, and cleaning the water dispenser.

4. MAINTENANCE AND CLEANING

4.1 Cleaning the Interior

Regularly clean the interior with a solution of lukewarm water and a small amount of baking soda or mild detergent. Avoid abrasive cleaners. Remove shelves and drawers for thorough cleaning. Ensure the appliance is unplugged before cleaning.

4.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth and mild detergent. For the stainless steel components, use a specialized stainless steel cleaner. Keep the condenser coils at the back clean to maintain efficiency.

4.3 Defrosting

The refrigerator features an **automatic defrost system**, minimizing the need for manual defrosting in the refrigerator compartment. The freezer compartment may require occasional manual defrosting if ice buildup becomes excessive. Refer to the full manual for detailed defrosting procedures.

4.4 Power Saving Tips

- Do not place hot food directly into the refrigerator.
- Avoid opening the doors too frequently or for extended periods.
- Ensure door seals are clean and intact.
- Keep the condenser coils clean.
- The appliance has an energy efficiency rating of **Class E** with an annual energy consumption of **189 kWh**.

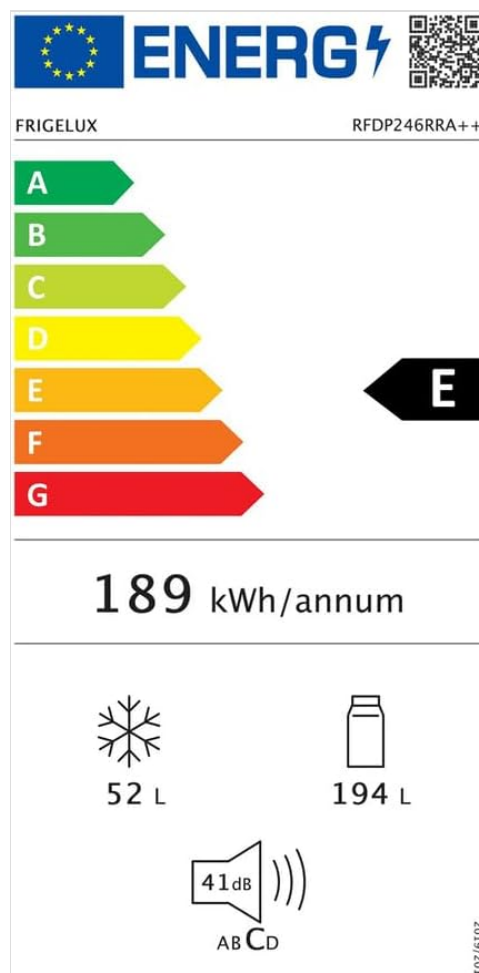


Image 3: Energy label indicating Class E efficiency and 189 kWh/annum consumption.

For more details, visit the EPREL database: <https://eprel.ec.europa.eu/qr/375159>

5. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

- **Appliance does not operate:** Check if the power cord is properly plugged in and if there is power to the outlet.
- **Temperature is not cold enough:** Ensure the thermostat setting is appropriate. Check if the doors are fully closed and not opened too frequently. Verify that the appliance is not overloaded with food.
- **Excessive noise:** Check if the appliance is level. Ensure no objects are vibrating against the back or sides.
- **Water on the floor:** Check if the drain hole is blocked or if the drip tray is overflowing.

If the problem persists after checking these points, contact customer support.

6. SPECIFICATIONS

Feature	Specification
Model Number	RFDP246RRA++
Brand	Frigelux
Total Capacity	246 Liters
Refrigerator Capacity	194 Liters
Freezer Capacity	52 Liters
Dimensions (L x W x H)	58 x 55 x 167 cm
Weight	46 Kilograms
Energy Efficiency Class	E
Annual Energy Consumption	189 kWh
Noise Level	41 dB
Defrost System	Automatic
Shelves	5 Glass Shelves
Drawers	1 (Vegetable Crisper)
Number of Doors	2
Door Reversibility	Yes
Voltage	240 Volts

Power	75 Watts
Material	Stainless Steel (trim/handles)
Special Features	Water Dispenser, Adjustable Shelves, Adjustable Feet, Wheels, LED Lighting
Spare Parts Availability	10 Years

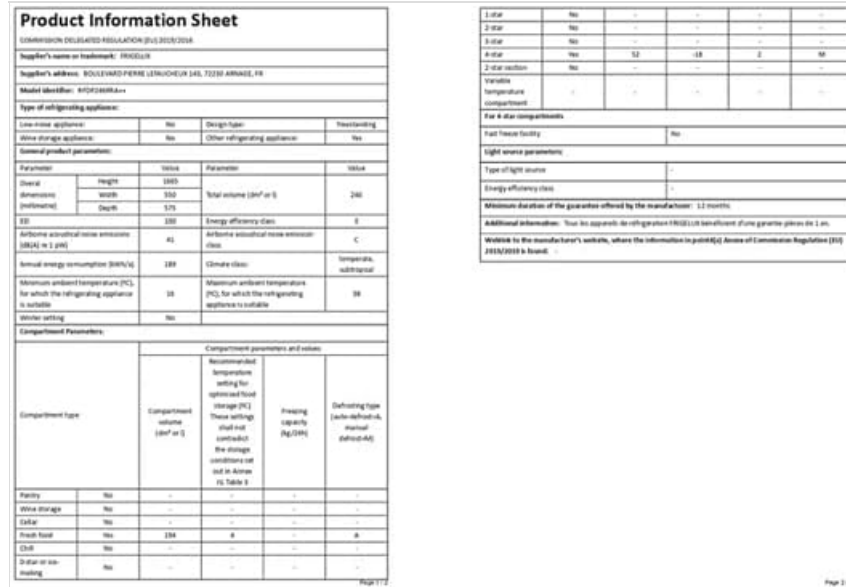


Image 4: Product Information Sheet with detailed technical data.

7. WARRANTY AND SUPPORT

This FrigeluX appliance comes with a manufacturer's warranty of **12 months** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance, warranty service, or to order spare parts, please contact your retailer or the official FrigeluX customer support. The manufacturer is **Frio Entreprise (Climadiff-Sommelière-FrigeluX)**.

For further information, you may refer to the official FrigeluX website or contact their customer service department. Contact details are typically found on the manufacturer's website or in your purchase documentation.