

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Toyomi](#) /

› [Toyomi TF 128S 12-inch Desk Fan User Manual](#)

## Toyomi TF 128S

# Toyomi TF 128S 12-inch Desk Fan User Manual

Model: TF 128S

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the fan from the power outlet before cleaning, servicing, or moving it.
- Do not insert fingers or any other objects through the grille when the fan is operating.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel for repair or replacement.
- Do not use the fan in wet or damp locations, such as bathrooms or laundry areas.
- Place the fan on a stable, flat surface to prevent it from tipping over.
- Keep the fan away from curtains, drapes, or any objects that may be drawn into the fan blades.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## PRODUCT OVERVIEW

---

The Toyomi TF 128S is a 12-inch desk fan designed to provide personal cooling in home or office environments. It features a compact design, multiple speed settings, and oscillation for wider air distribution.



**Figure 1:** Front view of the Toyomi TF 128S 12-inch Desk Fan. This image shows the fan's main body, protective grille, and base with control buttons.

## Components:

- **Fan Head:** Contains the motor and blades, protected by front and rear grilles.
- **Control Panel:** Located on the base, featuring push buttons for speed selection.
- **Oscillation Knob/Button:** Activates or deactivates the oscillation function.
- **Base:** Provides stability for the fan.
- **Power Cord:** For connecting to an electrical outlet.



**Figure 2:** Close-up view of the fan's protective grille and blades. This image highlights the design of the fan's safety grille and the internal

## SETUP

---

1. **Unpack:** Carefully remove the fan and all packaging materials from the box. Retain packaging for future storage or transport.
2. **Placement:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper airflow and oscillation. Avoid placing it near loose fabrics like curtains.
3. **Power Connection:** Ensure the fan is in the "OFF" position (all speed buttons disengaged). Plug the power cord into a standard electrical outlet (AC 220-240V, 50Hz).

*Note: The Toyomi TF 128S is typically pre-assembled and ready for use out of the box. No complex assembly is usually required.*

## OPERATING INSTRUCTIONS

---

The Toyomi TF 128S desk fan offers simple controls for customized cooling.

### 1. Power On/Off and Speed Selection:

- Locate the push buttons on the fan's base.
- Press the button corresponding to your desired speed:
  - **Speed 1:** Low airflow
  - **Speed 2:** Medium airflow
  - **Speed 3:** High airflow
- To turn the fan OFF, press the "0" or "OFF" button, or press the currently engaged speed button again until it disengages (depending on model design).

### 2. Oscillation Function:

- The fan features a 90-degree oscillation function to distribute air across a wider area.
- To activate oscillation, locate the oscillation knob (often on top of the motor housing) and pull it up, or press the dedicated oscillation button on the base.
- To stop oscillation and direct airflow in a fixed direction, push the knob down or press the oscillation button again.

### 3. Tilt Adjustment:

- The fan head can be tilted upward or downward to adjust the vertical angle of airflow.
- Gently hold the fan head and tilt it to the desired angle. The fan head should remain in position once released.

## MAINTENANCE

---

Regular cleaning helps maintain the fan's performance and extends its lifespan.

1. **Before Cleaning:** Always ensure the fan is unplugged from the power outlet before attempting any cleaning or maintenance.
2. **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.

3. **Grille and Blades:** Dust can accumulate on the grilles and fan blades. Use a vacuum cleaner with a brush attachment or a soft brush to remove dust from the grilles. For more thorough cleaning, the front grille may be removable (refer to specific instructions if provided with the product for grille removal). Ensure all parts are completely dry before plugging the fan back in.
4. **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

*Do not immerse the fan in water or any other liquid.*

## TROUBLESHOOTING

If you encounter issues with your Toyomi TF 128S fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in. Power outlet is not working. Speed button not engaged.	Ensure the power cord is securely plugged into a working electrical outlet. Test the outlet with another appliance. Press one of the speed buttons (1, 2, or 3) firmly.
Weak or no airflow.	Fan speed set too low. Grilles or blades are obstructed by dust.	Increase the fan speed by pressing a higher speed button. Unplug the fan and clean the grilles and blades as described in the Maintenance section.
Fan is making unusual noise.	Loose parts. Obstruction in the fan blades.	Unplug the fan and check for any loose components. Ensure there are no foreign objects caught in the fan blades or grilles. If the noise persists, discontinue use and contact customer support.
Oscillation not working.	Oscillation knob/button not engaged.	Ensure the oscillation knob is pulled up or the oscillation button is pressed to activate the function.

If the problem persists after trying these solutions, please contact Toyomi customer support.

## SPECIFICATIONS

<b>Model</b>	TF 128S
<b>Brand</b>	Toyomi
<b>Form Factor</b>	Table/Desk Fan
<b>Size</b>	12-inch
<b>Colour</b>	Grey
<b>Power Source</b>	Corded Electric
<b>Controller Type</b>	Button Control

<b>Number of Speeds</b>	3
<b>Special Features</b>	90 Degree Oscillation, Downward & Upward Tilt
<b>Recommended Use</b>	Cooling, Office, Workspace
<b>Included Components</b>	1 x Desk Fan

## WARRANTY AND SUPPORT

---

Toyomi products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Toyomi website.

If you require technical assistance, have questions about your product, or need to report a defect, please contact Toyomi customer support through their official channels. Please have your model number (TF 128S) and purchase details ready when contacting support.

**Manufacturer:** Toyomi

**Website:** [Visit the Toyomi Store on Amazon.sg](#) (for general brand information)