

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Holstein Housewares](#) /
- › [Holstein Housewares Interchangeable Non-Stick Multi-Maker Instruction Manual \(Model HH-09125008R\)](#)

### Holstein Housewares HH-09125008R

# Holstein Housewares Interchangeable Non-Stick Multi-Maker

Model: HH-09125008R

## INTRODUCTION

---

Thank you for choosing the Holstein Housewares Interchangeable Non-Stick Multi-Maker. This versatile appliance is designed to simplify your cooking experience, allowing you to prepare a variety of dishes such as waffles, paninis, and pancakes with ease. Its interchangeable plates and non-stick coating ensure convenient use and effortless cleaning. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance.



Image: The Holstein Housewares Multi-Maker in red and stainless steel, open to reveal a golden-brown waffle on the lower plate.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

## PRODUCT OVERVIEW

---

The Holstein Housewares Multi-Maker is designed for versatility and ease of use. It features interchangeable non-stick plates for various cooking tasks.

# MULTI-MAKER WITH INTERCHANGEABLE PLATES



## INCLUDES PLATES FOR WAFFLES, GRILL AND GRIDDLE

INCLUYE PLACAS DE WAFLES, GRILL Y PLANCHA



## NON-STICK COATING FOR EASY CLEANING

COBERTURA ANTIADHERENTE PARA FACIL LIMPIEZA



## SPACE-SAVING VERTICAL STORAGE

ALMACENAJE VERTICAL PARA AHORRAR ESPACIO



## BUILT-IN SAFETY LOCK

CERRADURA DE SEGURIDAD



Image: A visual representation of the Multi-Maker's key features, including its interchangeable plates, non-stick coating, vertical storage capability, and safety lock.

## Components:

- Main Unit (Red/Stainless Steel Housing)
- Interchangeable Waffle Plates (2 pieces)
- Interchangeable Grill Plates (2 pieces)
- Interchangeable Griddle Plates (2 pieces)
- Power Cord with Plug
- Indicator Lights (Power and Ready)
- Safety Lock Latch

# All in one! Cook waffles, paninis, pancakes and much more

Todo en uno! Cocina waffles, paninis, panquecas y mucho mas



Image: A top-down view showcasing the three distinct sets of interchangeable cooking plates: waffle, grill, and griddle, emphasizing the appliance's versatility.

## SETUP

---

1. **Unpacking:** Carefully remove the Multi-Maker and all accessories from the packaging. Retain packaging for future storage or disposal.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the interchangeable plates with warm, soapy water, rinse thoroughly, and dry completely.
3. **Plate Installation:**
  - Ensure the appliance is unplugged and cool.
  - Identify the desired cooking plates (waffle, grill, or griddle).
  - Align the tabs on the back of each plate with the slots on the appliance base and lid.
  - Gently press down until the plates click securely into place. Ensure both top and bottom plates are correctly installed.

4. **Placement:** Place the Multi-Maker on a stable, heat-resistant, and dry surface, away from flammable materials. Ensure adequate ventilation around the appliance.

## OPERATING INSTRUCTIONS

---

### General Operation:

1. **Preheating:** Plug the appliance into a standard electrical outlet. The power indicator light will illuminate. Allow the Multi-Maker to preheat for approximately 3-5 minutes. The ready indicator light will turn on (or off, depending on model) when the desired cooking temperature is reached.
2. **Preparation:** For best results and to prolong the life of the non-stick coating, lightly grease the plates with cooking spray or a small amount of oil before each use, especially for the first use.
3. **Cooking:** Carefully place your food onto the bottom plate. Close the lid and secure the safety lock if applicable.
4. **Monitoring:** Cooking times will vary depending on the recipe and desired doneness. Refer to specific recipes for guidance. Avoid opening the lid frequently during cooking to maintain consistent temperature.
5. **Removal:** Once cooking is complete, carefully open the lid. Use heat-resistant, non-metallic utensils (plastic or wood) to remove food from the plates. Do not use metal utensils, as they can damage the non-stick coating.
6. **Finishing:** Unplug the appliance from the outlet immediately after use. Allow it to cool completely before cleaning or storing.

### Specific Uses:

#### Waffles:

Install the waffle plates. Preheat the Multi-Maker. Pour waffle batter onto the center of the bottom plate, filling it approximately two-thirds. Close the lid. Cook until golden brown and steam stops escaping (typically 3-6 minutes).



Image: A delicious stack of freshly made waffles, garnished with an assortment of berries and drizzled with syrup.



Image: A close-up, top-down view of the square waffle plates, highlighting their non-stick grid pattern.

### **Paninis/Grilled Sandwiches:**

Install the grill plates. Preheat the Multi-Maker. Place your sandwich onto the bottom plate. Close the lid and gently press down to achieve grill marks. Cook until bread is toasted and fillings are heated through (typically 2-5 minutes).



Image: A golden-brown grilled cheese sandwich, sliced in half, displaying its melted interior and distinct grill marks, presented on a wooden cutting board.

### **Pancakes/Griddle Items:**

Install the griddle plates. Preheat the Multi-Maker. Pour pancake batter or place other griddle items (e.g., eggs, small tortillas) onto the bottom plate. Close the lid. Cook until desired doneness, flipping if necessary for even cooking (for pancakes, typically 2-4 minutes per side).



Image: A stack of light and fluffy pancakes adorned with fresh berries and a generous drizzle of maple syrup, set against a soft-focus background of a beverage.

## CARE AND MAINTENANCE

---

Proper care and maintenance will ensure the longevity and optimal performance of your Multi-Maker.

1. **Always Unplug:** Ensure the appliance is unplugged from the power outlet and completely cool before cleaning.
2. **Removing Plates:** To remove the plates for cleaning, locate the release tabs (if present) or gently lift them from their slots.
3. **Cleaning Plates:** Wash the non-stick plates with warm, soapy water using a soft sponge or cloth. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating. Rinse thoroughly and dry completely before reattaching or storing. The non-stick coating makes cleaning very easy.
4. **Cleaning Exterior:** Wipe the exterior housing with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Stubborn Residue:** For stubborn food residue on the plates, allow them to soak in warm, soapy water for a few

minutes before cleaning.

6. **Storage:** Store the Multi-Maker in a clean, dry place. The appliance is designed for space-saving vertical storage. Ensure the safety lock is engaged if storing vertically.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Food sticks to plates.	Plates not greased; non-stick coating damaged; plates not preheated sufficiently.	Lightly grease plates before each use. Ensure plates are clean and undamaged. Allow appliance to fully preheat until the ready light indicates.
Food not cooking evenly.	Insufficient preheating; uneven food placement; lid not fully closed.	Allow adequate preheating time. Distribute food evenly on the plates. Ensure the lid is closed properly.
Smoke or unusual odor during first use.	Protective oils burning off.	This is normal for first use. Ensure good ventilation. If smoke persists after initial uses, unplug and contact customer support.

## SPECIFICATIONS

---

- **Brand:** Holstein Housewares
- **Model Number:** HH-09125008R
- **Color:** Red / Stainless Steel
- **Dimensions:** 27.69 x 15.7 x 11.99 cm (10.9 x 6.18 x 4.72 inches)
- **Weight:** 1.45 kg (3.2 lbs)
- **Power:** 1500 Watts
- **Voltage:** 120 Volts
- **Material:** Stainless Steel (housing)
- **Special Features:** Interchangeable non-stick plates (waffle, grill, griddle), indicator lights, safety lock, vertical storage capability.



Image: A diagram illustrating the compact dimensions of the Multi-Maker, with measurements provided in both inches and centimeters.

## WARRANTY AND SUPPORT

Holstein Housewares offers a limited 1-year warranty for this product. This warranty covers defects in material and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For customer support, warranty inquiries, or to purchase replacement parts, please visit the official Holstein Housewares website or contact their customer service department.

- **Website:** [www.holsteinhousewares.com](http://www.holsteinhousewares.com) (Example link, actual link may vary)
- **Contact Information:** Refer to the official website for the most current contact details.



This manual is for informational purposes only. Product specifications are subject to change without notice.