



Manuals.plus /

- › Pyle /
- › Pyle Portable Bluetooth PA Speaker System - PPHP2835B User Manual

Pyle PPHP2835B

Pyle Portable Bluetooth PA Speaker System

MODEL: PPHP2835B USER MANUAL

1. Introduction

Thank you for purchasing the Pyle PPHP2835B Portable Bluetooth PA Speaker System. This powerful and versatile speaker is designed for both indoor and outdoor use, offering high-quality audio reproduction with convenient features like Bluetooth streaming, USB playback, FM radio, and microphone input. Its built-in rechargeable battery and extendable carry handle ensure portability, while multi-color flashing LED lights add a dynamic visual element to any gathering. This manual provides detailed instructions to help you set up, operate, and maintain your speaker system for optimal performance.



2. Package Contents

Please ensure all items are present in the box:

- PA Speaker System (PPHP2835B)
- Remote Control
- Power Adapter

3. Features

The Pyle PPHP2835B speaker system boasts a range of features designed for a superior audio experience:

- **True Wireless Stereo System:** Connect two PPHP2835B units for a wider stereo soundstage.
- **High-Powered PA Loud Speaker Style:** Delivers 600 Watt peak power / 300W RMS for robust sound.
- **Bluetooth Wireless Music Streaming:** Seamlessly connect and stream audio from your smart devices.
- **Multi-Color Flashing LED Party Lights:** Dynamic lighting effects to enhance your party atmosphere.
- **Built-in Rechargeable Battery:** Provides portable power for up to 3 hours of playback.
- **FM Radio:** Tune into your favorite radio stations with a digital LED display.
- **Multiple Input Options:** Aux (3.5mm) input, USB Flash Memory Reader, and 6.5mm Microphone input.
- **Rugged & Durable Design:** Molded cabinet for indoor and outdoor use.
- **Convenient Extendable Carry Handle:** Easy transportability.

BASS AMPLIFICATION STRONG STEREO AUDIO

8" Subwoofer

1" Tweeter

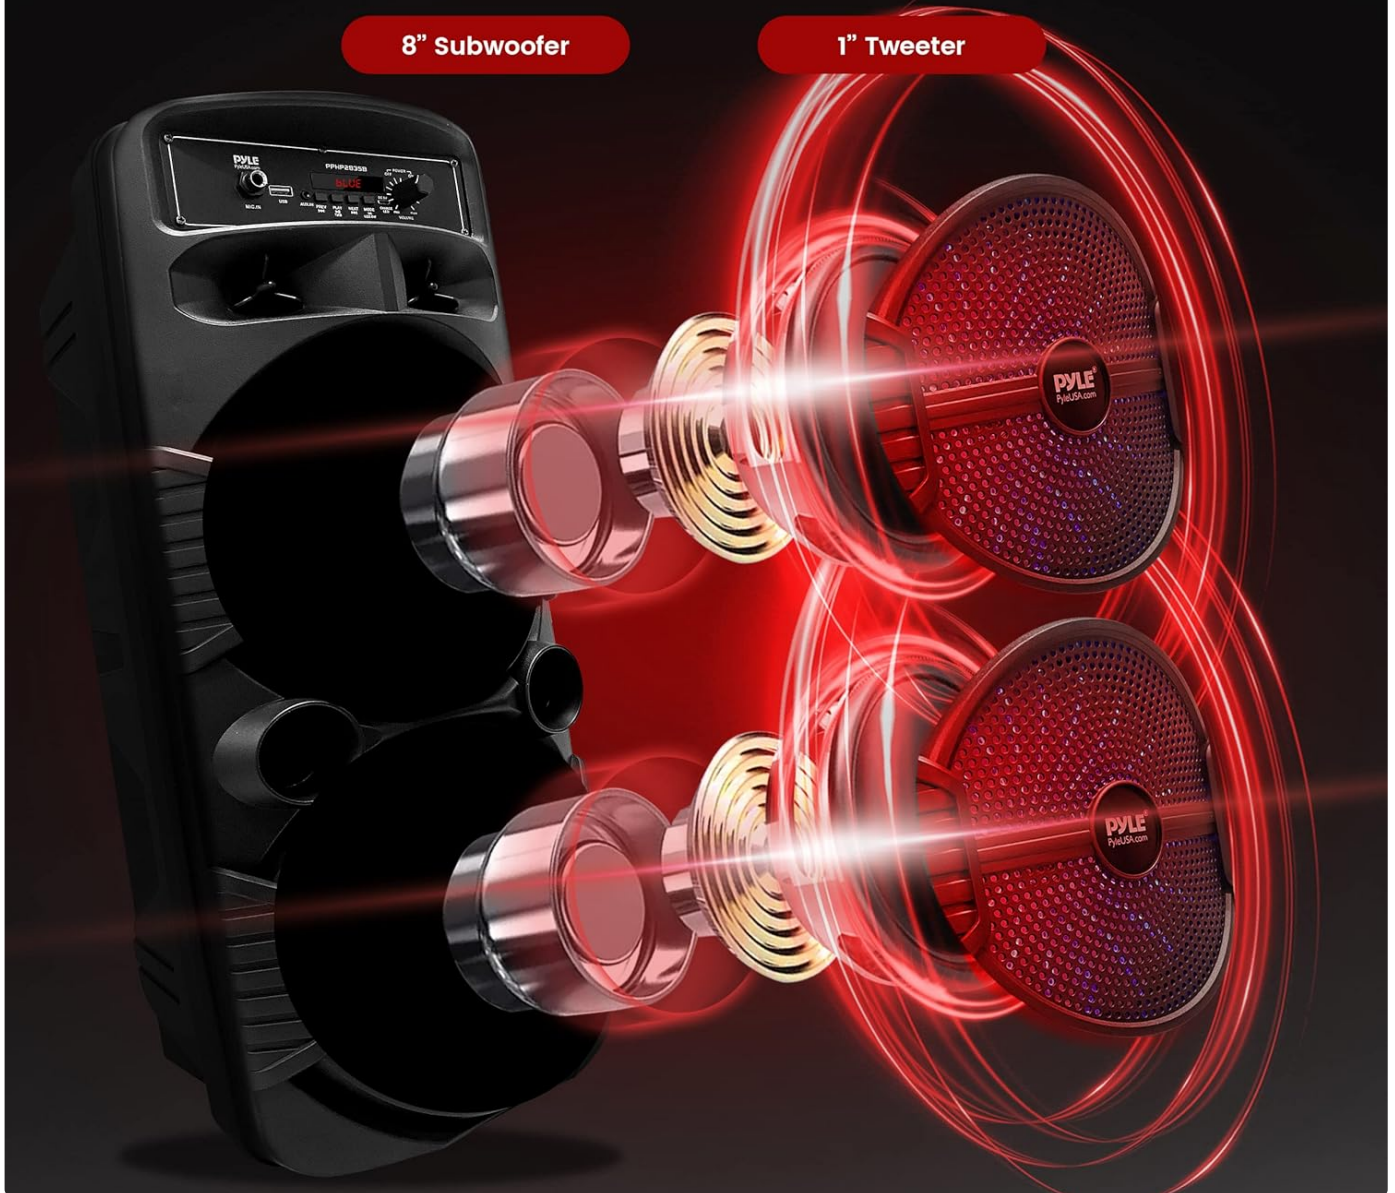


Figure 3.1: Internal components highlighting the dual 8-inch subwoofers and 1-inch tweeter for powerful audio.

MULTI-COLOR FLASHING LED PARTY LIGHTS



Dynamic bright lights provide a disco ambiance at your party, making it more enjoyable.

Figure 3.2: The speaker features dynamic multi-color LED lights for an enhanced party experience.

4. Setup

4.1 Initial Charging

Before first use, fully charge the speaker. Connect the included power adapter to the speaker's power input and plug it into a standard wall outlet. The battery level LED indicators will show charging status. A full charge takes approximately 4.5 hours and provides up to 3 hours of playback time.

MUSIC ANYTIME, ANYWHERE

Built-in Rechargeable Battery



Note: Because being in standby mode might cause battery damage, please turn off the power with the ON/OFF switch when not in use.

Figure 4.1: The speaker features a built-in rechargeable battery for portable use.

4.2 Power On/Off

Locate the ON/OFF switch on the control panel. Flip the switch to the 'ON' position to power on the speaker. Flip it to 'OFF' to power down. It is recommended to turn off the power with the ON/OFF switch when not in use to prevent battery damage from standby mode.

5. Operating Instructions

5.1 Bluetooth Wireless Streaming

1. Ensure the speaker is powered on.
2. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon or voice prompt.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select the Bluetooth network name 'PYLEUSA' from the list.
5. Once connected, the speaker will provide an audible confirmation. You can now stream music wirelessly within a

range of up to 32 feet.

NUMEROUS WAYS TO USE



Bluetooth 5.0



Mic In



USB



AUX In



FM Radio



Figure 5.1: The speaker offers multiple connectivity options for diverse audio sources.

5.2 USB Flash Memory Playback

Insert a USB flash drive (up to 32GB) containing MP3 audio files into the USB port on the control panel. The speaker will automatically detect the USB drive and begin playing the audio files. Use the control panel or remote to navigate tracks and adjust volume.

5.3 Aux (3.5mm) Input

Connect an external audio device (e.g., MP3 player, CD player) to the Aux (3.5mm) input jack using a 3.5mm audio cable. The speaker will switch to Aux mode, and audio from your connected device will play through the speaker.

5.4 FM Radio

Press the 'Mode' button on the control panel or remote until 'FM' is displayed. Use the tuning buttons to scan for available radio stations. The digital LED display will show the current frequency.

5.5 Microphone Input

Plug a 6.5mm microphone into the 'MIC.IN' port on the control panel. Adjust the microphone volume using the dedicated knob. This feature is ideal for karaoke, public speaking, or live performances.

5.6 Party Lights

The multi-color flashing LED party lights can be toggled on or off using a dedicated switch or button on the control panel, depending on the model variation. These lights synchronize with the music to create a vibrant visual effect.

5.7 Remote Control

The included remote control allows for convenient operation of various functions from a distance, including power, mode selection, volume adjustment, track navigation, and FM radio tuning. The remote uses one CR-2025 button cell battery (included).

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in active use. Always turn off the speaker using the ON/OFF switch when not in use.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to rain, splashes, or any liquids.

7. Troubleshooting

Problem	Possible Cause	Solution
No power	Battery is depleted; Power switch is off; Power adapter not connected properly.	Charge the battery; Turn the power switch ON; Ensure power adapter is securely connected.
No sound	Volume is too low; Incorrect input mode selected; Audio cable not connected properly (Aux); Bluetooth not paired.	Increase volume; Press 'Mode' button to select correct input; Reconnect audio cable; Re-pair Bluetooth device.
Bluetooth connection issues	Device is out of range; Bluetooth not enabled on device; Speaker not in pairing mode.	Move device closer to speaker (within 32 ft); Enable Bluetooth on your device; Ensure speaker is in pairing mode ('PYLEUSA').
USB playback not working	USB drive not formatted correctly; Unsupported file type; USB drive capacity too large.	Ensure USB is FAT32 format; Only MP3 files are supported; Max USB capacity is 32GB.

8. Specifications

Feature	Specification
Max Power Output	600 Watt Max
Sound System	Dual 8-inch Subwoofer + 1-inch Tweeter
Impedance	2.6 Ohm
Bluetooth Version	4.1
Bluetooth Network Name	'PYLEUSA'
Wireless Range	Up to 32 ft.
USB Interface Type	2.0
Digital Audio File Support	MP3
Maximum USB Flash Support	32GB
Rechargeable Battery	3.7V, 2400mAh – 8.88 Wh
Battery Life	Up to 3 Hours
Charge Time	Approx. 4.5 Hours
Power Supply	120/240V, Switchable (5V/2A Power Adapter)
Material	Polypropylene (PP)
Dimensions (L x W x H)	9.1" x 8.7" x 23.2" inches
Item Weight	8 Pounds
UPC	842893129150

9. Warranty & Support

Pyle products are designed and manufactured to the highest standards. For information regarding warranty coverage, technical support, or service inquiries, please visit the official Pyle website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

Official Pyle Website: Visit the Pyle Store on Amazon