

Cybex Eezy S Twist 2

CYBEX Eezy S Twist 2 Stroller Instruction Manual

Model: Eezy S Twist 2 (520004437)

Brand: Cybex

1. INTRODUCTION

This manual provides essential information for the safe and proper use, maintenance, and care of your CYBEX Eezy S Twist 2 Stroller. Please read all instructions carefully before assembly and use, and keep this manual for future reference.

The Eezy S Twist 2 Stroller is designed for infants 6 months and older, up to a maximum weight of 55 pounds. It features a 360° rotating seat, one-hand recline, compact fold, and all-wheel suspension for versatile travel.



Image 1.1: The CYBEX Eezy S Twist 2 Stroller in Magnolia Pink, showcasing its compact design and adjustable canopy.

2. SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always use the restraint system.
- Never leave your child unattended in the stroller.
- Do not carry additional children, goods, or accessories in or on the stroller except as recommended by the manufacturer.
- The stroller is suitable for children from 6 months up to 55 lbs (25 kg).
- Ensure all locking devices are engaged before use.
- Do not use the stroller on stairs or escalators.
- Avoid placing hot liquids, heavy objects, or sharp items in the storage basket.
- Do not hang bags or other items on the handle, as this can cause the stroller to become unstable.
- Regularly check the stroller for loose parts, damaged components, or worn fabric. Discontinue use if any damage is found.
- This product is not suitable for running or skating.

3. SETUP AND ASSEMBLY

The CYBEX Eezy S Twist 2 Stroller comes largely pre-assembled. Follow these steps to prepare your stroller for use:

1. **Unfolding the Stroller:** Release the folding latch and unfold the frame until it locks into place. Ensure all components are securely engaged.
2. **Attaching Wheels:** If not already attached, push the wheels onto their axles until they click into position.
3. **Attaching the Bumper Bar:** Insert the bumper bar into the designated slots on the seat unit until it clicks. The bumper bar is removable for easy access.
4. **Adjusting the Canopy:** Extend the UPF 50+ sun canopy as needed. It features a mesh window for ventilation and observation.
5. **Travel System Setup (Optional):** The Eezy S Twist 2 is compatible with CYBEX infant car seats or the CYBEX Cot S. Use the included adapters to attach these components to the stroller frame. Refer to the car seat or Cot S manual for specific attachment instructions.



Image 3.1: The Eezy S Twist 2 Stroller configured as a travel system with a compatible CYBEX infant car seat.

4. OPERATING INSTRUCTIONS

4.1. 360° Rotating Seat

The unique 360° rotating seat allows you to easily switch your child's seating direction from parent-facing to front-facing with one hand.

1. Ensure the child is securely fastened in the harness.
2. Locate the rotation mechanism (usually a button or lever) beneath the seat unit.
3. Press the button/lever and rotate the seat to the desired position until it locks securely.



Image 4.1: Visual representation of the 360° seat rotation feature, allowing easy switching between parent-facing and front-facing positions.

4.2. Reclining the Seat

The seat offers multiple recline positions, including a near-flat position, in both parent-facing and front-facing orientations.

1. Locate the recline lever on the back of the seat unit.
2. Squeeze the lever and adjust the seat to the desired recline angle.
3. Release the lever to lock the seat in place.



Image 4.2: The stroller seat shown in a reclined position, suitable for resting.

4.3. Adjusting the Leg Rest

The integrated leg rest can be adjusted with one hand to support comfortable sitting or lying positions for your child.

4.4. Harness System

The stroller is equipped with a 5-point harness system. Always ensure your child is securely fastened before moving the stroller.

1. Place the child in the seat.
2. Bring the shoulder straps over the child's shoulders and the waist straps around their hips.
3. Connect the buckles and insert them into the central buckle until they click.
4. Adjust the straps for a snug fit, ensuring two fingers can fit between the strap and the child's body.

4.5. Folding the Stroller

The Eezy S Twist 2 features a one-hand compact fold, collapsing into a self-standing package for convenient storage and transport.

1. Ensure the seat is in the front-facing position and fully upright.

2. Locate the folding mechanism on the handle or frame.
3. Activate the mechanism and push the handle forward/downward to fold the stroller.
4. Ensure the stroller locks into its folded position.



Image 4.3: The Eezy S Twist 2 Stroller folded into a compact, self-standing unit, ideal for storage or travel.

4.6. Brakes

Engage the foot-operated brake when the stroller is stationary. Ensure the brake is fully engaged by pressing down firmly on the pedal until it locks the wheels.

4.7. Product Demonstration Video

Watch this official video for a visual guide on the features and operation of the CYBEX Eezy S Twist 2 Stroller.

Your browser does not support the video tag.

Video 4.1: An official product video demonstrating the key features and functionality of the CYBEX Eezy S Twist 2 Stroller, including the 360° rotating seat and compact fold.

5. MAINTENANCE

- **Cleaning:** Fabric covers are generally removable and washable. Refer to the care label for specific washing instructions. The frame can be wiped clean with a damp cloth and mild detergent. Do not use abrasive cleaners.
- **Wheels:** Regularly check the wheels for debris and ensure they rotate freely. Lubricate axles if necessary.
- **Moving Parts:** Periodically check all moving parts, such as hinges and locking mechanisms, to ensure they function smoothly. Apply a silicone-based lubricant if needed.
- **Storage:** Store the stroller in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Stroller does not fold:** Ensure the seat is in the correct position (front-facing, upright) and all locking mechanisms are disengaged before attempting to fold. Check for any obstructions.
- **Seat does not rotate:** Verify that the rotation mechanism is fully engaged and not obstructed. Ensure the child is not putting excessive weight on one side during rotation.
- **Wheels squeak or do not turn smoothly:** Clean the wheels and axles to remove dirt or debris. Apply a light lubricant to the axles if squeaking persists.
- **Harness is difficult to adjust:** Check for twists in the straps. Ensure the adjustment buckles are free of debris.

7. SPECIFICATIONS

Feature	Detail
Model Number	520004437
Age Range Description	Infant (6 months and older)
Maximum Weight Recommendation	55 Pounds (25 kg)
Folded Size	13 x 22 x 37 Inches
Frame Weight	12 Pounds
Harness Type	5 Point
Stroller Type	Standard Stroller (Lightweight)
Seating Capacity	1
Number of Wheels	4
Material Type	Aluminum, Plastic, Polyester
Fabric Type	Polyester
Tire Material	Rubber
Is Car Seat Compatible	Yes (with included adapters for CYBEX infant seats or Cot S)
Additional Features	360° Rotating Seat, All-Wheel Suspension, Travel System
Specification Met	ASTM, JPMA, REACH

8. WARRANTY INFORMATION

The CYBEX Eezy S Twist 2 Stroller comes with a **2 Year Limited Warranty** from the manufacturer. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For full terms and conditions, please refer to the official Cybex website or contact customer support.

9. SUPPORT AND CONTACT

For further assistance, spare parts, or to report any issues, please contact Cybex customer support. You can find contact information and additional resources on the official Cybex website:

[Visit Cybex Official Website](#)