

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Curtis](#) /

› [Curtis 9-in-1 Pressure Cooker and Air Fryer User Manual](#)

## Curtis TFPC607

# Curtis 9-in-1 Pressure Cooker and Air Fryer User Manual

Model: TFPC607

## INTRODUCTION

The Curtis 9-in-1 Pressure Cooker and Air Fryer is a versatile kitchen appliance designed to simplify your cooking experience. This multi-functional unit combines the capabilities of a pressure cooker, air fryer, slow cooker, rice cooker, steamer, yogurt maker, and offers sauté/sear functions. It features a dual-lid system, allowing you to switch between pressure cooking for speed and air frying for a crispy finish. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance of your appliance.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions thoroughly before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.

- Never force open the pressure cooker lid. Ensure the pressure inside the cooker has been completely released before opening.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release valve and float valve for clogging before use.

## PRODUCT COMPONENTS AND ACCESSORIES

Your Curtis 9-in-1 Pressure Cooker and Air Fryer comes with several components and accessories to enhance your cooking versatility.



Figure 1: Overview of all included components and accessories.

# INCLUDED COOKING ACCESSORIES



Figure 2: Close-up of the various cooking accessories provided.

- **Main Cooker Unit:** The base unit with the digital control panel.
- **Pressure Cooker Lid:** Features an adjustable release valve and safety lock.
- **Air Fryer Lid:** Contains a 1500W heating element for air frying.
- **Inner Pot:** 6-liter double-coated, non-stick, PTFE/PFOA-free, dishwasher-safe pot.
- **Frying Basket:** 4-quart capacity, stainless steel, PTFE/PFOA-free basket for air frying.
- **Dipping Rack/Trivet:** Can be used for steaming or elevating food for air frying.
- **Measuring Cup:** For precise ingredient measurements.
- **Plastic Spoon:** For serving and stirring.
- **Lid Stand:** For safely resting the hot pressure cooking lid.

## SETUP AND FIRST USE

Before using your appliance for the first time, follow these steps:

1. Unpack all components and accessories from the box.
2. Wash the inner pot, frying basket, dipping rack, measuring cup, and plastic spoon with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main cooker unit and both lids with a damp cloth. Do not immerse the main unit or lids in water.
4. Ensure the sealing ring is properly seated in the pressure cooker lid.
5. Place the main cooker unit on a stable, level, heat-resistant surface away from heat sources and water.
6. Insert the inner pot into the main cooker unit.

## **OPERATING INSTRUCTIONS**

---

### **Digital Touch Display**

The appliance features a sleek digital touch display that automatically detects which lid is in use and presents the appropriate cooking options. You can select preset programs or use manual settings.



## SLEEK DIGITAL TOUCH DISPLAY

Select preset programs or use your own manual settings with ease  
Interface automatically knows which lid is in use

Figure 3: The digital touch display for program selection and manual control.

### Using the Pressure Cooker Lid

The pressure cooker lid allows for cooking up to 70% faster than traditional methods. It features a safety mechanism that prevents opening when pressure is present.

# THE ULTIMATE KITCHEN APPLIANCE

That combines two of the most versatile kitchen tools into

# THE PERFECT COMBINATION



Air Fryer Lid



Pressure Cooker Lid

## OVER 20 COOKING PROGRAMS

Figure 4: The cooker with both the Air Fryer Lid and Pressure Cooker Lid.

# SAFE PRESSURE RELEASE

Choose to release pressure naturally or rapidly

The lid can only be removed when there is no pressure



Figure 5: Safe pressure release mechanism on the pressure cooker lid.

**Pressure Cooking Methods:** The appliance includes 14 smart built-in programs for pressure cooking:

Soup/Broth

Meat/Stew

Bean/Chili

Poultry

Steam

Rice

Porridge

Multigrain

Slow Cook

Keep-Warm

Yogurt

Pasteurize

Pressure Cook (Manual)

Sauté/Sear (via digital display)

# PRESSURE COOKING METHODS

SOUP/BROTH | MEAT/STEW | BEAN/CHILI | POULTRY | STEAM | RICE | PORRIDGE

MULTIGRAIN | SLOW COOK | KEEP-WARM | YOGURT | PASTEURIZE | PRESSURE COOK



Figure 6: Example of pressure cooking using the steam function.

## Using the Air Fryer Lid

The air fryer lid allows you to achieve crispy, golden finishes with up to 75% less fat than traditional frying methods. It operates with 1500W of power and uses cyclonic heating.

# 1500W AIR FRYER LID

Air fry and use up to 75% less fat  
than traditional frying methods



**Air fryer unit housed  
entirely within the lid!**

Figure 7: The 1500W Air Fryer Lid with its internal heating element.

To use the air fryer function:

1. Ensure the inner pot is in place and food is prepared in the frying basket or on the dipping rack.
2. Place the Air Fryer Lid securely on top of the main cooker unit. The digital display will automatically recognize the lid.
3. Select the desired air frying program or set manual time and temperature.
4. Press Start. The appliance will begin the air frying process.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance and ensure safe operation.



# EASY COOKING, EASY WASHING

This appliance uses a 6L double-coated, non-stick inner pot.  
PTFE/PFOA-free, safe, and easy to clean!



**Figure 8:** The non-stick inner pot for easy cleaning.



## MINIMIZE COUNTER CLEANUP

Water collection container captures condensation from lid  
saving you from dealing with dripping hot water

Figure 9: The condensation collection cup for minimizing cleanup.

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Inner Pot, Frying Basket, Dipping Rack, Measuring Cup, Plastic Spoon:** These parts are dishwasher safe. Alternatively, wash them with warm, soapy water and rinse thoroughly.
- **Pressure Cooker Lid and Air Fryer Lid:** Wipe the exterior and interior surfaces with a damp cloth. Do not immerse either lid in water. Ensure the sealing ring and valves on the pressure cooker lid are clean and free of food debris.
- **Main Cooker Unit:** Wipe the exterior with a damp cloth. Never immerse the main unit in water or any other liquid.
- **Condensation Collector:** Empty and clean the removable plastic receptacle regularly to prevent water accumulation.
- Store the appliance in a dry place when not in use.

## TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; damaged cord.	Ensure power cord is securely plugged into a working outlet. Check for power at the outlet. Inspect cord for damage. Contact customer support if damaged.
Pressure cooker lid cannot be opened.	Pressure still inside the cooker.	Ensure all pressure has been released through the pressure release valve. The float valve must be fully dropped before attempting to open.
Steam leaks from pressure cooker lid during operation.	Sealing ring not properly seated; food debris on sealing ring or rim; lid not closed correctly.	Check and reseat the sealing ring. Clean the sealing ring and rim of the pot. Ensure the lid is properly aligned and locked.
Air fryer fan makes unusual noise.	Air fryer lid not seated correctly; debris inside the lid.	Ensure the air fryer lid is placed straight and snug on the cooker. Unplug and inspect for any foreign objects inside the lid's fan area (when cool).
Food not cooking evenly in air fryer.	Overcrowding the basket; incorrect temperature/time.	Do not overcrowd the frying basket. Cook in batches if necessary. Adjust cooking time and temperature as per recipe or desired crispiness. Shake or flip food halfway through.

## SPECIFICATIONS

---

**Brand:** Curtis

**Model Number:** TFPC607

**Capacity:** 6 Liters (6.5 QT)

**Material:** Stainless Steel (exterior), Double-coated non-stick (inner pot)

**Color:** Silver

**Pressure Cooker Wattage:** 1000 W

**Air Fryer Wattage:** 1500 W

**Product Dimensions (with Pressure Cooker Lid):** 13.38"D x 12.20"W x 13.38"H

**Product Dimensions (with Air Fryer Lid):** 13.38"D x 12.20"W x 14.56"H

**Item Weight:** Approximately 4 Pounds

**Control Method:** Touch

**Dishwasher Safe Parts:** Inner Pot, Frying Basket, Dipping Rack, Measuring Cup, Plastic Spoon

**UPC:** 058465816834

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Curtis product support website. Please have your model number (TFPC607) and proof of purchase ready when contacting support.

Manufacturer: CURTIS INTERNATIONAL LTD

