

[Manuals.plus](#) /

› [SURKER](#) /

› SURKER Beard Trimmer for Men Hair Clippers Body Mustache Nose Hair Groomer Cordless Precision Trimmer 6 in 1 Grooming Kit Waterproof USB Rechargeable

SURKER 788

SURKER 6-in-1 Multi-Functional Grooming Kit Instruction Manual

Model: 788

Brand: SURKER

1. INTRODUCTION

The SURKER 6-in-1 Multi-Functional Grooming Kit is designed for comprehensive personal grooming, offering versatility for various hair trimming needs. This kit provides a precise and efficient solution for maintaining facial hair, body hair, and general hair styling.

This manual provides detailed instructions for the safe and effective use, maintenance, and troubleshooting of your grooming kit. Please read it thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- Keep blades away from eyes.
- Avoid use on infants.
- Be cautious when using the waterproof feature to prevent electrical hazards. Ensure the charging port is completely dry before connecting the charger.
- Do not immerse the charging base or adapter in water.
- Do not use this appliance with a damaged or broken blade, as injury may occur.
- Keep the appliance dry when not in use.
- This appliance is intended for household use only.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x SURKER Grooming Kit Main Unit
- 1 x Full Size Trimmer Head
- 1 x Precision Trimmer Head
- 1 x Design Trimmer Head
- 1 x Body Trimmer Head
- 1 x Nose Trimmer Head
- 1 x Micro Shaver Head
- 5 x Guide Combs for Full Size Trimmer (3mm, 6mm, 9mm, 12mm)
- 1 x Guide Comb for Precision Trimmer (1-3mm adjustable)
- 1 x USB Charging Cable
- 1 x Cleaning Brush
- 1 x Lubricating Oil Bottle
- 1 x Storage/Charging Base



Image: Complete set of SURKER grooming kit components.

4. PRODUCT FEATURES

- **6-in-1 Multi-Functional Kit:** This versatile kit includes six interchangeable heads to address all your grooming needs:
 - Full Size Trimmer: For general hair cutting and beard trimming.
 - Precision Trimmer: For detailed styling and sharp lines.
 - Design Trimmer: For intricate patterns and artistic designs.
 - Body Trimmer: For efficient removal of body hair.
 - Nose Trimmer: For safe and comfortable trimming of nose and ear hair.
 - Micro Shaver: For a clean, close shave on smaller areas.
- **High Performance Sharp Titanium Blades:** Equipped with ultra-sharp, skin-friendly titanium blades that ensure precise trimming with minimal friction and no pulling or skin irritation.
- **100% Waterproof & Easy to Clean:** The whole body of the trimmer is washable, allowing for convenient

wet and dry use and easy cleaning under running water. Blades are detachable for thorough cleaning.



Whole body Washable



Image: Trimmer being rinsed under water, highlighting its waterproof design.

- **LED Display & USB Fast Charging:** An integrated LED display shows the battery power level, reminding you when to charge. The built-in rechargeable battery provides up to 99 minutes of continuous use after approximately 1 hour of full charging via USB. Features a travel lock symbol for easy storage and transport.



Image: Trimmer charging via USB, illustrating its fast charging and long battery life.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the grooming kit for approximately 1 hour.
2. Connect the USB charging cable to the charging port at the bottom of the trimmer.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, USB wall adapter).
4. The LED display will show the battery percentage, indicating the charging progress.
5. Once fully charged, the display will show "99". Disconnect the charger.

5.2 Attaching and Detaching Trimmer Heads

1. To attach a head: Align the desired trimmer head with the main unit and press firmly until it clicks into place.

2. To detach a head: Hold the main unit firmly and gently pull the trimmer head upwards to remove it.

5.3 Attaching Guide Combs

1. Ensure the desired trimmer head (Full Size or Precision) is attached to the main unit.
2. Select the appropriate guide comb for your desired hair length.
3. Slide the guide comb onto the trimmer head until it securely locks into position.
4. To remove, gently lift the comb from the back and slide it off.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Travel Lock

- To power on: Press the power button once. The LED display will illuminate.
- To power off: Press the power button again.
- To activate travel lock: Press and hold the power button for 3 seconds. A lock symbol will appear on the LED display.
- To deactivate travel lock: Press and hold the power button for 3 seconds until the lock symbol disappears.

6.2 Using the Trimmer Heads

Always ensure your skin and hair are clean and dry before trimming, unless using the trimmer for wet shaving.

- **Full Size Trimmer & Guide Combs:**

Attach the full size trimmer head. Select a guide comb (3mm, 6mm, 9mm, or 12mm) for desired hair length. Move the trimmer against the direction of hair growth for an even cut. Ideal for beard, mustache, and hair cutting.

Different Adjustable Combs Meet the Various Needs

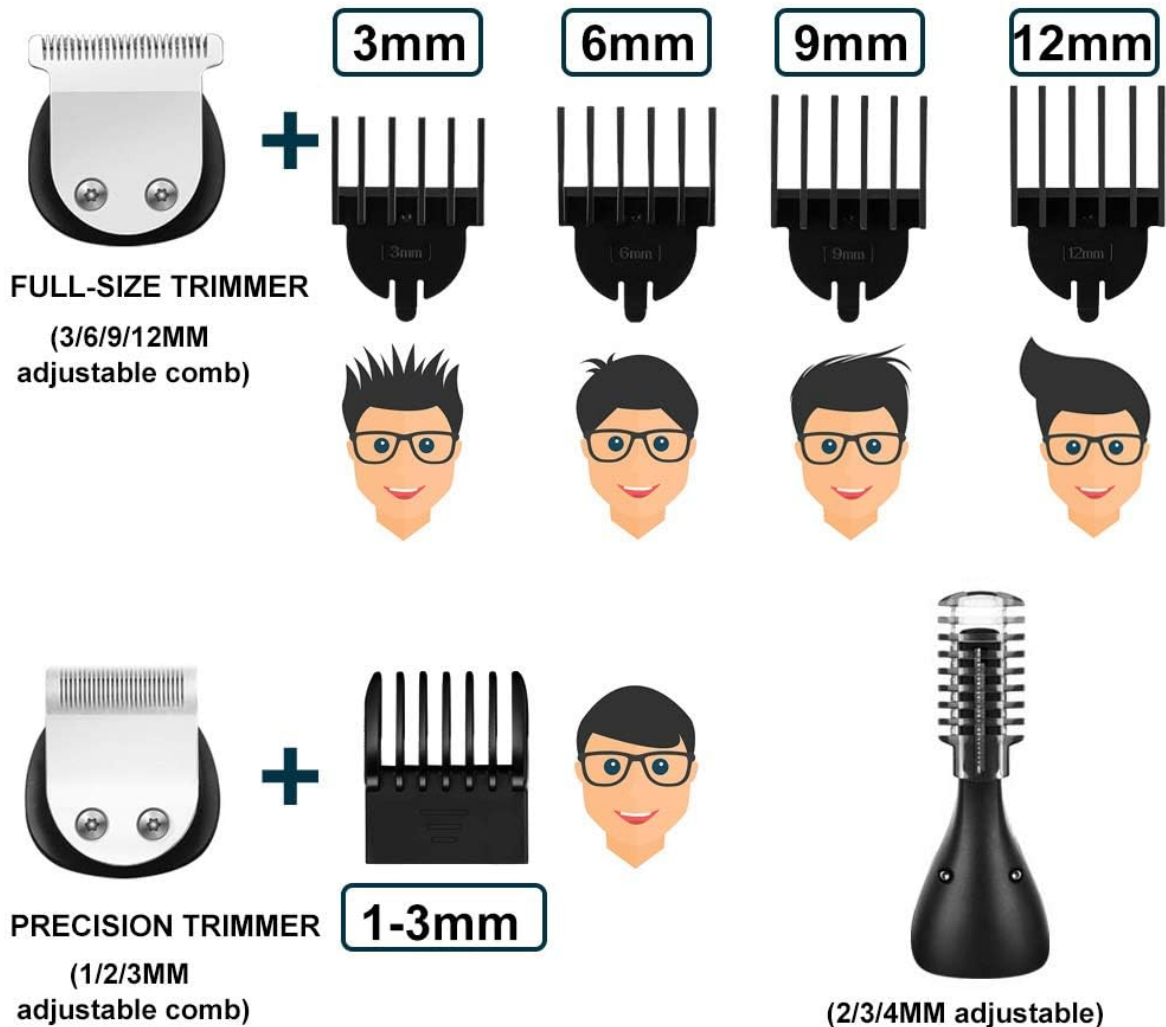


Image: Guide combs for various trimming lengths.

- **Precision Trimmer & Guide Comb:**

Attach the precision trimmer head. Use the 1-3mm adjustable guide comb for fine-tuning beard lines, sideburns, or creating sharp edges.

- **Design Trimmer:**

Attach the design trimmer head. Use for creating intricate patterns or sharp, artistic lines in hair or beard. Requires a steady hand and practice.

- **Body Trimmer:**

Attach the body trimmer head. Use for trimming hair on various parts of the body. Move gently over the skin.

- **Nose Trimmer:**

Attach the nose trimmer head. Gently insert the trimmer tip into the nostril or ear canal. Move in a circular motion to trim unwanted hair. Do not insert too deeply.

- **Micro Shaver:**

Attach the micro shaver head. Use for a close, smooth finish on small areas like cheeks, neck, or around the beard line. Can be used wet or dry.

6-in-1 multifunctional hairdressing set




Wide Hair Trimmer



Full Size Trimmer



Beard Trimmer

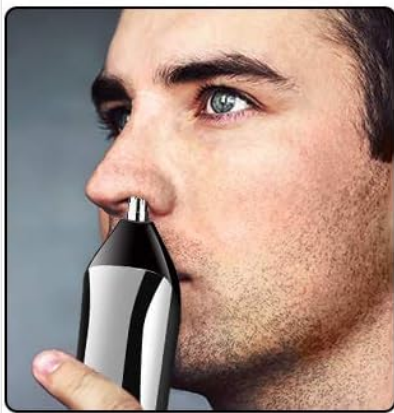

Nose Trimmer



Body Hair Trimmer



Carving Head

Image: Demonstrations of the 6-in-1 grooming functions.

7. MAINTENANCE

7.1 Cleaning

1. After each use, turn off the trimmer and detach the trimmer head.
2. Rinse the trimmer head and blades under running water. For thorough cleaning, use the provided cleaning brush to remove any trapped hairs.
3. Ensure the main unit's charging port is not exposed to water during rinsing.
4. Allow all parts to air dry completely before reattaching or storing.

7.2 Lubrication

To maintain optimal performance and blade longevity, it is recommended to lubricate the blades regularly (e.g., after every few uses or after thorough cleaning).

1. Apply 1-2 drops of the provided lubricating oil onto the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.

3. Wipe off any excess oil with a soft cloth.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted. Travel lock is activated.	Charge the trimmer fully. Deactivate travel lock by pressing and holding the power button for 3 seconds.
Trimmer pulls hair or cuts poorly.	Blades are dirty or clogged with hair. Blades are not lubricated. Battery is low.	Clean the blades and trimmer head thoroughly. Apply lubricating oil to the blades. Charge the trimmer.
LED display is not working.	Battery is completely depleted. Internal malfunction.	Charge the trimmer. If still not working after charging, contact customer support.

9. SPECIFICATIONS

- **Model:** 788
- **Brand:** SURKER
- **Product Dimensions:** 3.07 x 7.44 x 9.29 inches
- **Item Weight:** 1.3 Pounds (approx. 590 Grams)
- **Power Source:** Built-in Rechargeable Battery
- **Charging Time:** Approximately 1 hour
- **Run Time:** Up to 99 minutes
- **Blades:** High Performance Sharp Titanium Blades
- **Waterproof:** Yes, Whole Body Washable
- **Color:** Silver, Black, Orange
- **Country of Origin:** China

10. WARRANTY AND SUPPORT

SURKER products are manufactured to the highest quality standards. In the unlikely event of any issues with your grooming kit, please refer to the troubleshooting section first.

For further assistance, product support, or warranty claims, please contact SURKER customer service. While

specific warranty terms may vary, SURKER is committed to providing satisfactory solutions for any problems you may encounter.

Please retain your proof of purchase for any warranty-related inquiries.

"Please feel free to contact us if you feel any problem. We will provide you satisfactory solution."