

[Manuals.plus](#) /

> [Galanz](#) /

> Galanz GLR33MBER10 Retro Compact Refrigerator User Manual

Galanz GLR33MBER10

Galanz GLR33MBER10 Retro Compact Refrigerator User Manual

Model: GLR33MBER10 | Brand: Galanz

IMPORTANT SAFETY INFORMATION

Read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury. Keep this manual for future reference.

- Ensure the refrigerator is properly grounded.
- Do not operate if the power cord is damaged.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PACKAGE CONTENTS

Verify that all items are present and in good condition:

- 1 x Galanz GLR33MBER10 Retro Compact Refrigerator
- 2 x Removable Glass Shelves
- 1 x Power Cord

SETUP GUIDE

1. Unpacking and Placement

Carefully remove all packaging materials. Place the refrigerator on a flat, stable surface away from direct sunlight or heat sources. Ensure adequate air circulation around the unit. Allow at least 5 inches (12.7 cm) of space between the back and sides of the refrigerator and any adjacent walls or furniture. The unit features 2 leveling front legs that can be adjusted to ensure stable and level placement.



GALANZ





Image: Front view of the Galanz GLR33MBER10 Retro Compact Refrigerator in blue.



Image: Diagram showing the dimensions of the refrigerator: 17.60" W x 35.43" H x 21.02" D.

2. Power Connection

Connect the power cord to a dedicated 120V/60Hz grounded electrical outlet. Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

3. Door Reversal (Optional)

The door hinges are reversible, allowing the door to open from either the left or right side. Refer to the detailed instructions in the full PDF user manual for steps on how to reverse the door swing.

1. Temperature Control

The refrigerator features an adjustable mechanical thermostat control. The temperature range for the refrigerator compartment is 32°F to 47°F (0°C to 8°C), and for the chiller compartment, it is 27°F to 37°F (-3°C to 3°C). Turn the knob inside the refrigerator to adjust the temperature. Higher numbers on the dial indicate colder settings.

Handle Design

Retro streamlined design gives you comfortable feeling.

G A L A N Z



Adjustable Mechanical Thermostat Control

Refrigerator compartment 32°F to 47°F.
Chiller compartment 27°F to 37°F.

Removable Glass Shelves

Helps separate different food storage, which is beneficial to keep food fresh.



Image: Close-up view of the interior showing the adjustable temperature dial and removable glass shelves.

2. Interior Storage

The refrigerator is designed for efficient storage with various compartments:

- **Removable Glass Shelves:** Two removable glass shelves allow for flexible organization of food items. They can be adjusted or removed to accommodate taller items.
- **Crisper Glass Cover:** A dedicated crisper with a glass cover helps maintain humidity for fruits and vegetables.
- **Full Width Chiller Compartment:** Provides a colder zone for items requiring lower temperatures.
- **Door Storage:** Includes a 2-liter bottle door storage and a 7-can dispenser for beverages.

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; thermostat set to "OFF".	Ensure plug is secure; reset circuit breaker; adjust thermostat to a colder setting.
Temperature is too warm.	Door opened too frequently; warm food placed inside; poor air circulation; thermostat setting too high.	Minimize door openings; allow hot food to cool before storing; ensure proper clearance around unit; lower thermostat setting.
Excessive noise.	Unit not level; contact with wall/cabinet; normal operating sounds.	Adjust leveling legs; move unit away from contact points; gurgling/hissing sounds are normal refrigerant flow.
Door does not close properly.	Unit not level; gasket dirty/damaged; food packages obstructing.	Adjust leveling legs; clean/replace gasket; rearrange food items.

SPECIFICATIONS

Feature	Detail
Model Number	GLR33MBER10
Capacity	3.3 Cu.Ft (2.84 Cu.Ft Fresh Food, 0.39 Cu.Ft Freezer)
Dimensions (W x D x H)	17.6" x 21.02" x 35.43"
Weight	46.3 lbs
Voltage	120V / 60Hz
Annual Energy Consumption	218 kWh
Installation Type	Freestanding
Defrost System	Manual
Color	Blue
Special Features	Compact, Energy Efficient, Low Noise

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user manual PDF provided with your product or visit the Galanz official website. Keep your purchase receipt for warranty claims. You can also find the official user manual [here](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question