

[Manuals.plus](#) /

› [Galanz](#) /

› Galanz GLR31TWEER Retro Compact Refrigerator User Manual

Galanz GLR31TWEER

Galanz GLR31TWEER Retro Compact Refrigerator User Manual

Model: GLR31TWEER

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Galanz GLR31TWEER Retro Compact Refrigerator. This 3.1 Cu.Ft mini fridge features a retro white design, dual doors, an adjustable mechanical thermostat, and a dedicated freezer compartment. It is designed for convenience and energy efficiency, making it suitable for various spaces such as bedrooms, offices, or apartments.





Figure 1: Galanz GLR31TWEER Retro Compact Refrigerator

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Ensure the appliance is properly grounded.

3. WHAT'S IN THE BOX

Upon unpacking your Galanz GLR31TWEER refrigerator, please ensure all listed components are present:

- 1 x Refrigerator Unit
- 2 x Removable Glass Shelves
- 1 x Crystal Crisper
- 1 x Power Cord

4. SETUP AND INSTALLATION

4.1 Placement

Choose a location with sufficient space for proper ventilation. The refrigerator dimensions are approximately 19.17 inches (D) x 23.31 inches (W) x 35.16 inches (H). Allow adequate clearance around the unit for air circulation and door opening.



Figure 2: Product Dimensions

4.2 Leveling

The refrigerator is equipped with two leveling front legs. Adjust these legs to ensure the unit is stable and level on the floor. Proper leveling helps the doors close correctly and reduces vibration.

4.3 Initial Cleaning

Before first use, clean the interior and exterior of the refrigerator with a soft cloth and mild detergent. Rinse thoroughly and dry. This removes any manufacturing dust or odors.

4.4 Power Connection

Plug the refrigerator into a dedicated 120V/60Hz grounded electrical outlet. Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

5. OPERATING INSTRUCTIONS

5.1 Temperature Control

Your refrigerator features an adjustable mechanical thermostat control. The control dial ranges from 0 to 7. A larger number indicates a cooler temperature. The recommended temperature range for the refrigerator compartment is 32°F to 47°F, and for the freezer compartment, it is $\leq 0^{\circ}\text{F}$.

Handle Design ►

Retro streamlined design gives you comfortable feeling.

G A L A N Z



◀ Adjustable Mechanical Thermostat Control

Refrigerator compartment 32°F to 47°F.

Freezer compartment $\leq 0^{\circ}\text{F}$.

Crystal Crisper ►

Transparent and large capacity.



Figure 3: Adjustable Thermostat Control

5.2 Storage Compartments

The refrigerator is designed with a top-mount freezer compartment (0.95 Cu.Ft) and a fresh food capacity of 2.08 Cu.Ft. It includes two removable glass shelves for flexible storage and a crystal crisper for fruits and vegetables. The door balconies provide additional storage for bottles and smaller items.



Figure 4: Interior Storage Layout

The interior LED light illuminates the fresh food compartment, making it easy to view contents.

6. CARE AND MAINTENANCE

6.1 Cleaning

Regular cleaning of your refrigerator helps maintain its appearance and efficiency. Unplug the appliance before cleaning. Use a soft cloth with a mild, non-abrasive detergent and warm water to clean interior and exterior surfaces. For removable shelves and the crisper, wash them with warm soapy water, rinse, and dry thoroughly before returning them to the unit.

6.2 Defrosting

This refrigerator features a semi-automatic defrost system. Frost buildup in the freezer compartment should be removed periodically. For manual defrosting, turn the thermostat to '0' or unplug the unit, remove all food, and allow the frost to melt naturally. Do not use sharp objects to remove ice.

6.3 Door Reversal

The doors on your Galanz GLR31TWEER refrigerator are reversible, allowing you to change the swing direction to suit your space. Refer to the detailed instructions in the full PDF user manual for the door reversal procedure.

7. TROUBLESHOOTING

If you experience issues with your refrigerator, consult the following common problems and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; thermostat set to '0'.	Ensure plug is secure; reset circuit breaker; adjust thermostat setting.
Temperature is too warm.	Thermostat setting too high; door opened too frequently; large amount of warm food added.	Lower thermostat setting; minimize door openings; allow food to cool before storing.
Excessive noise.	Refrigerator not level; parts loose.	Adjust leveling legs; check for loose components and tighten.
Moisture buildup inside.	Door not closed properly; high humidity; food not covered.	Check door seal; ensure food is covered; wipe interior dry.

For more detailed troubleshooting, please refer to the complete user manual.

8. SPECIFICATIONS

Feature	Detail
Brand Name	Galanz
Model Info	GLR31TWEER
Item Weight	58.4 pounds
Product Dimensions	19.17 x 23.31 x 35.16 inches
Capacity	3.1 Cubic Feet
Annual Energy Consumption	320 Kilowatt Hours Per Year
Refrigerator Fresh Food Capacity	2.08 Cubic Feet
Freezer Capacity	0.95 Cubic Feet
Noise Level	42 dB
Installation Type	Freestanding
Form Factor	Compact, Freezer Top
Color	White
Voltage	120 Volts

Feature	Detail
Crispers/Drawers	1
Defrost System	Semi-Automatic
Door Hinges	Reversible
Shelf Type	Glass
Number of Shelves	2
Certification	Energy Star, UL

9. WARRANTY AND SUPPORT

Galanz products are manufactured to high-quality standards and are backed by a manufacturer's warranty. For specific warranty details, including coverage and duration, please refer to the warranty card included with your product or contact Galanz customer service.

For comprehensive instructions, safety guidelines, and detailed troubleshooting, please download the official user manual PDF:

[Download User Manual \(PDF\)](#)

You can also visit the official Galanz store for more product information and support:[Galanz Store on Amazon](#)

