

Manuals.plus /
 › JOYIN /
 › JOYIN Baby's Pumpkin Halloween Playset Instruction Manual

JOYIN 11560

JOYIN Baby's Pumpkin Halloween Playset Instruction Manual

Model: 11560 | Brand: JOYIN

1. INTRODUCTION

The JOYIN Baby's Pumpkin Halloween Playset is designed to provide engaging sensory play for infants and young children. This set includes a soft pumpkin basket and eight Halloween-themed plush toys, each offering unique interactive features.



Image 1: The complete JOYIN Baby's Pumpkin Halloween Playset, featuring the pumpkin basket and all eight plush toys.

2. PRODUCT COMPONENTS

The playset includes the following items:

- **1 Pumpkin Basket:** A soft, plush pumpkin-shaped basket with a handle for carrying and storing the toys.
- **1 Cat Plush:** A black cat plush that produces a meowing sound when squeezed.
- **1 Bat Plush:** A purple bat plush with crinkly wings.
- **1 Spider Plush:** A purple and orange spider plush that rattles when shaken.
- **1 Ghost Plush:** A white ghost plush that squeaks when squeezed.
- **1 Candy Corn Plush:** A soft plush representation of candy corn.
- **2 Candy Pluses:** Two soft plush candies.

PRODUCT SIZE



Image 2: A visual breakdown of the eight individual components included in the playset, detailing each plush toy and the pumpkin basket.

3. SETUP

The JOYIN Baby's Pumpkin Halloween Playset requires minimal setup.

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Inspection:** Inspect each plush toy and the pumpkin basket for any signs of damage or loose parts.
3. **Preparation:** The toys are ready for play directly after unpacking. No assembly or battery installation is required.

4. OPERATING INSTRUCTIONS

Each plush toy offers a unique interactive experience:

- **Cat Plush:** Gently squeeze the cat's body to activate the meowing sound.
- **Bat Plush:** Crinkle the bat's wings to produce a soft crinkling sound.
- **Spider Plush:** Shake the spider to hear a rattling sound.

- **Ghost Plush:** Squeeze the ghost's body to activate the squeaking sound.
- **Pumpkin Basket:** Use the basket to store all the plush toys or for imaginative play.



Image 3: Demonstrates the interactive features of the spider (shaking for rattle) and the cat (squeezing for meow).

5. CARE AND MAINTENANCE

Proper care ensures the longevity and hygiene of your playset.

- **Cleaning:** The plush toys can be machine washed on a delicate cycle with cold water. Air dry thoroughly. Avoid using harsh detergents or bleach.
- **Storage:** Store the playset in a clean, dry place away from direct sunlight when not in use. The pumpkin basket is ideal for storing all the smaller plush toys.

6. SAFETY INFORMATION

This product is designed with child safety in mind.

- **Age Recommendation:** Suitable for children aged 3 years and up.
- **Materials:** Made from child-safe, non-toxic materials.
- **Supervision:** Adult supervision is recommended during play, especially for younger children.
- **Damage:** Discontinue use if any part of the playset becomes damaged or shows signs of wear that could pose a choking hazard.

7. SPECIFICATIONS

Model Number	11560
Product Dimensions	7.56 x 7.09 x 4.92 inches (Pumpkin Basket)
Item Weight	7.7 ounces
Recommended Age	3 years and up
Material	Plush fabric, non-toxic materials



8 PCS VALUE PACK



2 PCS Candies



1 PCS Basket



1 PCS Cat – Meows



1 PCS Candy Corn



1 PCS Bat- Crinkles



1 PCS Spider - Rattles



1 PCS Ghost - Squeaks

Image 4: Detailed dimensions of the pumpkin basket and several plush toys for reference.

8. TROUBLESHOOTING

Common issues and their resolutions:

- **Loose Seams on Plush Toys:** In rare cases, a plush toy might develop loose seams due to manufacturing variations or extensive play. If this occurs, discontinue use immediately to prevent small parts from becoming a choking hazard. Contact customer support for assistance.
- **Sound Mechanism Not Working:** If a sound-producing toy (cat, ghost, spider) does not function, ensure it is not overly compressed or wet. If the issue persists, contact customer support.

9. WARRANTY AND SUPPORT

JOYIN is committed to customer satisfaction. If you encounter any issues with your product or have questions, please contact JOYIN customer support.

For further assistance, please visit the official JOYIN store:[JOYIN Store on Amazon](#).

© 2025 JOYIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B08BX71RLT>
More documents and user manuals: <https://manuals.plus/>