

Mera Twin Over Full with Trundle

Mera Twin Over Full Bunk Bed with Storage Drawers Instruction Manual

Model: Twin Over Full with Trundle

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use of this bunk bed. Keep this manual for future reference.

- **Weight Capacity:** The upper bed has a maximum weight capacity of 200 lbs. The bottom bed has a maximum weight capacity of 400 lbs. Do not exceed these limits.
- **Mattress Thickness:** For the upper bed, the recommended mattress thickness is 6 inches. For the bottom bed, the recommended mattress thickness is 8-10 inches. Ensure the mattress on the upper bunk is not too thick, as it could reduce the effectiveness of the guardrails.
- **Guardrails:** The upper bunk is equipped with full-length guardrails. Always ensure guardrails are properly installed and secured before use to prevent falls.
- **Ladder Safety:** Always use the provided ladder for accessing the upper bunk. Do not jump on or off the bunk bed.
- **Assembly:** This product requires adult assembly. Ensure all parts are present and all fasteners are securely tightened before use. Periodically check and re-tighten all fasteners.
- **Separation:** If separating the bunk bed into two individual beds, ensure both beds are stable and all components are correctly reconfigured.
- **Ventilation:** Ensure adequate ventilation around the bed.
- **Children:** Children under 6 years of age should not use the upper bunk.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Upper Bed Frame Components
- Lower Bed Frame Components
- Ladder

- Bed Slats (for both upper and lower beds)
- Storage Drawers (2 units)
- Hardware Pack (screws, bolts, nuts, Allen wrench, etc.)
- Instruction Manual

Note: Some components may be pre-assembled.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Please follow these general steps. Refer to the detailed diagrams in your physical manual for specific part identification and fastener placement.

1. **Prepare the Area:** Clear a spacious area for assembly. Lay out all components on a soft, clean surface to prevent scratches.
2. **Assemble Lower Bed Frame:** Begin by connecting the headboard, footboard, and side rails for the full-size lower bed using the provided hardware. Ensure all connections are snug but do not fully tighten until instructed.
3. **Install Lower Bed Slats:** Place and secure the wooden slats onto the support rails of the lower bed frame. Distribute them evenly and fasten them according to the instructions.
4. **Assemble Upper Bed Frame:** Construct the twin-size upper bed frame, including its headboard, footboard, and side rails.
5. **Install Upper Bed Slats:** Secure the wooden slats for the upper bed.
6. **Attach Upper Bed to Lower Bed:** Carefully lift and align the upper bed frame onto the lower bed frame, securing it with the designated connecting hardware. This step often requires two people.
7. **Install Guardrails:** Attach the full-length guardrails to the upper bunk. Ensure they are firmly secured.
8. **Attach Ladder:** Securely attach the ladder to the designated side of the bunk bed.
9. **Assemble Storage Drawers:** Follow the instructions to assemble the two storage drawers. Insert them into the designated space under the lower bed.
10. **Final Tightening:** Once all components are in place and aligned, go back and fully tighten all screws, bolts, and fasteners. Do not overtighten.

Visual Aid:



Image: An assembled Mera Twin Over Full Bunk Bed in grey, featuring the upper twin bunk, lower full bunk, and two storage drawers pulled out from underneath the lower bed.

OPERATING INSTRUCTIONS

Using the Bunk Bed Configuration

The Mera Twin Over Full Bunk Bed is designed for efficient space utilization. Ensure mattresses are placed correctly on both bunks, adhering to the recommended thickness guidelines.

- **Upper Bunk Access:** Always use the provided ladder to access the upper bunk. Ensure the ladder is stable before climbing.
- **Storage Drawers:** The two integrated storage drawers slide smoothly on their tracks. Pull them out gently to access stored items and push them back in fully when not in use to maintain a tidy appearance.

Separating into Two Individual Beds

This bunk bed can be separated into a twin-size bed and a full-size bed. This process requires careful disassembly and reassembly.

1. **Remove Mattresses:** Carefully remove both mattresses from the bunk bed.
2. **Disassemble Ladder and Guardrails:** Detach the ladder and guardrails from the upper bunk.
3. **Separate Bunks:** With the help of another adult, carefully unfasten the connecting hardware that joins the upper and lower bunks. Gently lift the upper bunk off the lower bunk.
4. **Reconfigure Upper Bed:** The upper bunk can now be used as a standalone twin bed. Ensure any exposed connection points are covered or smoothed for safety.
5. **Reconfigure Lower Bed:** The lower bunk functions as a standalone full bed.
6. **Check Stability:** After separation, ensure both individual beds are stable and all remaining fasteners are tight.

Visual Aid:



Image: A grey Mera Twin Over Full Bunk Bed with bedding, positioned in a bedroom, illustrating its use as a combined unit.

MAINTENANCE

Regular maintenance will help prolong the life and safety of your bunk bed.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the wood finish.
- **Hardware Check:** Periodically (e.g., every 3-6 months) inspect all bolts, screws, and fasteners. Re-tighten any loose hardware to ensure the bed remains stable and secure. Do not overtighten.
- **Wood Care:** Protect the wood from extreme temperature changes and humidity. Avoid placing hot items directly on the wood surface.
- **Drawer Maintenance:** Keep the drawer tracks clean and free of debris to ensure smooth operation.

TROUBLESHOOTING

If you encounter any issues with your bunk bed, refer to the following common solutions:

- **Bed feels wobbly:** This is usually due to loose hardware. Re-check and tighten all bolts and screws throughout the entire bed structure. Ensure the bed is on a level surface.
- **Drawers not sliding smoothly:** Check the drawer tracks for any obstructions or debris. Ensure the drawers are assembled correctly and the rollers are properly aligned.
- **Missing parts during assembly:** Double-check all packaging materials. If parts are genuinely missing, contact customer support with your purchase details and the specific part numbers required.
- **Squeaking noises:** Squeaking can often be resolved by tightening all hardware. If the issue persists, try applying a small amount of lubricant (e.g., silicone spray) to metal-on-metal contact points, if applicable, or between wood joints.

SPECIFICATIONS

Feature	Detail
Product Type	Bunk Bed
Size	Twin-Over-Full with Trundle
Overall Product Dimension	78.7"L x 55.9"W x 62.3"H
Material	Pine wood + MDF
Color	Grey
Number of Slats	10 (for each bed)
Upper Bed Weight Capacity	200 LBS
Bottom Bed Weight Capacity	400 LBS
Recommended Upper Mattress Thickness	6"
Recommended Bottom Mattress Thickness	8" - 10"
Assembly Required	Yes

Detailed Dimensions:

SIZE : INCH



Image: A technical drawing of the bunk bed with various dimensions labeled in inches, including length, width, height, and internal measurements of the bunks and drawers.

WARRANTY INFORMATION

Mera products are manufactured to high-quality standards. For specific warranty details regarding your Twin Over Full Bunk Bed, please refer to the warranty card included with your purchase or contact Mera customer support. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Mera customer support. Have your product model number (Twin Over Full with Trundle) and purchase information ready when you call or email.

For the most up-to-date contact information, please visit the official Mera website or refer to your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question