



[Manuals.plus](#) /

> [Moulinex](#) /

> Moulinex Food Processor Bowl Masterchef 20 350 370 450 470 A81 A92 ADG54 AEM94 User Manual

Moulinex B08BY2CC7B_localization

Moulinex Food Processor Bowl User Manual

For Masterchef 20, 30, 35, 350, 370, 450, 470, A81, A92, ADG54, AEM94 Series

INTRODUCTION

This instruction manual provides essential information for the proper use, maintenance, and compatibility of your new Moulinex replacement bowl for Masterchef food processors. Please read this manual thoroughly before first use to ensure optimal performance and longevity of the product.

PRODUCT OVERVIEW

The Moulinex replacement bowl is an original spare part designed to seamlessly integrate with compatible Moulinex Masterchef food processor models. It is constructed from durable, transparent plastic, allowing for easy monitoring of ingredients during processing. The bowl features a sturdy handle for secure handling and a central spindle for attaching various processing accessories.



This image displays the transparent plastic replacement bowl for Moulinex Masterchef food processors. The bowl has a sturdy handle on the right side and a central column designed to accommodate various food processor attachments. Measurement markings are visible on the side, indicating capacity.

COMPATIBILITY

This replacement bowl is compatible with a wide range of Moulinex Masterchef food processor models. To ensure proper fit, locate the identification plate, usually found on the underside of your appliance, and verify your model number against the list below. If your model is not explicitly listed, please contact Moulinex customer support for assistance.

Known Compatible Series:

- Moulinex Masterchef 20 Series (e.g., A8132A, A8132E, A81333, A81341)
- Moulinex Masterchef 30 Series (e.g., A12392, A12911, A12921, A12925)
- Moulinex Masterchef 35 ELECTRONIC Series (e.g., A13011, A13023)
- Moulinex Masterchef 350, 370, 450, 470 Series
- Moulinex A81, A92, ADG54, AEM94 Series
- Other compatible models include: A12912, A12922, A12928, A1292E, A12931, A12932, A81351, A813E(A813P1), A92011, A92022, A92024, A9202A, A9202B, A920P1, AB6613, AB6615, AB6621, AB6624, AB6625, AB6626, AB6627, AB6628, AB662A, AB662C, AB662D, AB662E, AB662F, AB662G, AB662J, AB662K, AB662M, AB662N, AB662Q, AB662T, AB6631, AB6632, AB6641, AB6642, AB6643, AB6644, AB6645, AB6646, AB6647, AB6648, AB6649, AB664A, AB664B, AB66P1, AB66R1, AB66RE, AB6721, AB6724, AB6727, AB6728, AB6729, AB6731, AB67P1, AC8011, AC8012, AC8013, AC8022, AC8023, AC8024, AC8025, AC8027, AC8028, AC8029, AC802A, AC802B, AC802D, AC802E, AC8031, AC8032, AC8041, AC8042, AC8043, AC8044, AC8045, AC80P2, AC80P3, AC80P4, ADG511, ADG541, ADG542, ADG543, ADG544, ADG545, ADG546, ADG547, ADG5R1, ADG5R2, ADG5R6, ADG5RD, ADG611, ADG641, ADG642, ADG643, ADG644, ADG645, ADG646, ADG6R1, ADG6R6, ADGX41, ADGXR1, AEM941, AEM942, AX9112, AX9121, AX9141, AX9142, AX9143, AX9144, AX9145, AX9146, AX9147, AX9148, AX9149, AX914A, AX91B1, AX91P1, AX91P2, AX91R1, AX91RG, AX91S1, AY1341, AY1DFA141, DFA142, DFA143, DFA144, DFA145, DFA146, DFA147, DFA148, DFA1B1.

This list is extensive but may not be exhaustive. Always cross-reference with your appliance's model number.

SETUP

Before installing the new bowl, ensure your food processor is unplugged from the power outlet.

1. **Unpack:** Carefully remove the new bowl from its packaging.
2. **Inspect:** Check the bowl for any signs of damage from shipping. Do not use if damaged.
3. **Clean:** Wash the bowl with warm, soapy water before first use. Rinse thoroughly and dry completely.
4. **Position:** Place the bowl onto the motor base of your food processor, aligning the base of the bowl with the locking mechanism on the motor unit.
5. **Secure:** Rotate the bowl clockwise until it clicks securely into place. Ensure it is firmly locked before adding ingredients or attachments.

OPERATING

The bowl functions as the primary container for all food processing tasks. Always ensure the bowl is correctly installed and locked onto the motor base before operating the appliance.

- **Capacity:** Observe the 'Maxi' fill line indicated on the bowl to avoid overfilling, which can lead to spills or damage to the appliance.
- **Attachments:** Insert the appropriate processing attachment (e.g., blade, grater disc) onto the central spindle inside the bowl before adding ingredients.
- **Lid:** Always secure the food processor lid onto the bowl before starting the appliance. Most models have a safety interlock that prevents operation if the lid is not properly closed.
- **Safety:** Never reach into the bowl while the appliance is operating. Use the food pusher provided with your food processor when adding ingredients through the feed tube.

MAINTENANCE

Regular cleaning and proper care will extend the life of your Moulinex food processor bowl.

- **Daily Cleaning:** After each use, disassemble the bowl from the motor base. Wash the bowl immediately with warm water and a mild dish soap. Use a soft sponge or cloth to prevent scratching.
- **Dishwasher Safe:** The bowl is generally dishwasher safe (top rack recommended), but refer to your specific food processor model's manual for confirmation. High heat cycles may cause warping over time.
- **Drying:** Ensure the bowl is completely dry before storing to prevent water spots or odors.
- **Stains:** For stubborn food stains, a paste of baking soda and water can be applied and left for a short period before scrubbing gently. Avoid abrasive cleaners or scouring pads.
- **Storage:** Store the bowl in a clean, dry place, away from direct sunlight or extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your replacement bowl, consider the following common solutions:

Problem	Possible Cause	Solution
Bowl does not lock onto base.	Incorrect alignment; debris in locking mechanism.	Ensure bowl is correctly aligned with the motor base. Check for and remove any food debris or obstructions in the locking grooves.
Food processor does not start with bowl attached.	Bowl not fully locked; lid not properly secured.	Rotate the bowl until it clicks firmly into place. Ensure the lid is correctly positioned and locked, activating the safety interlock.
Bowl appears cloudy or scratched.	Use of abrasive cleaners; hard water deposits.	Use only soft cloths and mild detergents for cleaning. For hard water, try a vinegar rinse. Scratches are typically permanent.

SPECIFICATIONS

Product Dimensions (L x W x H): 19 x 16 x 12 cm (approximately 7.5 x 6.3 x 4.7 inches)

Material: Durable transparent plastic

Brand: Moulinex

Model Number (Product ASIN): B08BY2CC7B_localization

WARRANTY AND SUPPORT

As an original Moulinex spare part, this bowl is designed for quality and durability. Information regarding specific spare parts availability is not provided, however, standard return policies typically allow for returns or replacements within 30 days of purchase if the item is defective or not as described.

For further assistance, compatibility inquiries, or to report a defect, please contact the seller or Moulinex customer support directly. Always provide your product's model number and the ASIN (B08BY2CC7B) when seeking support.