

Whirlpool WWDE 7512

Whirlpool WWDE 7512 Washer Dryer User Manual

Model: WWDE 7512 | Brand: Whirlpool

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Whirlpool WWDE 7512 washer dryer. Please read these instructions carefully before using the appliance and keep them for future reference.

The Whirlpool WWDE 7512 is a front-loading washer dryer with a 7 kg washing capacity and a 5 kg drying capacity, designed for household use. It features a maximum spin speed of 1200 revolutions per minute (rpm).



Image 1.1: Front view of the Whirlpool WWDE 7512 Washer Dryer, showing the control panel, detergent drawer, and main door.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the appliance.
- Do not touch the appliance with wet hands.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install or store the appliance where it will be exposed to the weather.
- Do not wash or dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.

3. INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Ensure all transit bolts and packing are removed from the appliance before use. Failure to do so can cause severe damage.

3.2 Positioning

Place the washer dryer on a firm, level floor. The appliance is freestanding. Adjust the feet to ensure the machine is perfectly stable and level. All feet are adjustable.

- Width: 595 mm
- Height: 540 mm
- Depth: 840 mm

3.3 Water Connection

Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks. This model does not support separate hot and cold water tap connections.

3.4 Electrical Connection

Connect the power cord to a suitable grounded electrical outlet. The power supply cable length is 120 cm. The appliance requires a 13 Amp current and has a connected load of 1850 Watts.

4. CONTROLS AND PROGRAMS

The control panel features a program selector dial, function buttons, and indicator lights. Refer to the diagram on the appliance for specific button functions.

- **Wash Cycles:** The appliance offers 1 main washing cycle, which can be customized with various options.
- **Drying Cycles:** There are 5 dedicated drying cycles available.
- **Spin Speed:** Maximum spin speed is 1200 rpm. There are 2 spin speed options to choose from.
- **Temperature Control:** Wash temperature can be adjusted in steps. Drying temperature is also adjustable.
- **Delay Start:** A fixed delay start option is available.
- **Special Features:** Includes Adjustable Drying Temperature, Reverse Tumble Action, and is Energy Efficient.

5. OPERATING INSTRUCTIONS

5.1 Loading Laundry

Open the front door and load laundry into the stainless steel drum. Do not overload the machine. The maximum washing capacity is 7 kg, and the maximum drying capacity for cottons is 5 kg.

5.2 Adding Detergent

Pull out the detergent drawer and add the appropriate amount of detergent and fabric softener to the designated compartments.

5.3 Selecting a Program

Turn the program selector dial to choose the desired wash or dry program. Select additional options like spin speed or temperature as needed using the corresponding buttons.

5.4 Starting the Cycle

Press the Start/Pause button to begin the selected cycle. The machine will automatically proceed through the washing and/or drying phases.

5.5 Drying Function

When using the drying function, ensure the load does not exceed 5 kg for cottons. You can adjust the drying temperature and benefit from the reverse tumble action, which helps to reduce tangling and creasing.

6. MAINTENANCE AND CLEANING

6.1 Exterior Cleaning

Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.2 Detergent Drawer

Regularly clean the detergent drawer to prevent residue buildup. Remove the drawer and rinse it under running water.

6.3 Drum Cleaning

The stainless steel drum is designed for durability. Periodically run a maintenance wash cycle with a drum cleaner to remove any odors or residue.

6.4 Filter Cleaning

Refer to the appliance diagram for the location of the lint filter (for drying) and drain pump filter. Clean these regularly to ensure optimal performance and prevent blockages.

7. TROUBLESHOOTING

If your appliance is not functioning correctly, consult the following common issues before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press start.
Water not filling	Water tap closed; inlet hose kinked or blocked.	Open water tap; straighten hose; clean filter in inlet hose.
Excessive vibration/noise	Transit bolts not removed; appliance not level; uneven load.	Remove transit bolts; adjust feet to level machine; redistribute laundry.
Clothes not drying properly	Overloaded dryer; lint filter blocked; incorrect drying program.	Reduce load size; clean lint filter; select appropriate drying program.

8. SPECIFICATIONS

Brand	Whirlpool
Model Number	WWDE 7512
Washing Capacity	7 kg

Drying Capacity (Cottons)	5 kg
Color	White
Loading Type	Front Load
Maximum Spin Speed	1200 rpm
Number of Washing Cycles	1
Number of Drying Cycles	5
Drum Material	Stainless Steel
Net Weight	66 kg
Gross Weight	67.5 kg
Width	595 mm
Height	540 mm
Depth	840 mm
Connected Load	1850 W
Current	13 A
Power Cable Length	120 cm
Energy Class	B
Annual Energy Consumption (Wash Only)	210 kWh/year
Energy Consumption (Wash Only)	1.05 kWh
Annual Water Consumption (Wash Only)	11600 liters/year
Water Consumption (Wash and Dry Load)	86 liters
Special Features	Adjustable Drying Temperature, Reverse Tumble Action, Energy Efficient

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your appliance or visit the official Whirlpool website. Keep your purchase receipt as proof of purchase.

If you encounter issues not covered in the troubleshooting section, contact Whirlpool customer service for assistance.