

[Manuals.plus](#) /

› [FLOITTUY](#) /

› FLOITTUY Super Silent Metal Alarm Clock F-20F0703 Instruction Manual

FLOITTUY F-20F0703

FLOITTUY Super Silent Metal Alarm Clock

Model: F-20F0703

Brand: FLOITTUY

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your FLOITTUY Super Silent Metal Alarm Clock, Model F-20F0703. Please read this manual thoroughly before using the product to ensure correct usage and optimal performance.



Image: Front view of the FLOITTUY Super Silent Metal Alarm Clock in pink, showcasing its round design and analog display.

PRODUCT FEATURES

- **Super Silent Operation:** Equipped with a non-ticking quartz movement for a quiet environment.
- **Night Light Function:** A soft, convenient night light illuminates the dial for easy time reading in the dark.
- **Easy Set Controls:** Simple knobs for setting time and alarm.
- **Battery Operated:** Requires one AA battery (not included) for operation.
- **Durable Construction:** Features a metal shell for enhanced durability and a retro aesthetic.



Silent, no noise



Accurate time



Decorating your life

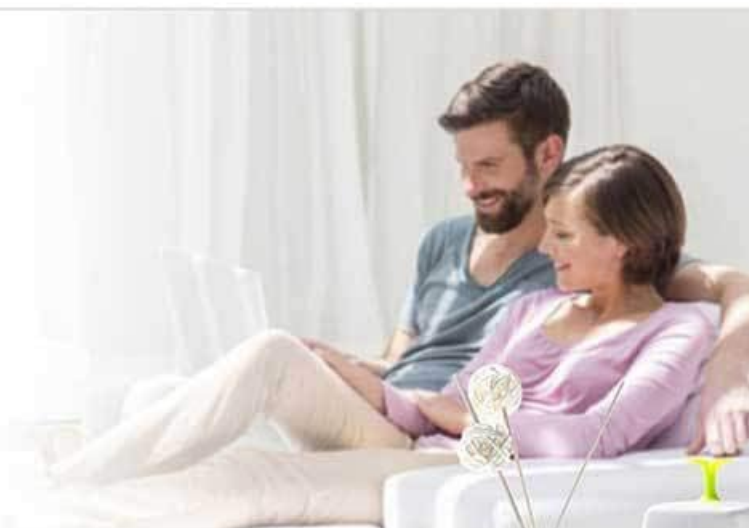 


Image: Two FLOITTUY alarm clocks, one pink and one light green, positioned on a bedside table. A person is sleeping peacefully in the background, emphasizing the silent operation of the clocks.

PACKAGE CONTENTS

Upon unpacking, please ensure all items are present and in good condition:

- 1 x FLOITTUY Super Silent Metal Alarm Clock (Model F-20F0703)
- 1 x User Manual

SETUP

Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Remove the cover by sliding it down or lifting it off.
3. Insert one (1) AA battery (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators.
4. Replace the battery compartment cover securely.

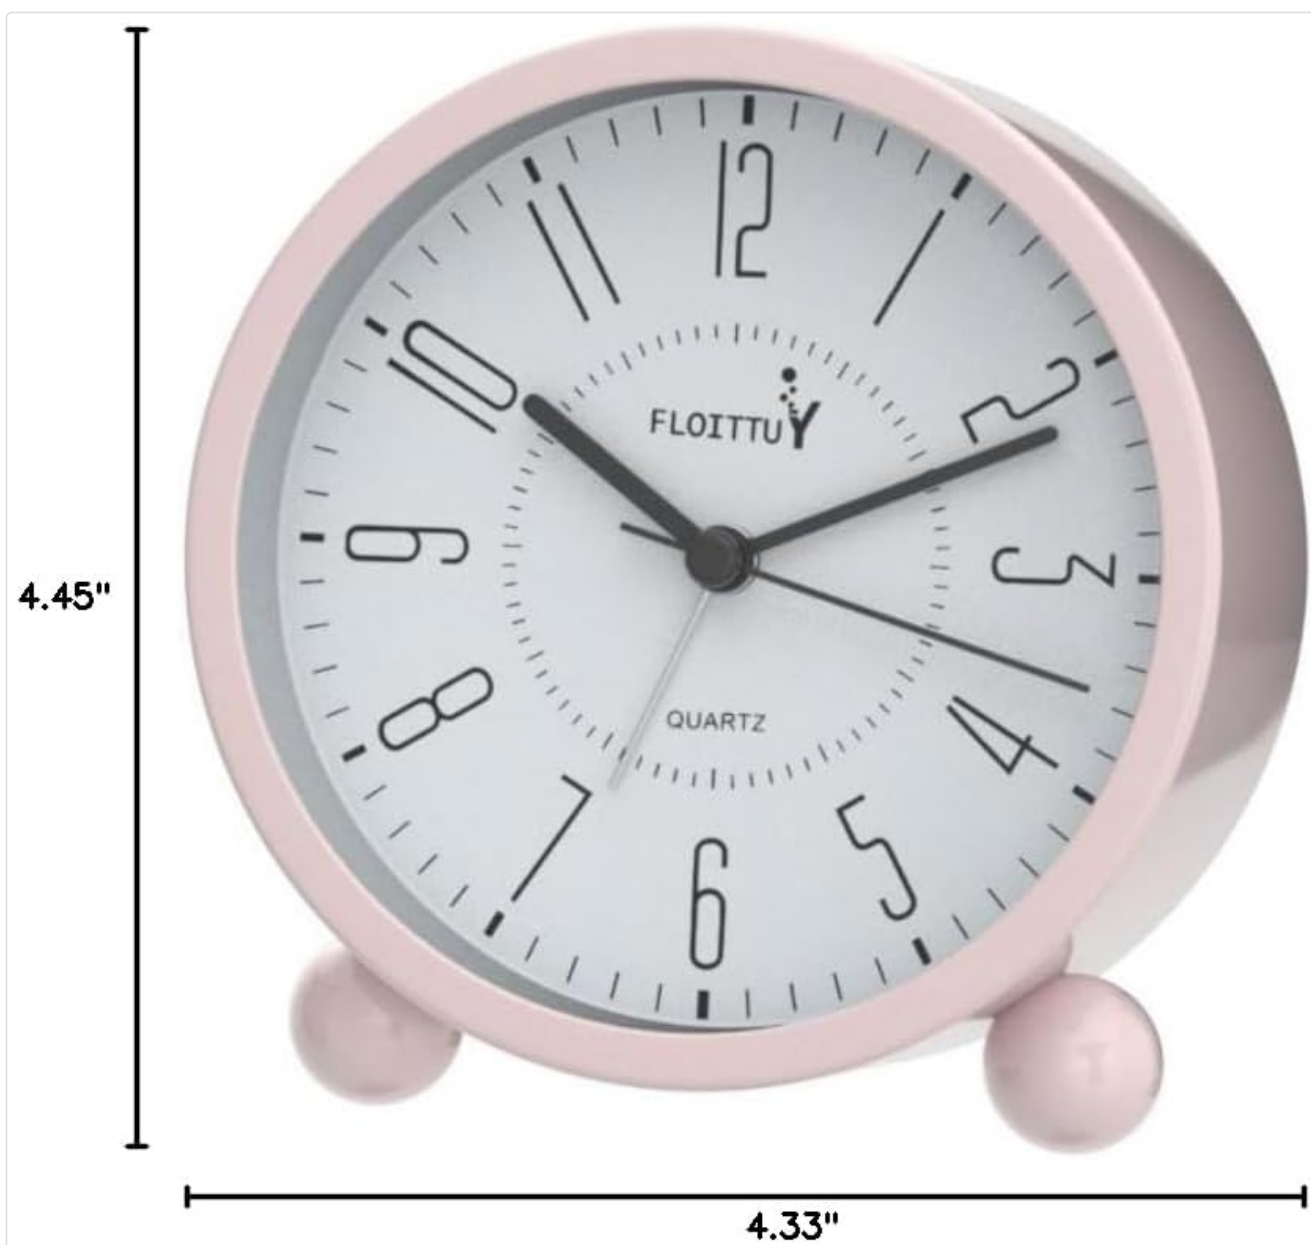 


Image: The back panel of the FLOITTUY alarm clock, clearly labeled with the 'LIGHT BUTTON', 'TIME KNOB', 'ALARM KNOB', 'ALARM SWITCH', and 'BATTERY COMPARTMENT' for easy identification of controls.

OPERATING INSTRUCTIONS

1. Setting the Time

1. Locate the **TIME KNOB** on the back of the clock.
2. Rotate the **TIME KNOB** in either direction until the hour and minute hands display the correct current time.

2. Setting the Alarm

1. Locate the **ALARM KNOB** on the back of the clock.
2. Rotate the **ALARM KNOB** to set the alarm hand to your desired wake-up time.
3. Slide the **ALARM SWITCH** (ON/OFF) to the "ON" position to activate the alarm.
4. To turn off the alarm when it sounds, slide the **ALARM SWITCH** to the "OFF" position.

3. Using the Night Light

1. Press and hold the **LIGHT BUTTON** located on the back of the clock.
2. The dial will illuminate with a soft light, allowing you to read the time in low-light conditions.
3. Release the button to turn off the night light.



Image: A hand pressing the light button on the back of the pink FLOITTUY alarm clock, demonstrating the activation of the dial's illumination for night viewing.

MAINTENANCE

Cleaning

- Wipe the clock's surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish.

Battery Replacement

- Replace the AA battery when the clock's movement becomes erratic or the alarm sound weakens.
- Follow the battery installation steps outlined in the "Setup" section.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

- **Clock not working / Time inaccurate:** Ensure the battery is inserted correctly with the correct polarity. Replace with a fresh AA battery if necessary.
- **Alarm not sounding:** Verify that the **ALARM SWITCH** is in the "ON" position. Check if the alarm time is set correctly using the **ALARM KNOB**. Ensure the battery has sufficient power.
- **Night light not working:** Check the battery level. Ensure the **LIGHT BUTTON** is being pressed firmly.

SPECIFICATIONS

Model Number	F-20F0703
Brand	FLOITTUY
Material	Metal
Dimensions (W x H)	4.33 inches x 4.45 inches
Weight	0.19 Kilograms (6.7 ounces)
Power Source	1 x AA Battery (not included)
Display Type	Analog
Special Features	Silent Movement, Beep Alarm, Night Light
UPC	768563922954

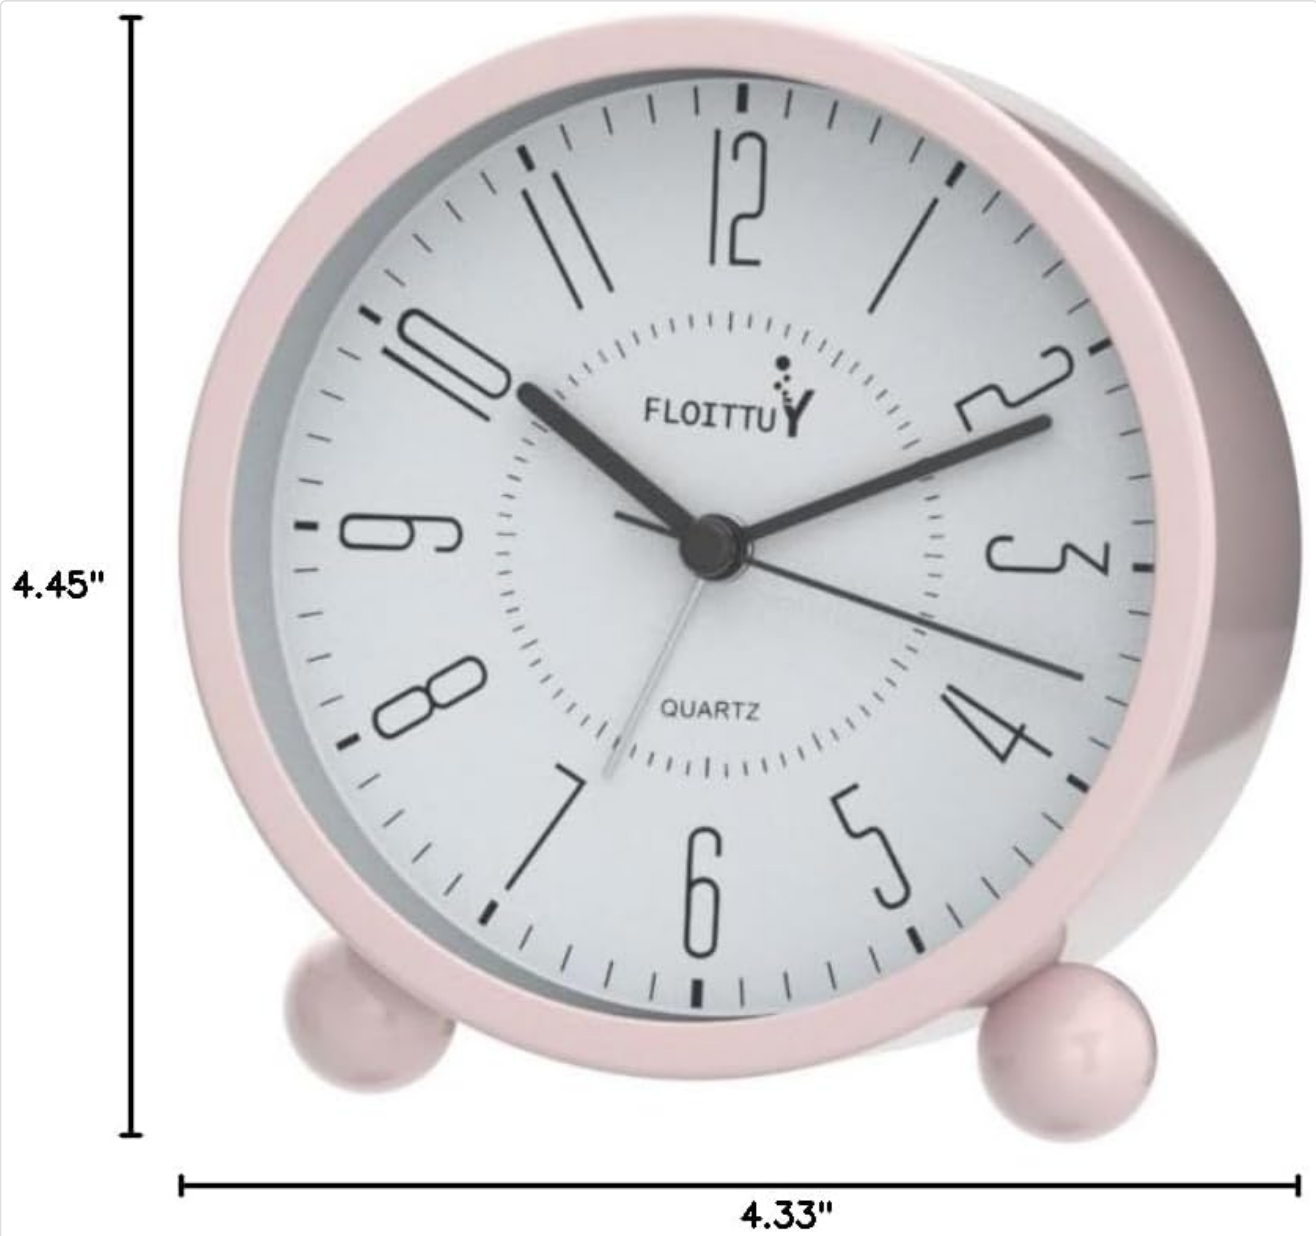 


Image: The back panel of the FLOITTUY alarm clock, also indicating its dimensions: 4.33 inches in width and 4.45 inches in height.

SAFETY INFORMATION

- Keep the clock away from water and high humidity.
- Avoid dropping the clock or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the clock yourself. Contact support if issues arise.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children.

WARRANTY AND SUPPORT

FLOITTUY is committed to providing quality products and customer satisfaction. If you encounter any issues or have questions regarding your alarm clock, please contact us directly through the Amazon platform. Our customer service team is available to assist you with any concerns.

Please refer to your purchase documentation for specific warranty details and return policies.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question