

FLEXISPOT EC1W-EU+PR1206-Maple

FLEXISPOT EG1 Electric Height Adjustable Standing Desk

Model: EC1W-EU+PR1206-Maple | Brand: FLEXISPOT

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your FLEXISPOT EG1 Electric Height Adjustable Standing Desk. Please read this manual thoroughly before assembly and operation to ensure proper functionality and to prevent damage or injury.

The FLEXISPOT EG1 desk is designed to offer a versatile workspace, allowing users to easily switch between sitting and standing positions. It features a robust electric lifting system, a spacious desktop, and a user-friendly control panel.



Figure 1.1: FLEXISPOT EG1 Electric Height Adjustable Standing Desk.

2. SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Keep children and pets away from the desk during operation.
- Do not place hands or objects near moving parts during height adjustment.
- Avoid overloading the desk. The maximum load capacity is 70 kg (excluding desktop weight).
- Disconnect power before cleaning or maintenance.
- Operate the desk only in a dry environment.
- The desk features an anti-collision rebound function. If an obstruction is detected, the desk will stop and slightly reverse its movement.

ANTI-COLLISION REBOUND FUNCTION

Stops and Rebounds for Safe Workspaces

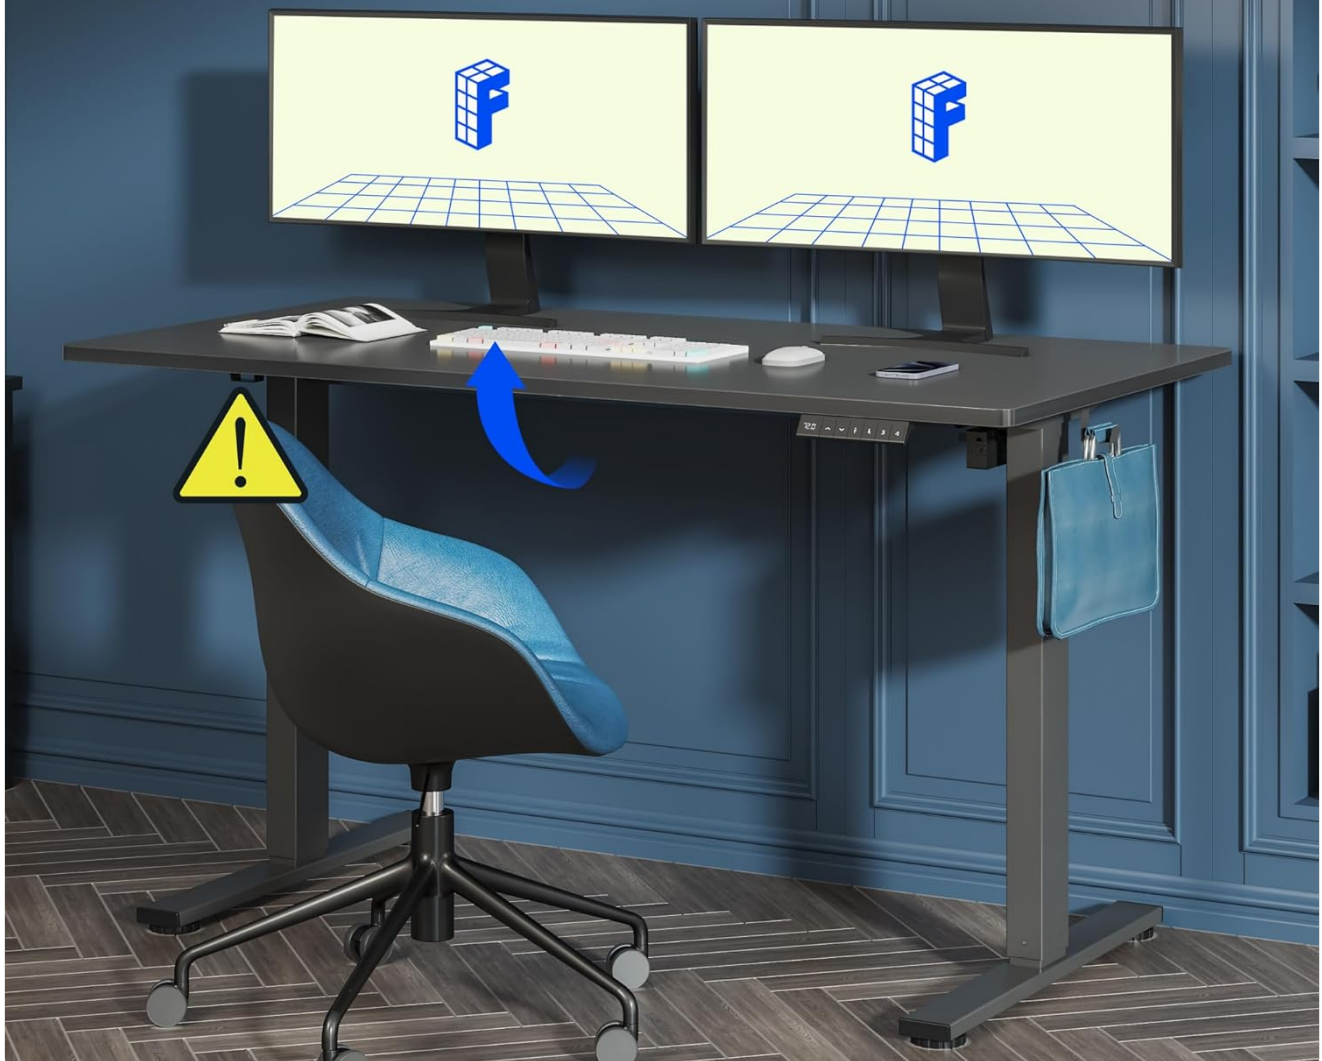 


Figure 2.1: Anti-Collision Rebound Function in action.

3. PACKAGE CONTENTS

Before assembly, verify that all parts are present and undamaged. Refer to the detailed parts list provided in your physical assembly manual. Typical components include:

 
- Desktop (Maple Top)
- Desk Frame (White)
- Lifting Columns (Legs)
- Control Box
- Control Panel (2-Button)
- Power Cable
- Assembly Hardware (screws, tools)
- Cable Management Tray
- Side Hooks (Set of 2)

4. ASSEMBLY INSTRUCTIONS

Assembly of the FLEXISPOT EG1 desk is designed to be straightforward and typically takes less than 30 minutes. For detailed, step-by-step instructions, please refer to the dedicated assembly manual included in your product packaging. The following provides a general overview:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify against the parts list.
2. **Assemble Frame:** Attach the lifting columns to the crossbar and feet according to the manual's diagrams.
3. **Attach Desktop:** Securely fasten the desktop to the assembled frame using the provided screws.
4. **Install Control Box and Panel:** Mount the control box and connect the motor and control panel cables. Position the 2-button control panel conveniently under the desktop.
5. **Cable Management:** Utilize the included cable management tray and side hooks to organize power cords and accessories for a tidy workspace.
6. **Connect Power:** Plug the power cable into the control box and then into a wall outlet.

Note: The industrial-grade steel frame ensures solid construction. Ensure all connections are tight for stability.

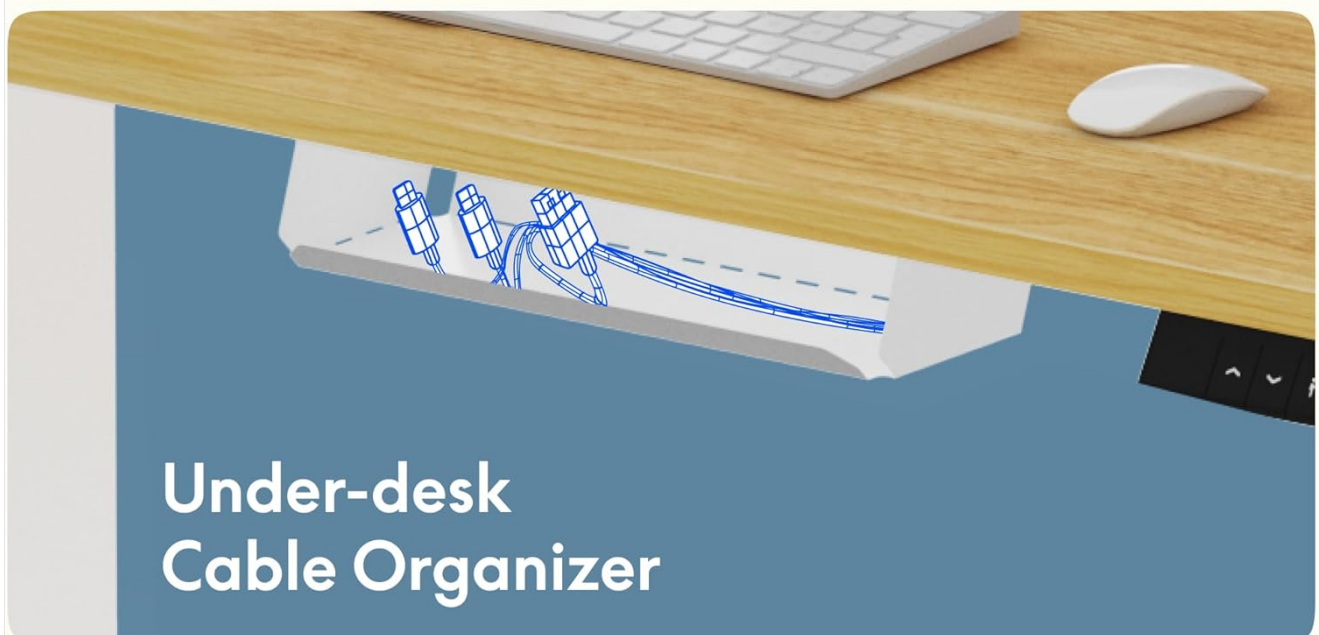

5. OPERATING INSTRUCTIONS

The FLEXISPOT EG1 desk features an intuitive 2-button control panel for easy height adjustment.

5.1. Control Panel Overview



Figure 5.1: Smart Control Panel with LED Display.

- **Up/Down Buttons:** Use the arrow buttons to smoothly adjust the desk height. The LED display shows the current height in centimeters.
- **Height Range:** The desk can be adjusted from 73 cm (minimum) to 121 cm (maximum).
- **Speed:** The desk adjusts at a maximum speed of 2.5 cm/second.
- **Noise Level:** Operation is quiet, with a noise level of less than 50 dB.

LARGE ADJUSTMENT RANGE

Height Options for Everyone



Figure 5.2: Large Adjustment Range for various user heights and activities.

5.2. Adjusting Height

To adjust the desk height:

- Press and hold the **Up** arrow button to raise the desk.
- Press and hold the **Down** arrow button to lower the desk.
- Release the button when the desired height is reached.

The desk transitions smoothly between sitting and standing positions in less than 10 seconds, making it ideal for dynamic work environments.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your FLEXISPOT EG1 desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

- **Cable Management:** Periodically check and tidy cables to prevent tangling or damage, especially during height adjustments.
- **Fasteners:** Occasionally check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Motor Inspection:** While the motor is designed for 20,000 cycles, listen for any unusual noises during operation. If you notice any issues, refer to the troubleshooting section or contact support.

7. TROUBLESHOOTING

If you encounter issues with your FLEXISPOT EG1 desk, refer to the common problems and solutions below. If the problem persists, contact customer support.

| Problem | Possible Cause | Solution |
|---------------------------------|--|---|
| Desk does not move | Power cable disconnected; Control box error; Overload | Check power connection; Reset the desk (unplug for 30s, then replug); Reduce weight on desk |
| Uneven height adjustment | Obstruction; Loose connections | Clear any obstructions; Check all frame connections and tighten if loose |
| Desk stops unexpectedly | Anti-collision activated; Overheating | Check for obstructions; Allow motor to cool down for 20 minutes before resuming operation |
| Unusual noises during operation | Loose components; Motor issue | Ensure all screws are tight; Contact customer support if noise persists |

8. SPECIFICATIONS

| Feature | Detail |
|----------------------------|---------------------------------------|
| Model Number | EC1W-EU+PR1206-Maple |
| Brand | FLEXISPOT |
| Desktop Dimensions (L x W) | 120 cm x 60 cm (47.24 x 23.62 inches) |
| Height Adjustment Range | 73 cm to 121 cm (28.7 to 47.6 inches) |
| Lifting Speed | Max 2.5 cm/second |
| Noise Level | Less than 50 dB |
| Load Capacity | 70 kg (without desktop) |
| Frame Material | Industrial-grade Steel |
| Desktop Material | Engineered Wood (Maple finish) |
| Control Panel | 2-Button with LED Display |
| Certifications | CE, ROHS |


| Feature | Detail |
|-------------|----------------|
| Item Weight | 29.4 Kilograms |

9. WARRANTY AND SUPPORT

 
FLEXISPOT stands by the quality of its products. Your EG1 desk is covered by the following warranties:

- **5-Year Warranty:** Covers the desk frame, motor, and other mechanical components.
- **2-Year Warranty:** Covers the controller, switch, and electronic components.

For warranty claims, technical assistance, or any questions not covered in this manual, please contact FLEXISPOT customer support. Please have your model number (EC1W-EU+PR1206-Maple) and purchase information ready when contacting support.



TRUST FLEXISPOT DESKS FOR WORRY-FREE WORK!

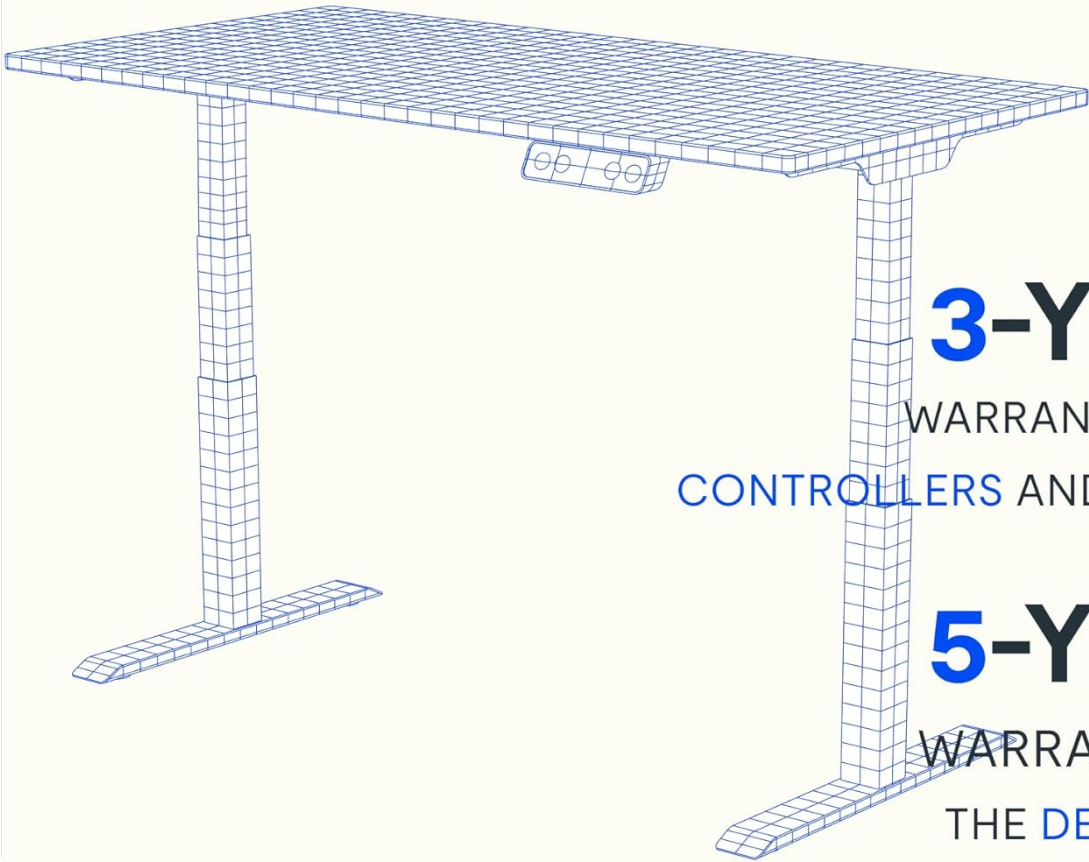

3-YEAR

 


 

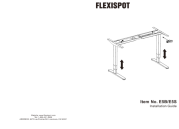 
WARRANTY ON ON
CONTROLLERS AND MOTORS

5-YEAR

WARRANTY ON
THE DESK FRAME

Figure 9.1: FLEXISPOT Warranty Information.

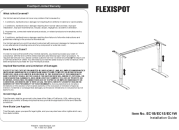Related Documents - EC1W-EU+PR1206-Maple
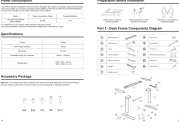
| | |
|---|--|
|  | <p>FlexiSpot EC1B/EC1S/EC1W Installation Guide and Limited Warranty</p> <p>Comprehensive installation guide and limited warranty details for FlexiSpot EC1B/EC1S/EC1W electric height-adjustable desks. Includes specifications, troubleshooting, and product care information.</p> |
|  | <p>FlexiSpot EC1 Electric Height Adjustable Standing Desk Assembly Guide</p> <p>This assembly guide provides step-by-step instructions for setting up the FlexiSpot EC1 electric height-adjustable standing desk. It includes specifications, parts list, assembly procedures, keypad operation, troubleshooting tips, and warranty information.</p> |
|  | <p>FlexiSpot EH1-EU Electric Standing Desk Frame User Manual</p> <p>Comprehensive user manual for the FlexiSpot EH1-EU electric standing desk frame, detailing specifications, assembly instructions, wiring, operation, and troubleshooting for optimal use.</p> |
|  | <p>FlexiSpot E7-Flow Electric Height Adjustable Desk Frame - User Manual</p> <p>Comprehensive user manual for the FlexiSpot E7-Flow electric height-adjustable desk frame, covering specifications, power consumption, installation, operation, and troubleshooting.</p> |
|  | <p>FlexiSpot E7B/E7W/E7S-Plus Height Adjustable Desk User Manual & Installation Guide</p> <p>Detailed user manual for FlexiSpot E7B-Plus, E7W-Plus, and E7S-Plus height adjustable desks. Includes technical specifications, step-by-step installation instructions, handset operation, troubleshooting guide, and warranty information.</p> |
|  | <p>FlexiSpot E5B/E5S Installation Guide: Step-by-Step Assembly Instructions</p> <p>Comprehensive installation guide for the FlexiSpot E5B and E5S height-adjustable desk frames. Learn how to assemble your new desk with clear steps, specifications, and troubleshooting tips.</p> |