

CasaFan 315260

CasaFan ECO GENUINO-L 152 Ceiling Fan with Light

Model: 315260

INTRODUCTION

Thank you for choosing the CasaFan ECO GENUINO-L 152 Ceiling Fan with Light. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions carefully before installation and retain them for future reference.

For a detailed PDF manual, please refer to: [Official PDF Manual](#)

SAFETY INSTRUCTIONS

- Ensure the main power supply is disconnected before installation or maintenance.
- Installation must be performed by a qualified electrician in accordance with local wiring regulations.
- The mounting structure must be capable of supporting the fan's weight (7 kg).
- Maintain a minimum clearance of 2.3 meters (7.5 feet) from the floor to the lowest point of the fan blades.
- Do not insert objects into the path of the rotating blades.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- Ceiling Fan Motor Housing (Brushed Chrome)
- 3 Natural Wood Blades (152 cm diameter)
- Remote Control
- Ceiling Rod (280 mm)
- Mounting Bracket and Hardware
- Integrated LED Light Kit
- Instruction Manual



Image: The CasaFan ECO GENUINO-L 152 ceiling fan with three natural wood blades and a brushed chrome motor housing, viewed from below.

INSTALLATION INSTRUCTIONS

Important: Ensure power is OFF at the circuit breaker before beginning installation.

1. Prepare the Mounting Location:

Identify a suitable location on the ceiling capable of supporting the fan's weight. The fan can be installed on sloped ceilings up to 12 degrees.

2. Install the Mounting Bracket:

Secure the mounting bracket to the ceiling joist or a suitable electrical junction box using the provided hardware. Ensure it is firmly attached.

3. Assemble the Downrod:

Attach the 280 mm ceiling rod to the motor housing. Feed the electrical wires through the downrod.

4. Hang the Fan:

Carefully lift the fan assembly and hang it onto the mounting bracket. This will allow for easier wiring.

5. Perform Electrical Connections:

Connect the fan's electrical wires to the household wiring according to the wiring diagram in the detailed PDF manual. Ensure all connections are secure and insulated.

6. Attach the Blades:

Securely attach the three natural wood blades to the motor housing using the provided screws. Ensure all screws are tightened.



Image: A single natural wood fan blade, showcasing its texture and design.

7. Install the Light Kit:

Connect and secure the integrated LED light kit to the fan motor housing as per the instructions in the detailed manual.

8. Secure the Canopy:

Slide the canopy up to the ceiling and secure it to cover the mounting bracket and wiring connections.

OPERATING INSTRUCTIONS

Your CasaFan ECO GENUINO-L 152 ceiling fan is operated via the included radio frequency remote control.



Image: The white remote control for the CasaFan ceiling fan, showing buttons for speed, light, and direction.

Remote Control Functions:

- **Power On/Off:** Press the power button to turn the fan on or off.
- **Fan Speed Control:** Use the speed buttons to select one of the 6 available speeds. The maximum speed is 144 RPM.
- **Light Control:** Press the light button to turn the integrated LED light on or off.
- **Summer/Winter Function (Reverse):** This fan features a reversible motor for year-round use.
 - **Summer Mode:** Blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.
 - **Winter Mode:** Blades rotate clockwise, drawing cool air up and distributing warm air evenly throughout the room.
- **Slow Motion Function:** Activate the slow motion function for a gentle breeze, ideal for sleeping.

MAINTENANCE

- **Cleaning:**

Periodically clean the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the fan is turned off and power is disconnected before cleaning.
- **Blade Care:**

The natural wood blades can be gently wiped. Avoid excessive moisture to prevent warping or damage to the wood finish.
- **Tighten Fasteners:**

Check all screws and fasteners annually to ensure they are secure. Loose connections can cause noise or wobble.
- **Light Source:**

The integrated LED light source is designed for long life and typically does not require replacement. If issues arise, consult a qualified electrician or contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote control battery depleted.	Check circuit breaker; Verify all electrical connections; Replace remote control batteries.
Fan wobbles	Loose blades or mounting hardware; Unbalanced blades.	Ensure all blade screws and mounting screws are tight; Check for bent blades; Use a balancing kit if necessary.

Problem	Possible Cause	Solution
Light does not work	Loose wiring; Faulty LED driver; Remote control battery depleted.	Check light kit wiring; Consult a qualified electrician; Replace remote control batteries.
Remote control not responding	Battery depleted; Remote not paired with fan.	Replace remote control batteries; Refer to the detailed manual for remote pairing instructions.

SPECIFICATIONS

Feature	Detail
Brand	CasaFan
Model Number	315260
Color	Brushed Chrome, Natural Wood
Fan Type	Ceiling Fan
Power Source	Corded Electric
Style	Modern
Product Dimensions (D x W x H)	152 cm x 152 cm x 50 cm
Recommended Room Size	Up to 35 m²
Special Feature	Integrated LED Light
Mounting Type	Ceiling Mount
Control Type	Remote Control
Number of Speeds	6
Noise Level	1 Decibel
Motor Power Consumption	16.6 W (DC/EC low consumption)
Number of Blades	3
Airflow Capacity	9176 Cubic Meters per Hour
Max Speed	144 RPM
Voltage	230 V
Indoor/Outdoor Use	Indoor
Energy Efficiency	Energy Efficient (Light: Class F)
Material	Wood (Blades)
Item Weight	7 Kilograms

Feature	Detail
---------	--------

Max Slope Installation	Up to 12 degrees
------------------------	------------------



Image: Energy efficiency label showing the product's energy class and consumption details.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official CasaFan website or contact your retailer. The detailed PDF manual also contains important contact information and warranty terms.
Official PDF Manual: <https://manuals.plus/m/759933be097cc7b5e019d7c1b8421479ff76b4a0e5d71aa3b3883eb85ff43eae>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

