

[Manuals.plus](#) /

> [Beyblade](#) /

> Beyblade Burst Evolution Star Storm Battle Set Instruction Manual - Model E0722

Beyblade E0722

Beyblade Burst Evolution Star Storm Battle Set

MODEL: E0722

Official Instruction Manual

Important Safety Information

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

What's in the Box

- Beyblade Burst Star Storm Beystadium
- 2 Beyblade Burst SwitchStrike right/left-spin launchers
- 2 Beyblade Burst SwitchStrike right-spin tops (Genesis Valtryek V3, Satomb S3)



Image: All components of the Beyblade Burst Evolution Star Storm Battle Set, featuring the green Beystadium, two Beyblade tops (blue and red), and two launchers.

Setup Instructions

1. **Assemble the Beystadium:** Carefully connect the transparent top cover to the green base of the Star Storm Beystadium. Ensure all clips are securely fastened.
2. **Assemble Beyblade Burst Tops:** Each Beyblade top consists of multiple interchangeable components. Align and snap the Energy Layer, Forge Disc, and Performance Tip together for both Genesis Valtryek V3 and Satomb S3. Ensure they are firmly locked.



Image: Close-up of two assembled Beyblade Burst tops, Genesis Valtryek V3 (blue) and Satomb S3 (black/purple), held in hands, ready for battle.

3. **Attach Launchers:** Insert the ripcord into the launcher. Attach a Beyblade top to the launcher by aligning the slots and twisting until it clicks into place.

Visual Setup Guide:

Your browser does not support the video tag.

Video: Official demonstration of the Beyblade Burst Evolution Star Storm Battle Set, showing assembly and initial use of the Beystadium, tops, and launchers.

Operating Instructions

1. **Launch Your Beyblade:** Hold the launcher over the Beystadium. Pull the ripcord firmly to launch your Beyblade top into the arena. Aim for the designated launch zones for optimal performance.
2. **Battle Rules:** Face off against an opponent. Beyblade Burst tops can "burst" into pieces during battle (burst rates vary). The first player whose opponent's top bursts into pieces scores 2 points. If a top is knocked out of the arena or stops spinning before the opponent's, the other player scores 1 point. The first player to reach 3 points wins the battle.
3. **Utilize SwitchStrike Features:** Genesis Valtryek V3 and Satomb S3 tops feature SwitchStrike

abilities that can change their performance characteristics during battle. Observe how these features activate and adapt your strategy.

4. **Digital Battles:** Scan the codes on your Beyblade Burst tops to unlock them in the Beyblade Burst app. Compete in digital battles and track your collection.



Image: A smartphone screen displaying the Beyblade Burst app, with a Beyblade top being scanned to engage in digital battles.

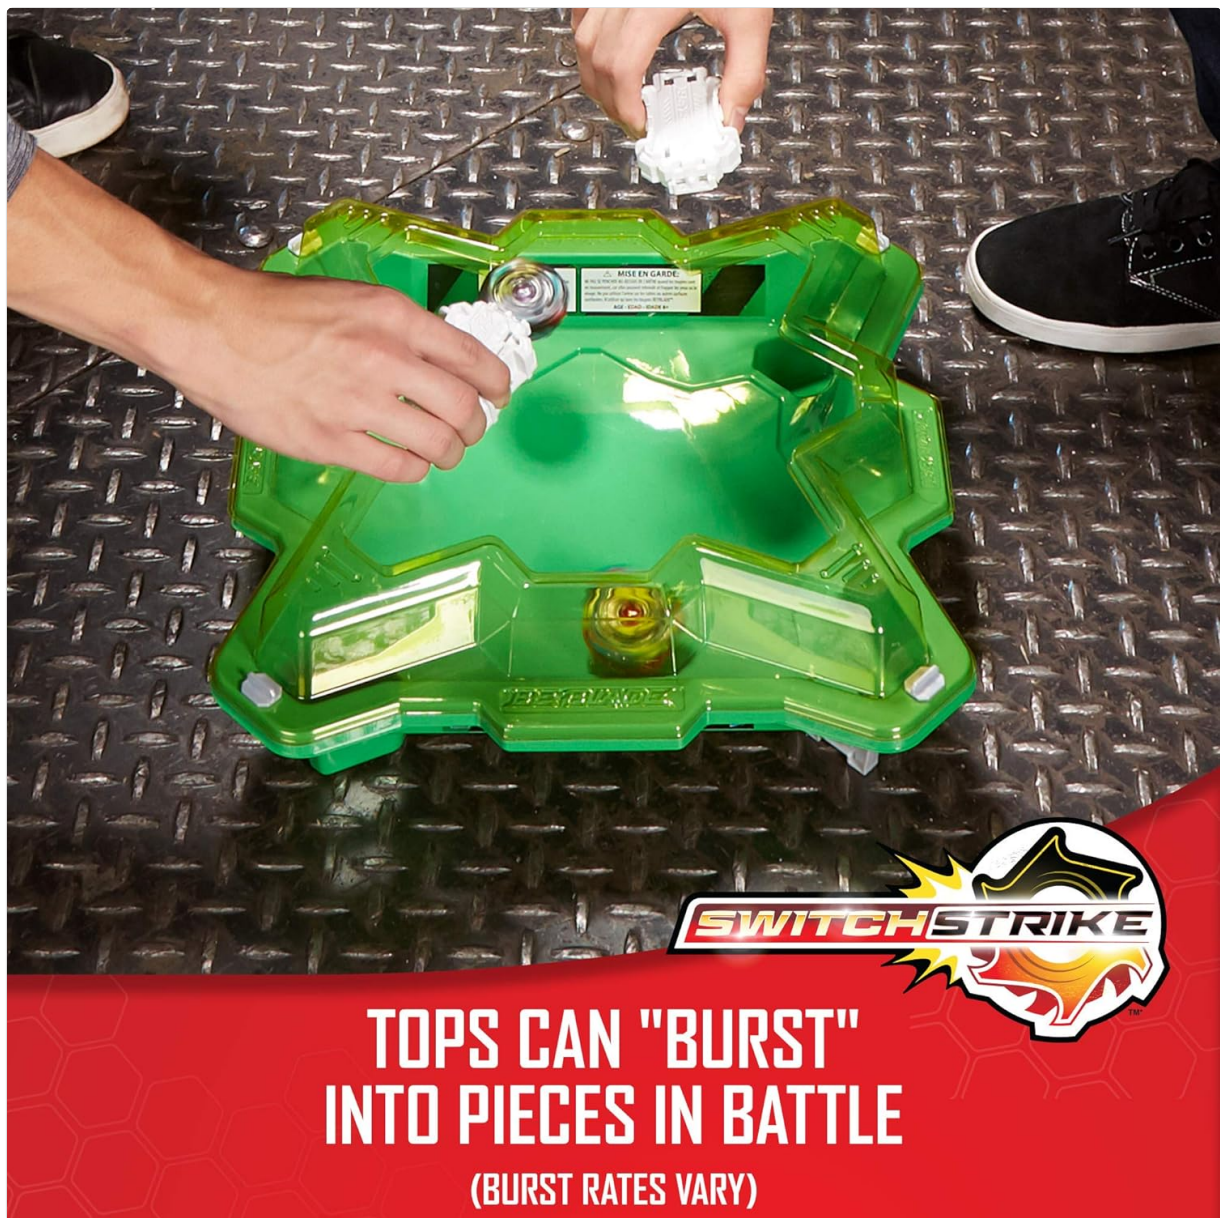


Image: Two individuals launching their Beyblade Burst tops into the green Star Storm Beystadium, demonstrating active gameplay.

Maintenance

To ensure the longevity of your Beyblade Burst Evolution Star Storm Battle Set, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down the Beystadium and Beyblade tops with a soft, dry cloth after use to remove dust and debris. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store all components in a cool, dry place away from direct sunlight and extreme temperatures. Keep small parts organized to prevent loss.
- **Inspection:** Periodically check Beyblade tops and launchers for any signs of wear or damage. Replace any broken or worn-out parts to maintain optimal performance and safety.

Troubleshooting

- **Tops not spinning correctly:** Ensure the Beyblade top components (Energy Layer, Forge Disc, Performance Tip) are correctly assembled and securely locked. Check the launcher for any obstructions or damage.
- **Tops bursting too easily:** Burst rates vary, but if tops consistently burst with minimal impact, ensure

all components are authentic Beyblade Burst parts and are correctly assembled.

- **Launcher not working:** Verify the ripcord is fully inserted into the launcher and that the Beyblade top is securely attached. If the issue persists, the launcher may be damaged and require replacement.

Product Specifications

Feature	Detail
Product Dimensions	3.62 x 14.76 x 14.76 inches
Item Weight	1.5 pounds
Item Model Number	E0722
Manufacturer Recommended Age	8 years and up
Release Date	June 29, 2020
Manufacturer	Hasbro

Warranty and Support

For warranty information, product support, or to inquire about replacement parts, please contact Hasbro customer service directly. Refer to the packaging for specific contact details or visit the official Beyblade website.

Official Beyblade Website: [Visit the Beyblade Store](#)