

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [HCDZ](#) /

> [HCDZ Replacement Remote Control for LG DVD Players Instruction Manual](#)

**HCDZ DV426, DV626, DV398H, DV397H, DV392H, DV246, DV276, DV256, DV286K, DZ9500**

# HCDZ Replacement Remote Control for LG DVD Players

Instruction Manual

## INTRODUCTION

---

This manual provides essential information for the proper setup, operation, and maintenance of your HCDZ Replacement Remote Control. This remote is designed to be compatible with various LG DVD Player models, including DV426, DV626, DV398H, DV397H, DV392H, DV246, DV276, DV256, DV286K, and DZ9500. Please read these instructions carefully before use.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Back of the remote control with the battery cover closed.



Figure 2: Battery compartment with cover removed, showing where to insert AAA batteries.

## 2. No Programming Required

This HCDZ replacement remote control is pre-programmed and does not require any setup or code entry. Once batteries are installed, it is ready for immediate use with compatible LG DVD Player models.

## OPERATING INSTRUCTIONS

To operate your LG DVD Player with this remote control, ensure there is a clear line of sight between the remote's infrared (IR) emitter and the IR receiver on your DVD player. Point the remote directly at the DVD player and press the desired function button.

- **Power:** Press the Power button to turn the DVD player on or off.
- **Playback Controls:** Use Play, Pause, Stop, Fast Forward, and Rewind buttons for media control.
- **Navigation:** Use the directional arrow buttons (Up, Down, Left, Right) and the Enter/OK button to navigate menus.

- **Volume:** Adjust the volume if your DVD player supports this function via the remote.
- **Number Pad:** Use the number buttons to select tracks or input specific values.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

If you encounter issues with your remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are installed correctly with the correct polarity (+/-).
  - Replace the batteries with fresh AAA batteries.
  - Ensure there is a clear line of sight between the remote and the DVD player's IR receiver. Remove any obstructions.
  - Make sure you are within the effective range of the remote control (typically 15-20 feet).
- **Specific Buttons Not Working:**
  - Verify that your LG DVD player model is listed as compatible with this remote control.
  - Some functions may be specific to certain DVD player models or may require the DVD player to be in a particular mode.

## SPECIFICATIONS

---

| Feature                 | Description  |
|-------------------------|--|
| Brand                   | HCDZ   |
| Compatible Devices      | LG DVD/Blu-ray Players (DV426, DV626, DV398H, DV397H, DV392H, DV246, DV276, DV256, DV286K, DZ9500) |
| Connectivity Technology | Infrared (IR)  |
| Controller Type         | Button Control   |
| Special Feature         | No programming needed  |
| Batteries Required      | 2 x AAA (not included)   |

## WARRANTY

---

This HCDZ Replacement Remote Control comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for any warranty claims.

## SUPPORT

---

If you have any questions, require further assistance, or experience issues that cannot be resolved using the troubleshooting guide, please contact the seller or HCDZ customer support through the platform where the product was purchased. Provide your product model and a detailed description of the issue for efficient support.