

Deerma HS007

Deerma HS007 Handheld Garment Steamer Iron User Manual

Model: HS007

1. INTRODUCTION

The Deerma HS007 Handheld Garment Steamer Iron is designed for convenient wrinkle removal at home or during travel. Featuring an 800W heating system, foldable compact body, and a 100ml water tank, it supports both vertical and horizontal steaming. Its lightweight construction allows for easy handling, while quick heating helps maintain garments efficiently across different fabric types.

2. PRODUCT OVERVIEW

The Deerma HS007 steamer combines portability with efficient performance. Key features include:

- **Foldable & Portable Design:** Compact structure for easy storage and travel.
- **Fast Heating Technology:** 800W system for quick steam generation.
- **Vertical & Horizontal Steaming:** Flexible use for various garment types.
- **100ml Water Tank:** Sufficient capacity for multiple garments with easy monitoring.
- **Comfortable Handling:** Ergonomic grip for reduced hand strain.

Components

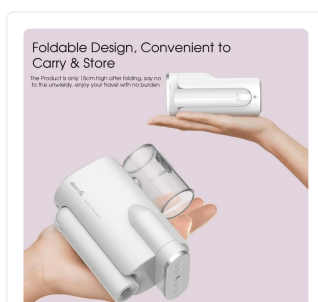


Figure 2.1: The Deerma

HS007 steamer showcasing its foldable design for convenient carrying and storage. When folded, it is only 15cm high.

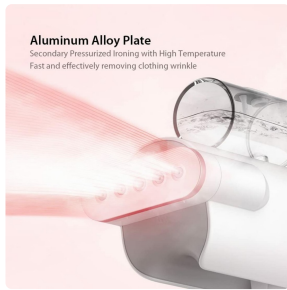


Figure 2.2: The aluminum alloy plate, designed for secondary pressurized ironing with high temperature, effectively removing clothing wrinkles.



Figure 2.3: The steamer with its transparent 100ml water tank clearly visible, ready for use.

Overhead 100ML Water Tank,
Gravity Forward, Less Effort When Ironing



Figure 2.4: Illustration of the overhead 100ml water tank design, which utilizes gravity to reduce effort during ironing.



Figure 2.5: Features of the

steamer including its pressurized heating system, ability to kill bacteria while removing wrinkles, and patented water design.



Figure 2.6: The Deerma HS007 steamer and its included accessories, such as the water cup, stored compactly in its dedicated container.

3. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- Always ensure the voltage matches your power supply.
- Do not immerse the steamer in water or other liquids.
- Keep the appliance out of reach of children.
- Do not touch the hot steam plate or steam nozzle during operation or immediately after use.
- Only use distilled or demineralized water to prevent mineral buildup.
- Unplug the steamer when not in use, before filling with water, or before cleaning.
- Do not operate the steamer with a damaged cord or plug.
- Use the steamer only for its intended purpose as a garment steamer.

4. SETUP

1. **Unfold the Steamer:** Gently unfold the handle until it locks into place.
2. **Fill the Water Tank:** Remove the water tank from the steamer. Open the rubber stopper and fill the tank with up to 100ml of distilled or demineralized water. Close the stopper securely and reattach the tank to the steamer.
3. **Connect Power:** Plug the power cord into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

Follow these steps for effective garment steaming:

1. **Pre-heating:** Once plugged in, the steamer will begin to heat up. The indicator light will illuminate. The steamer is ready for use when the light changes or stops blinking (refer to specific indicator behavior in your model). Optimal steam is typically ready in just 20 seconds.
2. **Steaming Garments:**

- **Vertical Steaming:** Hang the garment on a hanger. Hold the steamer upright, keeping the steam plate a few inches away from the fabric. Move the steamer slowly downwards over the wrinkles.
 - **Horizontal Steaming:** Place the garment on a flat, heat-resistant surface. Move the steamer across the fabric, applying gentle pressure if desired.
3. **Using the Cleaning Brush:** Before steam ironing, attach the cleaning brush accessory to the steam plate. Use it to remove dander, lint, or dust from the surface of clothes. This helps prepare the fabric for more effective wrinkle removal.
 4. **Sterilization:** The high-temperature steam sterilizes your clothes while removing wrinkles.
 5. **Finishing:** Once steaming is complete, press the power button to turn off the steamer and unplug it from the outlet.

Product in Action

Your browser does not support the video tag.

Video 5.1: This video demonstrates the Deerma HS007 Handheld Garment Steamer Iron in use, highlighting its quick heating, effective wrinkle removal, and ease of handling for various garments. It shows the steamer being filled with water, generating steam, and being used on different fabric types.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your steamer.

- **Cleaning:** After each use, ensure the steamer is unplugged and completely cooled. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- **Descaling:** Over time, mineral deposits can build up, especially if tap water is used. To descale, fill the water tank with a mixture of 50% white vinegar and 50% distilled water. Run the steamer until half the solution is used, then turn it off and let it sit for 30 minutes. Repeat the process with the remaining solution. Finally, rinse the tank and run two full tanks of plain distilled water through the steamer to flush out any vinegar residue. Perform descaling every 3-6 months depending on usage and water hardness.
- **Storage:** Empty the water tank completely before storing. Fold the steamer and store it in a cool, dry place, preferably in its original packaging or a dedicated storage container.

7. TROUBLESHOOTING

If you encounter issues with your Deerma HS007 steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or weak steam	Low water level; Steamer not heated sufficiently; Mineral buildup.	Refill water tank; Allow more time for pre-heating (approx. 20 seconds); Perform descaling.
Water leakage	Water tank not properly sealed; Overfilled water tank; Steamer tilted too much.	Ensure water tank stopper is secure; Do not overfill past the max line; Keep steamer upright during use.

Problem	Possible Cause	Solution
Steamer not turning on	Not plugged in; Power outlet issue; Appliance malfunction.	Check power connection; Try a different outlet; Contact customer support if issue persists.

8. SPECIFICATIONS

- **Brand:** Deerma
- **Model Number:** HS007 (DM-HS007)
- **Wattage:** 800 Watts
- **Voltage:** 240 Volts
- **Water Tank Capacity:** 100 Milliliters
- **Item Weight:** 450 Grams
- **Style:** Compact, Foldable
- **Product Benefits:** Remove Wrinkle
- **Included Components:** Steamer
- **Country of Origin:** China
- **UPC:** 754083691395

9. WARRANTY AND SUPPORT

The Deerma HS007 Handheld Garment Steamer Iron comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact the manufacturer directly.

Manufacturer: Guangdong Deerma Technology Co., Ltd., Foshan city, Guangdong Province, China

Importer (India): ALLIN IMPEX SERVICES PVT LTD, C-38, SECTOR-63, NOIDA, UP, 201301. Mobile: 9313132789, Email: sales@allinexporters.com

Extended warranty options may be available from third-party providers. Please check with your retailer for details.