
[Manuals.plus](#) /

› [Legami](#) /

› Legami KT0003 Avocado Kitchen Timer Instruction Manual

Legami KT0003


Legami KT0003 Avocado Kitchen Timer Instruction Manual

Brand: Legami

Model: KT0003

PRODUCT OVERVIEW

This manual provides instructions for the Legami KT0003 Avocado Kitchen Timer. This mechanical timer is designed for kitchen use, offering a simple and reliable way to track cooking times up to 60 minutes without requiring batteries.

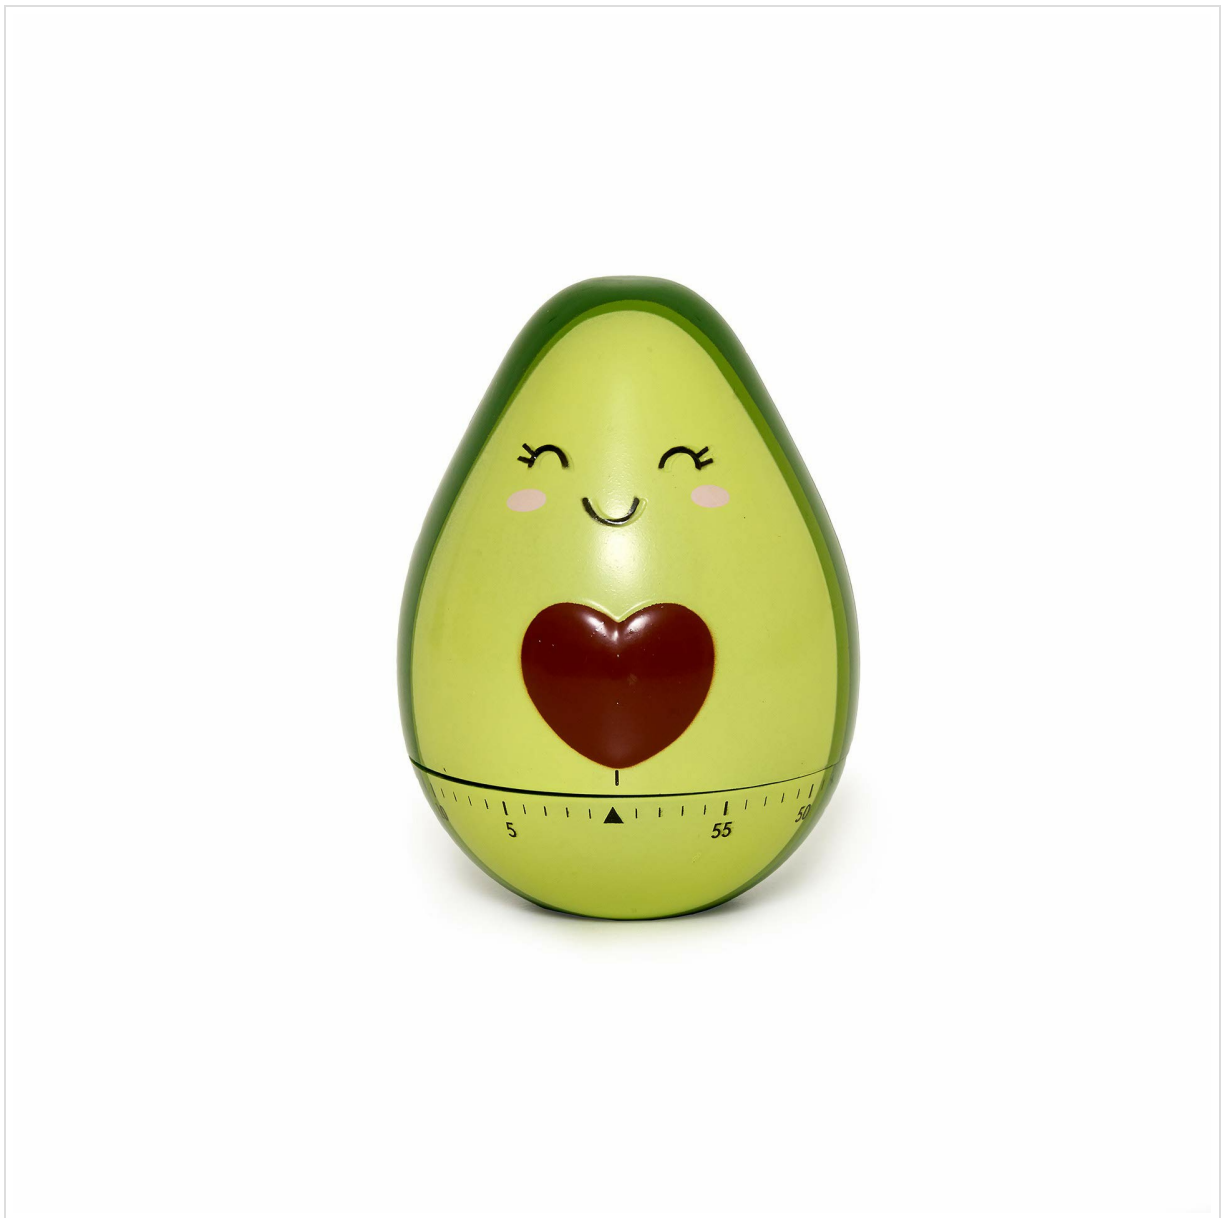

The image shows the Legami KT0003 Avocado Kitchen Timer, a green avocado-shaped device with a smiling face and a red heart, enclosed in its transparent retail packaging. The packaging also displays 'Kitchen timer' text.

Key Features:

- **No batteries required:** Operates mechanically.
- **Manually adjustable:** Set desired time by rotating the dial.
- **60-minute maximum timer:** Suitable for various cooking tasks.
- **Compact design:** Measures approximately 6cm diameter and 9cm height.
- **Durable plastic construction:** Avocado-themed design.

SETUP

The Legami KT0003 Avocado Kitchen Timer requires no assembly or battery installation. It is ready for use directly out of the packaging.

1. Remove the timer from its packaging.
2. Place the timer on a stable, flat surface in your kitchen.

OPERATING INSTRUCTIONS

To ensure proper operation and accurate timing, follow these steps:

1. **Wind the Timer:** Before setting your desired time, fully wind the timer by rotating the top half of the avocado clockwise to the 60-minute mark. This action charges the internal spring mechanism.
2. **Set the Desired Time:** After winding, rotate the top half of the avocado counter-clockwise to your desired time setting. Align the pointer with the corresponding minute mark on the dial.
3. **Start Timing:** The timer will begin counting down immediately after setting.
4. **Alarm:** Once the set time has elapsed, the timer will emit an audible ring to indicate completion.

***Important:** Always wind the timer fully to 60 minutes first, then set it to your desired time. Failing to do so may result in inaccurate timing or the alarm not sounding.*

MAINTENANCE AND CARE

To maintain the functionality and appearance of your Legami Avocado Kitchen Timer, follow these guidelines:

- **Cleaning:** Wipe the timer with a soft, damp cloth. Do not immerse the timer in water or use abrasive cleaners, as this can damage the internal mechanism.
- **Storage:** Store the timer in a dry place, away from extreme temperatures and direct sunlight.
- **Avoid Drops:** Handle the timer with care to prevent damage from drops or impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not ring or rings faintly.	The timer was not fully wound to 60 minutes before setting the desired time.	Always wind the timer clockwise to the 60-minute mark first, then rotate counter-clockwise to your desired time.
Timer is inaccurate.	Improper winding procedure or internal mechanism issue.	Ensure the timer is fully wound to 60 minutes before setting. If the issue persists, the internal mechanism may be faulty.

SPECIFICATIONS

Model: KT0003

Brand: Legami

Material: Plastic

Color: Green

Dimensions (D x W x H): Approximately 2.36 inches x 2.36 inches x 3.54 inches (6 cm x 6 cm x 9 cm)

Item Weight: Approximately 0.1 Kilograms

Maximum Timing Duration: 60 minutes

Power Source: Mechanical (no batteries required)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Legami customer service directly. Keep your proof of purchase for warranty claims.

