

KRUPS 10942226574

KRUPS Ultimate Silent Vortex Coffee Grinder User Manual

Model: 10942226574

Brand: KRUPS

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your KRUPS Ultimate Silent Vortex Coffee Grinder. Please read all instructions carefully before using the appliance and retain this manual for future reference.



Image: The KRUPS Ultimate Silent Vortex Coffee Grinder in its assembled state, showcasing its sleek stainless steel and black design with a clear lid.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not place cord, plug, or grinder base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your KRUPS Ultimate Silent Vortex Coffee Grinder:

- **Grinder Base:** Contains the motor and control buttons.
- **Removable Grinding Bowl:** Stainless steel bowl with integrated blades for grinding.
- **Lid:** Transparent lid with safety interlock mechanism.
- **Storage Lid:** An additional lid for the grinding bowl, allowing for convenient storage of ground ingredients.

MESS FREE

Removable bowl to avoid coffee spills



Image: An exploded view of the grinder, illustrating the removable stainless steel grinding bowl and the clear lid, highlighting its mess-free design.

SETUP

- Unpacking:** Carefully remove all packaging materials and dispose of them responsibly.
- Initial Cleaning:** Before first use, wash the removable grinding bowl and its storage lid in warm, soapy water, or place them in the dishwasher. Wipe the grinder base with a damp cloth. Ensure all parts are completely dry before assembly.
- Assembly:** Place the clean, dry grinding bowl securely into the grinder base. Ensure it clicks into place.
- Placement:** Position the grinder on a stable, flat, and dry surface, away from heat sources and water.

OPERATING INSTRUCTIONS

The KRUPS Ultimate Silent Vortex Grinder is designed for versatility, handling coffee beans, herbs, spices, and more with ease.

1. Filling the Grinding Bowl

- Ensure the grinding bowl is clean and dry.
- Add your desired ingredients (e.g., whole coffee beans, dried herbs, spices) to the grinding bowl. Do not overfill; the maximum capacity for coffee beans is approximately 3 oz (enough for 12 cups).
- Place the clear lid onto the grinding bowl, ensuring it is properly aligned and locked into place. The grinder will not operate if the lid is not correctly secured.

SUITS EVERY COFFEE NEED

Consistent grinding to desired fineness with 2 speeds (high/low)



Image: A hand pressing the top button of the KRUPS grinder, demonstrating its simple operation for consistent grinding.

2. Selecting Speed and Grinding

The grinder features two speed settings: High and Low.

- **High Mode:** Ideal for harder ingredients such as coffee beans, nuts, and hard cheeses.
- **Low Mode:** Perfect for softer ingredients like herbs and spices.

To operate, select your desired speed using the switch on the front of the base, then press down on the lid to activate the

grinding process. Release pressure to stop.

ULTIMATE VERSATILITY

Coffee beans, herbs, spices, cheese, nuts



Image: The KRUPS grinder positioned on a kitchen counter, surrounded by various ingredients like coffee beans, fresh herbs, and dried chili peppers, illustrating its ultimate versatility for different grinding tasks.

3. Achieving Desired Fineness

The grinding time determines the fineness of your grind. Monitor the consistency through the transparent lid.

- **French Press:** Approximately 10 seconds.
- **Drip Coffee:** Approximately 15 seconds.
- **Pour Over:** Approximately 20 seconds.

For very fine grinds, you may need to pulse the grinder for slightly longer periods, allowing short breaks to prevent overheating.

FAST TO ACHIEVE THE DESIRED FINENESS



Image: A visual guide demonstrating the recommended grinding times for different coffee preparations: 10 seconds for French Press, 15 seconds for Drip coffee, and 20 seconds for Pour Over, with corresponding grind textures.

4. After Grinding

- Once the desired fineness is achieved, release pressure on the lid and unplug the grinder from the power outlet.
- Carefully remove the lid, then lift out the removable grinding bowl.
- Pour the ground ingredients into your coffee maker, storage container, or recipe.
- If storing, use the provided storage lid to seal the grinding bowl.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

- Unplug:** Always ensure the grinder is unplugged from the power outlet before cleaning.
- Removable Bowl and Lids:** The stainless steel grinding bowl and both lids are dishwasher safe. Alternatively, they

can be washed by hand with warm, soapy water. Rinse thoroughly and dry completely before reassembly or storage.

3. **Grinder Base:** Wipe the exterior of the grinder base with a soft, damp cloth. Do not immerse the base in water or any other liquid. Do not use abrasive cleaners or scouring pads.
4. **Blade Area:** Use a small brush (like a soft-bristled cleaning brush or an old toothbrush) to remove any residual grounds from around the blades and inside the grinding bowl before washing.
5. **Storage:** Store the grinder in a dry place when not in use.

EASY TO CLEAN

Dishwasher safe bowl and lid



Image: The removable grinding bowl and lid of the KRUPS grinder placed in a dishwasher rack, demonstrating their dishwasher-safe feature for easy cleaning.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|--|--|--|
| Grinder does not turn on. | Not plugged in; Lid not properly secured; Power outage. | Ensure the power cord is securely plugged into a working outlet. Check that the lid is correctly aligned and locked into place. Verify power supply. |
| Grinding is inconsistent or too coarse. | Insufficient grinding time; Overfilling the bowl; Ingredients too hard for selected speed. | Increase grinding time or use pulsing method. Do not overfill the grinding bowl. Ensure High mode is selected for hard ingredients. |
| Grinder makes unusual noise or vibrates excessively. | Foreign object in bowl; Bowl not seated correctly; Overloaded. | Unplug and check for any foreign objects. Ensure the grinding bowl is securely seated in the base. Reduce the amount of ingredients. |
| Difficulty cleaning the bowl. | Dried residue. | Clean immediately after use. For stubborn residue, soak the bowl in warm, soapy water before washing. |

SPECIFICATIONS

Brand: KRUPS

Model: 10942226574

Style: Silent Blade Grinder with removable bowl

Color: Stainless Steel

Product Dimensions: 5.35" L x 10.47" W x 10.67" H

Item Weight: 2.6 pounds

Voltage: 120 Volts

Recommended Uses: Grinding (Coffee, Herbs, Spices, Nuts, Cheese)

Capacity: Approximately 3 oz (for 12 cups of ground coffee)

Special Features: Silent Vortex Technology, 2 Speeds (High/Low), Removable Dishwasher-Safe Bowl

UPC: 010942226574

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official KRUPS website. KRUPS products typically come with a limited warranty covering manufacturing defects.

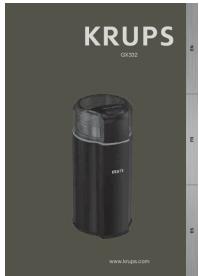
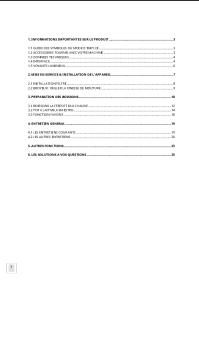
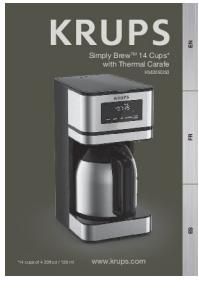
For customer support, product registration, or to purchase replacement parts, please visit the official KRUPS website or contact their customer service department. Contact details can usually be found on the manufacturer's website or in the product packaging.

You can also refer to the official user manual PDF for additional details [KRUPS User Manual \(PDF\)](#)

OFFICIAL PRODUCT VIDEOS

No official seller videos were found in the provided product data that meet the embedding criteria (m3u8 format and "Seller" creator type).

Related Documents

| | |
|---|---|
|  | <p>KRUPS GX332 Silent Vortex Electric Grinder - User Manual & Safety Guide</p> <p>Comprehensive user manual for the KRUPS GX332 Silent Vortex electric grinder. Learn about operation, cleaning, safety precautions, and international guarantee information.</p> |
|  | <p>KRUPS GVX2 Moulin à café : Guide d'utilisation et conseils</p> <p>Découvrez le moulin à café KRUPS GVX2. Ce guide d'utilisation complet fournit des instructions détaillées, des conseils de sécurité et d'entretien pour un café parfait.</p> |
|  | <p>KRUPS Sensation Espresso Machine User Manual</p> <p>Comprehensive user manual for the KRUPS Sensation automatic espresso machine, covering important information, setup, beverage preparation, maintenance, other functions, and troubleshooting. Learn how to use your KRUPS coffee maker for optimal results.</p> |
|  | <p>KRUPS Simply Brew™ 14 Cups* with Thermal Carafe User Manual</p> <p>User manual for the KRUPS Simply Brew™ 14 Cups* coffee maker (Model KM209D50). Learn about safety, brewing, maintenance, and settings for optimal coffee preparation.</p> |