

BaByliss E110E

BaByliss MEN Diamond Precision E110E 3-in-1 Trimmer User Manual

Model: E110E

INTRODUCTION

Thank you for choosing the BaByliss MEN Diamond Precision E110E 3-in-1 Trimmer. This device is designed for effortless and gentle removal of unwanted hair from the nose, ears, and for precise grooming of eyebrows. Its innovative Diamond cutting head ensures efficient trimming while protecting against nicks and cuts. The trimmer features removable and washable heads for easy cleaning and comes with two eyebrow guide combs (3mm and 5mm) for versatile styling.

Please read this manual carefully before using the product to ensure safe and optimal performance. Keep this manual for future reference.

1. SETUP AND ASSEMBLY

1.1 Package Contents

- BaByliss MEN Diamond Precision E110E Trimmer body
- Diamond cutting head for nose and ears
- Precision cutting head for eyebrows and details
- 2 eyebrow guide combs (3mm, 5mm)
- 1 AA battery
- Storage pouch

1.2 Battery Installation

1. Twist the bottom cap of the trimmer counter-clockwise to open the battery compartment.
2. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Replace the bottom cap and twist clockwise to secure it.



Image 1: The BaByliss MEN Diamond Precision E110E Trimmer showing the main body, nose/ear trimmer head, precision trimmer head, and two eyebrow guide combs.

1.3 Attaching/Detaching Cutting Heads

- To attach a cutting head: Align the head with the trimmer body and twist clockwise until it clicks into place.
- To detach a cutting head: Twist the head counter-clockwise and pull it off.

2. OPERATING INSTRUCTIONS

2.1 General Operation

1. Ensure the battery is correctly installed.
2. Select the appropriate cutting head for your desired grooming task.
3. Turn on the trimmer by twisting the body or pressing the power button (if applicable, based on design).
4. Gently guide the trimmer over the area to be trimmed.
5. Turn off the trimmer after use.

2.2 Trimming Nose and Ear Hair

- Attach the Diamond cutting head (the conical head).
- Gently insert the trimmer tip into the nostril or ear canal. Do not insert too deeply.
- Move the trimmer in a circular motion to trim unwanted hair.
- Avoid pressing the trimmer against the skin to prevent irritation.





Image 2: A close-up view of the Diamond cutting head, designed for safe and effective trimming of nose and ear hair.

2.3 Trimming Eyebrows and Details

- Attach the precision cutting head (the flat blade head).
- For shaping and styling eyebrows, select either the 3mm or 5mm guide comb and slide it onto the precision head until it locks.
- Comb your eyebrows in the direction of hair growth.
- Gently move the trimmer against the direction of hair growth to trim to the desired length.
- For detailed work or shaping without a comb, use the precision head directly, being careful to avoid direct skin contact.





Image 3: A close-up view of the precision cutting head, shown with an eyebrow guide comb attached, used for shaping and detailing.



Image 4: A hand demonstrating the ergonomic grip of the BaByliss trimmer during use.

2.4 Safety Warnings

- Use the trimmer with caution.
- Avoid contact with eyes and sensitive skin areas.
- Keep the trimmer away from water sources. This device is not waterproof.
- Do not use the trimmer on babies or children.
- Do not disassemble the trimmer beyond removing the cutting heads and battery cap.
- If the trimmer makes unusual noises or becomes hot, discontinue use immediately.

3. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. Turn off the trimmer and remove the cutting head after each use.
2. The cutting heads are washable. Rinse them under running water to remove hair clippings.
3. Allow the cutting heads to air dry completely before reattaching them to the trimmer body or storing.
4. Do not rinse the main trimmer body under water. Use a dry cloth to wipe it clean.
5. For stubborn hair, use a small brush (not included) to gently clear the blades.
6. Store the trimmer and its accessories in the provided storage pouch in a dry place.



Image 5: The BaByliss trimmer with its removable cutting heads detached, illustrating their washability for easy cleaning.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is dead or incorrectly installed.	Check battery orientation. Replace with a new AA battery.
Trimmer pulls hair or cuts poorly.	Blades are clogged with hair or dull.	Clean the cutting head thoroughly. Ensure heads are properly attached. If problem persists, blades may be worn.
Excessive vibration or noise.	Cutting head not properly attached or internal issue.	Reattach the cutting head securely. If the issue continues, contact customer support.

5. SPECIFICATIONS

Model Number: E110E

Power Source: 1 x AA Battery (included)

Recommended Use: Nose, Ear, Eyebrows

Blade Material: Diamond

Body Material: Nylon (as per specification, though product images imply metal design)

Product Dimensions (L x W x H): 4.5 x 20.5 x 10.5 cm (1.77 x 8.07 x 4.13 inches)

Item Weight: 150 grams (0.33 lbs)

Special Features: Washable attachments, 3mm and 5mm eyebrow combs

Target Audience: Men

6. WARRANTY INFORMATION

This BaByliss MEN Diamond Precision E110E Trimmer comes with a **3-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official BaByliss website.

7. CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your BaByliss MEN Diamond Precision E110E Trimmer, please contact BaByliss customer support. You can usually find contact information on the official BaByliss website or on the product packaging.

When contacting support, please have your product model number (E110E) and proof of purchase readily available.