

## SoBuy KMB24-Wx2

# SoBuy KMB24-Wx2 Children's Armchair Set Instruction Manual

MODEL: KMB24-Wx2

## 1. Introduction

Thank you for choosing the SoBuy KMB24-Wx2 Children's Armchair Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new children's chairs. Please read these instructions carefully before assembly and retain them for future reference.



Image 1.1: The SoBuy KMB24-Wx2 Children's Armchair Set. This image displays the complete set of two SoBuy KMB24-Wx2 children's armchairs, showcasing their design with white seats and backrests, and natural birch wood frames.

## 2. Safety Information

To ensure the safety of your child and the longevity of the product, please observe the following:

- **Adult Supervision:** Always supervise children when they are using the chairs.
- **Weight Limit:** Do not exceed the maximum load capacity of 75 kg (165 lbs) per chair.
- **Proper Assembly:** Ensure all parts are correctly assembled and fasteners are tightened securely before use. Periodically check all connections.
- **Stable Surface:** Place the chairs on a flat, stable surface to prevent tipping.
- **Avoid Climbing:** Instruct children not to climb on the chairs or armrests.
- **Keep Away from Heat:** Do not place the chairs near heat sources or open flames.
- **No Modifications:** Do not modify the product in any way, as this may compromise its safety and void the warranty.

### 3. Package Contents

---

Before beginning assembly, please verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 2 x Chair Backrests (White)
- 2 x Chair Seats (White)
- 4 x Chair Legs (Birch Wood)
- 4 x Armrests (Birch Wood)
- 2 x Base Frames (Birch Wood)
- Hardware Pack (Screws, bolts, Allen key)
- Assembly Instructions (Illustrated)

### 4. Assembly Instructions

---

Assembly typically requires one adult. Follow the numbered steps and refer to the illustrations provided in your package. An Allen key is usually included.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches. Identify all components against the package contents list.
2. **Attach Base Frame:** Secure the two birch wood base frames to the underside of each white seat using the provided screws. Ensure they are aligned correctly.
3. **Install Legs:** Attach the four birch wood legs to the base frame of each chair. The legs have pre-drilled holes for seat height adjustment. For initial assembly, choose the desired height level and align the holes. Secure with bolts and nuts. Do not fully tighten yet.
4. **Attach Backrest:** Connect the white backrest to the rear of the seat and the upper part of the rear legs. Use the appropriate screws and ensure the curved part faces upwards for ergonomic support.
5. **Attach Armrests:** Secure the birch wood armrests to the sides of the backrest and the front legs. Ensure they are firmly attached.
6. **Final Tightening:** Once all components are in place, carefully tighten all screws and bolts using the Allen key. Do not overtighten.
7. **Stability Check:** Gently shake the assembled chair to ensure it is stable and all connections are secure.



Image 4.1: Armchair with Dimensions. A single SoBuy KMB24-Wx2 children's armchair is shown with its overall dimensions indicated: 40cm in width, 32cm in depth, and 53cm in height. This helps in understanding the chair's footprint and assembly orientation.



Image 4.2: Side View with Adjustment Holes. This image provides a side view of the armchair, highlighting the pre-drilled holes on the chair legs. These holes are crucial for adjusting the seat height during assembly and later use.

## 5. Operating Instructions: Adjustable Seat Height

---

The SoBuy KMB24-Wx2 armchairs feature an adjustable seat height to accommodate your child as they grow. The seat height can be set at 23cm, 27cm, 31cm, or 35cm from the floor.

1. **Empty the Chair:** Ensure no one is sitting on the chair before attempting to adjust the height.
2. **Loosen Fasteners:** Using the provided Allen key, carefully loosen the bolts that secure the seat to the legs. You do not need to remove them completely, just enough to allow movement.
3. **Adjust Height:** Gently lift or lower the seat to align with the desired set of holes on the chair legs. Ensure all four legs are aligned to the same height setting.
4. **Secure Fasteners:** Once the seat is at the desired height, re-tighten all bolts firmly.
5. **Verify Stability:** Check that the chair is stable and all connections are secure after adjustment.



Image 5.1: Seat and Armrest Detail. A detailed view of the armchair's seat and one armrest, illustrating the smooth, rounded edges and the connection points for adjustment.

## 6. Maintenance and Care

---

Regular maintenance will help preserve the appearance and functionality of your SoBuy children's armchairs.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn marks, use a mild soap solution, then wipe dry immediately. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause the wood to fade or dry out.
- **Humidity Control:** Maintain a stable room temperature and humidity to prevent wood warping or cracking.

## 7. Troubleshooting

---

If you encounter any issues with your SoBuy KMB24-Wx2 armchairs, please refer to the table below for common problems and solutions.



Problem	Possible Cause	Solution
Chair is wobbly	Loose fasteners; uneven floor.	Check and tighten all screws and bolts. Ensure the chair is on a flat surface.
Difficulty adjusting seat height	Bolts not sufficiently loosened; misalignment of holes.	Ensure bolts are loose enough. Align all four legs to the same height setting simultaneously.
Scratches on surfaces	Rough handling; sharp objects.	Use furniture polish or touch-up paint for minor scratches. Prevent future damage by avoiding sharp objects.





 







## 8. Specifications

Feature	Detail
Brand	SoBuy
Model Number	KMB24-Wx2
Color	White
Material	Birch Wood
Product Dimensions (L x W x H)	40 x 32 x 53 cm (15.7 x 12.6 x 20.9 inches)
Adjustable Seat Height	23cm, 27cm, 31cm, 35cm (9.1, 10.6, 12.2, 13.8 inches)
Item Weight	6.69 kg (14.75 lbs) per chair
Maximum Load Capacity	75 kg (165 lbs)
Special Feature	Stable construction
Number of Units	2.0 Total

## 9. Warranty and Support

SoBuy products are designed for quality and durability. For information regarding product warranty, returns, or specific assembly assistance, please refer to the purchase platform or contact SoBuy customer service directly.

- **Assembly Assistance:** All SoBuy furniture includes numbered parts and illustrated instructions for straightforward assembly.
- **Returns:** If you are not satisfied with the product or if there is an issue, you may be eligible for a free return. Please consult the retailer's return policy.
- **Contact SoBuy:** For further inquiries or support, please visit the official SoBuy store or contact their customer service department.

  	<p><b>SoBuy</b></p> <p><a href="#">SoBuy OGS28 Rocking Chair Assembly Instructions and Safety Guide</a></p> <p>Comprehensive assembly instructions and safety information for the SoBuy OGS28 rocking chair. Learn how to assemble your chair safely and efficiently.</p>
 	<p><b>SoBuy</b></p> <p><a href="#">SoBuy FSR154 Storage Cabinet Assembly Instructions</a></p> <p>Step-by-step assembly instructions for the SoBuy FSR154 storage cabinet, including a list of parts, tools required, and detailed assembly steps.</p>
 	<p><b>SoBuy</b></p> <p><a href="#">SoBuy BZR211 Storage Cabinet Assembly Instructions</a></p> <p>Detailed assembly instructions for the SoBuy BZR211 storage cabinet. This guide provides step-by-step instructions, a parts list, and hardware details to help you build your new furniture.</p>
 	<p><b>SoBuy</b></p> <p><a href="#">SoBuy FBT115-L Nightstand with 3 Drawers - Assembly Instructions</a></p> <p>Comprehensive assembly instructions for the SoBuy FBT115-L nightstand, a 3-drawer bedside cabinet. Includes a detailed parts list, hardware inventory, and step-by-step guidance for building the furniture.</p>
 	<p><b>SoBuy</b></p> <p><a href="#">SoBuy FSR137-L Furniture Assembly Instructions</a></p> <p>Comprehensive assembly guide for the SoBuy FSR137-L cabinet. Features a detailed parts list, hardware inventory, required tools, and step-by-step instructions with textual descriptions of diagrams. Includes safety information for wall mounting.</p>
 	<p><b>SoBuy</b></p> <p><a href="#">SoBuy BZR34-II Tall Cabinet Assembly Instructions</a></p> <p>Detailed step-by-step assembly instructions for the SoBuy BZR34-II tall cabinet, including a parts list, tools required, and visual guides for furniture assembly.</p>