

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Easytry123](#) /
- › [Easytry Remote Control User Manual for ComfortStar Portable Air Conditioner](#)

Easytry123 RG36F/BGEF

Easytry Remote Control User Manual

For ComfortStar Portable Air Conditioners

INTRODUCTION

This manual provides instructions for the Easytry replacement remote control designed for various ComfortStar Portable Air Conditioner models. Please note that as a replacement unit, some advanced functions present on your original remote may not be fully supported or may operate differently. Refer to your air conditioner's original manual for specific unit features.

PRODUCT OVERVIEW



Figure 1: Front view of the Easytry remote control, showing the display screen and various control buttons.

The Easytry remote control features a clear LCD display and an array of buttons for controlling your ComfortStar portable air conditioner. Key buttons include ON/OFF, Temperature adjustment, Mode selection, Fan Speed, Timer, and various special functions.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.



Figure 2: Back view of the remote control with the battery compartment open, revealing the battery slots.

3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 3: Back view of the remote control with the battery compartment closed.

Note: Batteries are not included with the remote control. Always use new batteries of the specified type.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your ComfortStar portable air conditioner unit.

- **ON/OFF:** Press to turn the air conditioner unit on or off.
- **TEMP (+/-):** Press to increase or decrease the desired temperature setting.
- **MODE:** Cycles through operating modes such as Cool, Dry, Fan, Heat (if applicable to your AC unit).
- **SWING (Vertical):** Activates or deactivates the vertical louver swing function.
- **SWING (Horizontal):** Activates or deactivates the horizontal louver swing function.
- **FAN SPEED:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **TIMER ON/OFF:** Sets a timer for the unit to turn on or off automatically. Refer to your AC unit's manual for detailed timer programming.
- **SLEEP FRESH:** Activates or deactivates the sleep mode, which typically adjusts temperature and fan speed for comfortable sleep.
- **INTELLIGENT EYE:** (If supported by your AC unit) Activates a sensor that detects human presence to optimize operation.
- **TURBO SELF CLEAN:** Activates a rapid cooling/heating function or a self-cleaning cycle (functionality depends on AC unit).
- **LED FOLLOW ME:** (If supported by your AC unit) Activates a function where the remote's sensor measures

temperature and sends it to the AC unit for more precise control.

- **LOCK:** Locks the remote control buttons to prevent accidental changes. Press again to unlock.
- **RESET:** Resets the remote control to its default settings. Use a pointed object (like a paperclip) to press this button.

Important: Not all buttons or functions on this replacement remote may be compatible with every ComfortStar portable air conditioner model. Test each function to confirm compatibility.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's display becomes dim or the remote no longer controls the air conditioner effectively. Always replace both batteries at the same time with new ones of the same type (AAA).

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if batteries are inserted correctly with correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the air conditioner's receiver.
 - Confirm the remote is pointed directly at the air conditioner's receiver.
 - Try resetting the remote by pressing the RESET button with a pointed object.
- **Certain functions not working:**
 - This replacement remote may not support all functions of your original air conditioner remote. Refer to your air conditioner's original manual for specific features.
 - Ensure your air conditioner model supports the specific function you are trying to use (e.g., "Intelligent Eye" or "Self Clean").
- **Temperature display in Celsius instead of Fahrenheit (or vice-versa):**
 - Some remotes have a hidden button or combination of buttons to switch between Celsius and Fahrenheit. This remote may not have this feature, or it might be specific to the original AC unit's remote. If the remote does not have a dedicated C/F button, it may not be possible to change the unit of temperature display on this replacement remote.

SPECIFICATIONS

Feature	Detail
Model Type	RG36F/BGEF (as indicated on the remote)
Rated Voltage	3V DC
Battery Type	2 x AAA batteries (not included)
Connectivity	Infrared (IR)

Compatible Devices	ComfortStar Portable Air Conditioners (specific models as listed in product title)
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

This product is a replacement remote control. As per the product description, it comes without a manual and specific instructions. For support regarding your ComfortStar Portable Air Conditioner unit, please refer to the original manufacturer's documentation or contact their customer service.

For issues directly related to the functionality of this Easytry replacement remote, please refer to the seller's return policy on the platform where it was purchased. Please note that replacement items may not work with all functions as original.

© 2023 Easytry123. All rights reserved. This manual is for informational purposes only.

Related Documents - RG36F/BGEF

 <p><small>Important note: Read this manual before installing or using your air conditioner. Please read this manual carefully before operating your new air conditioning unit. Make sure to save this manual for future reference.</small></p>	<p>ComfortStar CARAT II Remote Control Owner's Manual - Operation Guide</p> <p>Comprehensive owner's manual for the ComfortStar CARAT II remote control. Learn how to operate your air conditioner, understand basic and advanced functions, and troubleshoot common issues.</p>
	<p>Midea Xtreme Save Series Room Air Conditioner Owner's Manual</p> <p>This manual provides comprehensive instructions for the Midea Xtreme Save series room air conditioner, covering safety precautions, unit specifications, operation, maintenance, troubleshooting, and disposal guidelines. It details features like Auto-Restart, Anti-mildew, Wireless Control, Active Clean, Breeze Away, Refrigerant Leakage Detection, and Sleep Operation, along with remote control functions and indicators.</p>
	<p>Midea Split-Type Room Air Conditioner: Owner's Manual & Installation Guide</p> <p>Comprehensive guide for Midea split-type room air conditioners, covering installation, operation, safety precautions, maintenance, troubleshooting, and unit specifications. Includes model details for various series.</p>
	<p>Kaden KS Series Wall Mounted Air Conditioner Remote Controller Manual</p> <p>Comprehensive manual for Kaden KS Series wall mounted air conditioner remote controllers, covering models KS09, KS12, KS18, KS24, KS28. Learn about specifications, button functions, handling, LCD indicators, and basic/advanced operations like AUTO, COOL, DRY, FAN, HEAT, TIMER, ECO, SELF CLEAN, SLEEP, TURBO, LOCK, FOLLOW ME, SWING, and FAVOURITE functions.</p>



[Midea Remote Controller Owner's Manual - Operation Guide](#)

Learn how to operate your Midea air conditioner with this comprehensive owner's manual for the Midea remote controller. Covers all functions, modes, and settings for optimal comfort and efficient use.



[Carrier Remote Controller Owner's Manual](#)

Comprehensive owner's manual for the Carrier Remote Controller, detailing specifications, functions, and operation for various models.