

Manuals.plus /

› Easytry123 /

› Remote Control for Lennox RG36A/BGEF RG36A2/BGEF RG36A1/BGCEF RG36A2/BGEF RG36B1/BGE RG36B1/BGCE RG36B/BGCE RG36A1/BGEF Portable Air Conditioner User Manual

## Easytry123 RG36A/BGEF, RG36A2/BGEF, RG36A1/BGCEF, RG36A2/BGEF, RG36B1/BGE, RG36B1/BGCE, RG36B/BGCE, RG36A1/BGEF

# Remote Control User Manual

**Brand:** Easytry123

**Model Compatibility:** RG36A/BGEF, RG36A2/BGEF, RG36A1/BGCEF, RG36A2/BGEF, RG36B1/BGE, RG36B1/BGCE, RG36B/BGCE, RG36A1/BGEF

## INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Easytry123 replacement remote control for Lennox portable air conditioners. This remote is designed to be compatible with various Lennox models, including RG36A/BGEF, RG36A2/BGEF, RG36A1/BGCEF, RG36A2/BGEF, RG36B1/BGE, RG36B1/BGCE, RG36B/BGCE, and RG36A1/BGEF.

Please note that while this is a replacement item, it may not replicate all functions of the original remote control. Ensure that the model number of your air conditioner unit matches those listed for compatibility.

## SETUP

### 1. Battery Installation

The remote control requires 2 AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



*Image: Back view of the remote control with the battery cover removed, illustrating the battery compartment where two AAA batteries are to be inserted.*



*Image: An angled view of the remote control's back, with the battery cover detached, clearly showing the two slots for AAA batteries.*

## **2. Pairing (Not Required)**

This remote control operates via infrared (IR) technology and typically does not require pairing with your air conditioner unit. Once batteries are installed, it should be ready for use with compatible models.

## **OPERATING INSTRUCTIONS**

Point the remote control directly at the infrared receiver on your Lennox portable air conditioner unit. Ensure there are no obstructions between the remote and the unit.



*Image: Front view of the remote control, displaying its LCD screen and various control buttons for air conditioner functions.*

### **Button Functions:**

Button	Function
<b>ON/OFF</b>	Powers the air conditioner unit on or off.
<b>TEMP +/-</b>	Adjusts the desired temperature setting.
<b>MODE</b>	Cycles through operating modes (e.g., Cool, Fan, Dry, Heat - depending on AC unit features).
<b>FAN SPEED</b>	Adjusts the fan speed (e.g., Low, Medium, High, Auto).
<b>SWING</b>	Activates or deactivates the automatic louver swing function.
<b>TIMER ON/OFF</b>	Sets or cancels the timer for automatic power on/off.
<b>SILENCE/TP</b>	Activates or deactivates a quiet operation mode (may also be a 'Turbo' or 'Powerful' function depending on model).
<b>INTELLIGENT EYE</b>	Activates or deactivates the intelligent eye sensor (if available on AC unit).
<b>SLEEP/FRESH</b>	Activates sleep mode or air purification/fresh air function.
<b>LED/FOLLOW ME</b>	Controls the display LED or activates the 'Follow Me' function (temperature sensor in remote).
<b>TURBO/CLEAN</b>	Activates turbo cooling/heating or a self-clean function.
<b>LOCK/RESET</b>	Locks the remote control buttons or resets settings.

*Note: Not all functions may be supported by every compatible air conditioner model. Refer to your air conditioner's original manual for specific feature availability.*

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or the display becomes dim. Always replace both batteries at the same time.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, high temperatures, and moisture.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	<ul style="list-style-type: none"> <li>Batteries are dead or inserted incorrectly. Replace batteries and check polarity.</li> <li>Obstruction between remote and AC unit. Ensure clear line of sight.</li> <li>Remote is out of range. Move closer to the AC unit.</li> <li>AC unit is not powered on or in standby mode.</li> </ul>
Some functions do not work.	<ul style="list-style-type: none"> <li>The specific function may not be supported by your air conditioner model.</li> <li>This is a replacement remote; some advanced functions of the original may not be replicated.</li> </ul>
Display is dim or blank.	Batteries are low. Replace with new AAA batteries.

## SPECIFICATIONS

- **Model Compatibility:** Lennox RG36A/BGEF, RG36A2/BGEF, RG36A1/BGCEF, RG36A2/BGEF, RG36B1/BGE, RG36B1/BGCE, RG36B/BGCE, RG36A1/BGEF
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Manufacturer:** Easytry123
- **Country of Origin:** China
- **Date First Available:** July 1, 2020

## WARRANTY AND SUPPORT

This product is offered as a replacement remote control. For specific warranty information, please refer to the seller's return policy or contact the seller directly. As per the product listing, the return policy allows for a refund/replacement within 30 days.

For further assistance or inquiries, please contact the seller, Easytry123, through the platform where the purchase was made.

**Seller:** Easytry123