

[Manuals.plus](#) /

> [GiveBest](#) /

> GiveBest Portable Ceramic Space Heater User Manual

GiveBest PTC-903

GiveBest Portable Ceramic Space Heater User Manual

Model: PTC-903

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this heater. Failure to follow these instructions may result in fire, electric shock, or injury to persons.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has an automatic **Overheat Protection** system. If the heater overheats, the system will shut the heater off.
- This heater is equipped with a **Tip-Over Protection** switch. If the heater is accidentally knocked over, it will automatically shut off.

PRODUCT OVERVIEW

The GiveBest Portable Ceramic Space Heater is designed to provide efficient and quiet heating for small indoor spaces. It features multiple heat settings, an adjustable thermostat, and built-in safety mechanisms for peace of mind.



Figure 1: Front view of the GiveBest Portable Ceramic Space Heater.

Key Features:

- **Quick Heating with 3 Modes:** Offers High Heat (1500W), Low Heat (750W), and Fan Mode for year-round use.
- **Adjustable Thermostat:** Allows you to set your desired temperature between 0°F and 158°F for optimal comfort.
- **Overheat Protection:** Automatically shuts off the heater if it reaches an unsafe temperature.
- **Tip-Over Protection:** Safety switch that turns off the heater if it is accidentally knocked over.
- **Quiet Operation:** Operates at a noise level lower than 50dB, suitable for bedrooms, offices, and study areas.
- **Convenient Carry Handle:** Integrated handle for easy portability.



Figure 2: Rear view showing the integrated carry handle for easy transport.

SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain the packaging for off-season storage.



CERAMIC HEATER

CALENTADOR DE CERÁMICA

TWO HEAT SETTINGS
PLUS FAN ONLY

ADJUSTABLE
THERMOSTAT

TIP OVER & AUTO-OFF
OVERHEAT
PROTECTION



428272



750/1,500 WATTS
120 VOLT/5,120 BTUS

PERFECT FOR
SMALL SPACES

Figure 3: Product packaging for the GiveBest Portable Ceramic Space Heater.

- Placement:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 m) of clear space around the heater from any combustible materials. Do not place on soft surfaces like carpets or rugs that may block the air intake.
- Power Connection:** Ensure the heater is in the "OFF" position before plugging it into a standard 120V AC electrical outlet. Do not use extension cords or power strips.

OPERATING INSTRUCTIONS

The heater features two control knobs on the top for easy operation.



Figure 4: Top view showing the control knobs.

1. Power On/Mode Selection:

- Turn the **Mode Control Knob** (right knob) to select your desired setting:
 - **0 (OFF)**: Turns the heater off.
 - **Fan Only (☆)**: Operates as a fan, blowing cool air.
 - **Low Heat (I)**: Provides 750W of heating power.
 - **High Heat (II)**: Provides 1500W of heating power.

2. Adjusting Thermostat:

- Turn the **Thermostat Control Knob** (left knob) clockwise to increase the desired temperature or counter-clockwise to decrease it. The heater will cycle on and off to maintain the set temperature.
- The adjustable temperature range is 0°F to 158°F.

3. Safety Features in Operation:

- If the heater tips over, the **Tip-Over Protection** will automatically shut it off. Place it upright on a stable surface to resume operation.
- If the heater overheats, the **Overheat Protection** will shut it off. Unplug the heater, allow it to cool down for 10-15 minutes, and then plug it back in. If it still doesn't work, contact customer support.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your heater.

- **Cleaning:** Always unplug the heater from the wall outlet before cleaning. Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use cleaning sprays, abrasive cleaners, or polishes as they may damage the heater.
- **Storage:** When not in use, store the heater in a cool, dry location. It is recommended to store it in its original packaging to protect it from dust and damage.
- **Air Intake/Exhaust:** Periodically check the air intake and exhaust openings for dust or lint buildup. Use a vacuum cleaner with a brush attachment to gently remove any debris. Do not attempt to open the heater for internal cleaning.

TROUBLESHOOTING

If your heater is not operating correctly, please check the following common issues before contacting customer support.

| Problem | Possible Cause | Solution |
|--|--|---|
| Heater does not turn on. | Not plugged in securely. Power outlet is not working. Tip-Over Protection activated. Overheat Protection activated. | Ensure the power cord is firmly plugged into a working 120V AC outlet. Check the household circuit breaker/fuse. Place the heater on a firm, level surface. Unplug the heater, wait 10-15 minutes for it to cool down, then plug it back in. |
| Heater produces no heat in heat modes. | Thermostat set too low. Heater is in Fan Only mode. | Increase the thermostat setting. Ensure the Mode Control Knob is set to "Low Heat (I)" or "High Heat (II)". |
| Heater suddenly stops operating. | Overheat Protection activated. Tip-Over Protection activated. | Unplug, cool down, then restart. Ensure heater is upright on a stable surface. |

SPECIFICATIONS

| Feature | Detail |
|--------------------|--|
| Brand | GiveBest |
| Model Number | PTC-903 |
| Power Supply | 120 Volts (AC), 60Hz |
| Wattage | 1500 watts (High Heat), 750 watts (Low Heat) |
| Product Dimensions | 7.2"D x 6.3"W x 9.2"H |
| Item Weight | 2.95 pounds |
| Heating Coverage | Up to 200 sq.ft |
| Sound Level | Lower than 50 dB |
| Material | ABS Plastic |
| Special Features | Overheat Protection, Thermostat Control, Tip-Over Protection |
| Recommended Uses | Desk, Home, Office, Bedroom, Study Room |
| UPC | 630128804404 |



Figure 5: Dimensions of the GiveBest Portable Ceramic Space Heater.

WARRANTY AND SUPPORT

GiveBest provides customer service and warranty support for this product.

- **Warranty:** All products purchased have a 1-year warranty as standard. The warranty period begins on the day the product is originally shipped. The warranty covers all items and conditions identified in the original manufacturer's warranty.
- **Exclusions:** The warranty specifically does not cover loss and theft, water damage, or customer abuse.
- **Customer Service:** For any questions, issues, or warranty claims, please contact GiveBest customer service.
 - Telephone and Email customer service are available on weekdays.
 - Refer to the thank you note or original product manual for specific contact details (email address, website, telephone number).

