

WISCENT WST977

WISCENT WST-977B DVD/CD/MP3 Player User Manual

Model: WST977

1. INTRODUCTION

Thank you for purchasing the WISCENT WST-977B DVD/CD/MP3 Player. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure proper functionality and to maximize your viewing and listening experience.

2. SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not open the cabinet. Refer servicing to qualified personnel only.
- Ensure proper ventilation around the unit. Do not block ventilation openings.
- Use only the power adapter supplied with the unit.
- Keep the unit away from direct sunlight, heat sources, and strong magnetic fields.
- Handle discs carefully to avoid scratches or damage.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- WISCENT WST-977B DVD Player Unit
- Remote Control (requires 2 AAA batteries, not included)
- HDMI Cable
- AV Cable (RCA)
- User Manual (this document)



Image: The WISCENT WST-977B DVD Player, its remote control, an HDMI cable, and an AV cable, representing the typical package contents.

4. PRODUCT OVERVIEW

The WISCENT WST-977B is a compact, multi-format DVD player designed for versatile home entertainment. It features a digital display and supports various media types.

Key Features:

- **Disc Compatibility:** Supports DIVX, MPEG4, DVD, DVD-R, DVD+R, DVD+RW, CD, VCD, SVCD, MP3, CD-R, CD-RW, JPEG, KADAK.
- **USB Playback:** Integrated USB 2.0 port for playing digital media files (up to 32GB).
- **Video Outputs:** HDMI and AV (RCA) outputs for connecting to various display devices.
- **Audio Output:** 2.0 channel analog audio output.
- **Microphone Input:** Includes a MIC input for karaoke functionality (microphone not included).
- **Region Free:** Compatible with DVDs from all regions.
- **Resume Playback:** Remembers the last playback position of a disc.
- **TV System:** Supports PAL, NTSC, and Auto detection.

Note: This is not a Blu-ray player and does not support Blu-ray discs. It also does not support MP4, MVB, WMV, WAV, PS, FLV, MPG, BMP, PNG, TIF, or GIF file formats for USB or disc playback.

Front Panel Overview:



Image: A detailed front view of the DVD player, highlighting the disc tray, USB port, playback controls, digital display, and microphone input.

The front panel includes the disc tray, a USB port, basic playback control buttons (Play/Pause, Stop, Next/Previous), a power button, and a microphone input jack.

5. SETUP

5.1 Connecting to a Display Device

The WST-977B DVD player offers two main ways to connect to your television or projector: HDMI or AV (RCA) cables.

HDMI Connection (Recommended for High Quality):

1. Connect one end of the HDMI cable to the HDMI OUT port on the DVD player.
2. Connect the other end of the HDMI cable to an HDMI IN port on your TV or projector.
3. Select the corresponding HDMI input on your TV/projector using its remote control.

AV (RCA) Connection:

1. Connect the yellow plug of the AV cable to the VIDEO OUT (yellow) port on the DVD player.
2. Connect the white plug to the AUDIO L OUT (white) port on the DVD player.
3. Connect the red plug to the AUDIO R OUT (red) port on the DVD player.
4. Connect the other ends of the AV cable to the corresponding VIDEO IN and AUDIO IN ports on your TV or projector.
5. Select the corresponding AV input on your TV/projector.

MULTIPLE FORMATS SUPPORTED

CD, DVD, DVD-R/+R, DVD-/+RW, CD-R/-RW, VCD, SVCD

All Region Free



This is **not** Blu-ray DVD player

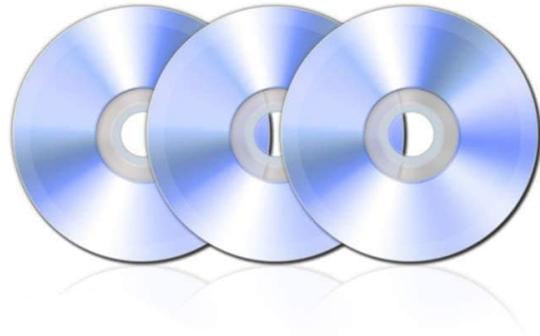


Image: Connection diagrams illustrating how to connect the DVD player to a television using either HDMI or AV cables, and to a projector using an HDMI cable.

5.2 Power Connection

After connecting the player to your display device, plug the power cord into the DVD player's power input and then into a standard electrical outlet.

6. OPERATING INSTRUCTIONS

6.1 Basic Disc Playback

1. Press the Power button to turn on the DVD player.
2. Press the OPEN/CLOSE button on the front panel or remote control to open the disc tray.
3. Place a compatible DVD or CD onto the disc tray with the label side facing up.
4. Press the OPEN/CLOSE button again to close the tray. The player will automatically begin reading the disc.
5. Use the PLAY, PAUSE, STOP, FAST FORWARD, REWIND, and SKIP buttons on the remote control to manage playback.

HIGH QUALITY DISC DRIVE



Image: A close-up view of a hand inserting a disc into the open disc tray of the DVD player.

6.2 USB Media Playback

1. Insert a USB flash drive (up to 32GB) into the USB port on the front panel of the DVD player.
2. The player should automatically detect the USB drive and display its contents. If not, press the USB button on the remote control or select USB input from the menu.
3. Navigate through your files using the arrow keys and OK button on the remote control.
4. Select the desired audio, video, or image file to begin playback.

Supported USB Formats: MP3, JPG, AVI, DIVX, MPG, MPEG4, VOB, FLV, JPEG.

6.3 Remote Control Functions

The included remote control provides full functionality for the DVD player. Insert two AAA batteries (not included) into the remote control before use.



DVD



MIC




HDMI



USB



Fast Reading

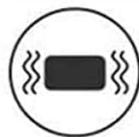

Shockproof & Durable



Noise Cancellation



Error Correction

Image: The remote control for the WISCENT DVD player, displaying its array of buttons for controlling power, playback, menu navigation, volume, and other functions.

6.4 Resume Playback Function

The player features a 'Last Memory' or 'Resume Play' function. If the player is turned off or playback is stopped, it will remember the point where you left off on a disc. When you power on the player and insert the same disc, it will resume playback from that exact point.

LAST MEMORY/RESUME PLAY FUNCTION

Memorizes the Resume Point of Previously Played Disc
You Can Pick Up Where You Left Off Any Time



Image: A visual representation of the resume play feature, demonstrating how the player remembers the last playback position even after being powered off and then restarted.

6.5 Region Free Playback

The WISCENT WST-977B DVD player is designed to be region-free, meaning it can play DVDs from any geographical region without requiring manual region code changes.



Remote Control



AV Cable



HDMI Cable



User Manual



Image: An icon depicting a globe with the text 'All Region Free', signifying the player's ability to play DVDs from any region worldwide.

6.6 Karaoke Function

Connect a microphone (not included) to the MIC input on the front panel to use the player for karaoke. Adjust microphone volume as needed through the player's menu or remote control.



Image: A microphone with a cable plugged into the microphone input jack on the DVD player, demonstrating the karaoke capability.

7. MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the player with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Cleaning Discs:** Use a clean, soft, lint-free cloth to wipe discs from the center outwards. Avoid touching the

playback surface.

- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter issues with your DVD player, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power	Ensure the power cord is securely connected to the player and a working electrical outlet.
No picture or sound	Check HDMI or AV cable connections. Ensure the correct input source is selected on your TV/projector.
Disc not playing / "No Disc" error	Ensure the disc is inserted correctly (label side up). Clean the disc for smudges or scratches. Verify the disc format is supported (not Blu-ray).
USB drive not recognized / files not playing	Ensure the USB drive is formatted to FAT32 and is 32GB or less. Verify that the file formats are supported (e.g., MP4, WMV, WAV, GIF are NOT supported).
Remote control not working	Check and replace batteries (2x AAA). Ensure there are no obstructions between the remote and the player's sensor.

9. SPECIFICATIONS

Feature	Specification
Brand	WISCENT
Model Name	WST977
Color	Black
Dimensions (L x W x H)	22.5 x 19 x 4.2 cm (8.9 x 7.5 x 1.7 inches)
Item Weight	1 Kilogram
Connections	HDMI, RCA (AV), USB 2.0, MIC Input
Total USB Ports	1
Compatible Devices	Television
Supported Media Types	CD, DVD, SVCD, VCD
Supported Audio Formats	MP3, WMA, OGG, PCM
Supported USB Video Formats	AVI, DIVX, MPG, MPEG4, VOB, FLV, JPEG
Unsupported Formats	Blu-ray, MP4, MVB, WMV, WAV, PS, FLV, MPG, BMP, PNG, TIF, GIF

Feature	Specification
Surround Sound Channel Configuration	2.0
TV System	PAL / NTSC / Auto

10. WARRANTY AND SUPPORT


Your WISCENT WST-977B DVD Player comes with the following:


- **3-Year / 36-Month Warranty:** Covers manufacturing defects and malfunctions under normal use.
- **Lifetime Technical Support:** Access to technical assistance for the lifespan of the product.
- **24/7 Customer Service:** Contact WISCENT via Amazon Buyer-Seller Messaging for any inquiries or support needs.

For warranty claims or technical support, please contact WISCENT through your Amazon purchase history or the provided contact information.

© 2023 WISCENT. All rights reserved.

Related Documents - WST977

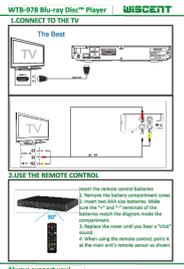	<p>Wiscent WST977 Full HD DVD-Player User Manual</p> <p>Comprehensive user manual for the Wiscent WST977 Full HD DVD-Player, covering safety instructions, connections, operation, features, technical specifications, system configuration, CD ripping, MP3/JPEG playback, and troubleshooting.</p>
	<p>Wiscent WTB792 Boombox Quick Start Guide</p> <p>A concise guide to setting up and operating the Wiscent WTB792 Boombox, covering power, battery installation, unit overview, source modes, disc playback, volume adjustment, radio, Bluetooth, USB, and AUX input.</p>
	<p>WISCENT WTB-978 Blu-ray Disc Player Quick Start Guide</p> <p>Learn how to connect and operate your WISCENT WTB-978 Blu-ray Disc Player with this comprehensive quick start guide. Includes remote control functions and setup instructions.</p>

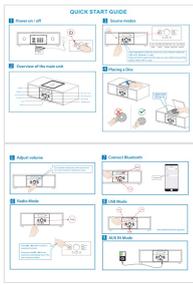

[WISCENT WTB-797 Nostalgic Bluetooth Stereo System Quick Start Guide](#)

A quick start guide for the WISCENT WTB-797 Nostalgic Bluetooth Stereo System, covering power on/off, unit overview, source modes, placing a disc, adjusting volume, radio mode, Bluetooth connection, USB mode, and AUX IN mode.

Documents - WISCENT – WST977



[Wiscent WST977 Full HD DVD-Player User Manual](#)

Comprehensive user manual for the Wiscent WST977 Full HD DVD-Player, covering safety instructions, connections, operation, features, technical specifications, system configuration, CD ripping, MP3/JPEG playback, and troubleshooting.

lang:de score:25 filesize: 1.16 M page_count: 9 document date: 2021-03-21