

[Manuals.plus](#) /

› [Pretty Love](#) /

› Pretty Love Hector Vibrator with ElectroShock - User Manual

## Pretty Love 6959532325003

# Pretty Love Hector Vibrator with ElectroShock

Model: 6959532325003

## INTRODUCTION

This manual provides essential instructions for the safe and effective use, maintenance, and care of your Pretty Love Hector Vibrator with ElectroShock. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Pretty Love Hector Vibrator shown alongside its product packaging, highlighting its features and design.

## SAFETY INFORMATION

- **Consult a Physician:** If you have any medical conditions, are pregnant, or have a pacemaker, consult a physician

before using this product, especially due to the electroshock function.

- **External Use Only:** This product is designed for external use.
- **Discontinue Use If Irritation Occurs:** If you experience any discomfort, pain, or skin irritation, stop using the device immediately.
- **Keep Out of Reach of Children:** Store the device in a safe place away from children.
- **Charging Safety:** Use only the provided USB charging cable. Do not use the device while it is charging.
- **Waterproof Rating:** The device is waterproof, but avoid submerging it for extended periods or using it in extreme water pressure. Ensure the charging port is completely dry before charging.
- **Material Compatibility:** The device is made of silicone. Ensure you are not allergic to silicone. Use with water-based lubricants only. Oil-based lubricants can damage silicone.

## PRODUCT FEATURES

The Pretty Love Hector Vibrator is designed for enhanced pleasure with multiple functions:

- **7 Vibration Modes:** Offers a variety of patterns and intensities for diverse sensations.
- **5 ElectroShock Modes:** Provides unique electroshock stimulation options.
- **Ergonomic Design:** Shaped for G-spot and clitoral stimulation.
- **USB Rechargeable:** Convenient and eco-friendly charging.
- **Waterproof:** Suitable for use in the shower or bath and easy to clean.
- **Material:** Made from body-safe silicone.





Image: A close-up view of the Pretty Love Hector Vibrator, highlighting its ergonomic curved shape designed for targeted stimulation.

## SETUP AND CHARGING

### Initial Charging

1. Locate the charging port at the base of the device. It may be covered by a silicone plug for waterproofing.
2. Insert the small end of the provided USB charging cable into the device's charging port.
3. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
4. The indicator light on the device will illuminate or flash to show it is charging.
5. Charge the device fully before first use. A full charge typically takes 2-3 hours. The indicator light will change or turn off when charging is complete.
6. Once charging is complete, remove the cable and ensure the charging port is securely sealed by the silicone plug to maintain waterproofing.



Image: The base of the Pretty Love Hector Vibrator, illustrating the location of the USB charging port, typically covered by a waterproof silicone seal.

## OPERATING INSTRUCTIONS

Familiarize yourself with the control buttons located on the device.

### Power On/Off

- Press and hold the power button (often indicated by a circle with a vertical line) for 2-3 seconds to turn the device on or off.

### Vibration Modes

- Once the device is powered on, press the vibration button (often indicated by a wavy line or multiple waves) to cycle through the 7 different vibration modes.
- Each press will change the vibration pattern or intensity.

### ElectroShock Modes

- With the device powered on, press the electroshock button (often indicated by a lightning bolt symbol) to activate and cycle through the 5 electroshock modes.
- Start with the lowest setting and gradually increase to find your preferred intensity.





Image: The Pretty Love Hector Vibrator, showcasing the control buttons for power, vibration, and electroshock functions, typically located on the handle.

## MAINTENANCE AND CLEANING

Cleaning After Use

1. Always clean your device thoroughly before and after each use.
2. Wash the device with warm water and a mild, toy-safe soap or a specialized toy cleaner.
3. Rinse thoroughly to remove all soap residue.
4. Pat dry with a lint-free cloth or allow it to air dry completely before storing.

Storage

- Store the device in a clean, dry, and dust-free environment.
- Keep it away from direct sunlight and extreme temperatures.
- Avoid storing with other silicone products or materials that could react with silicone, such as certain plastics or oil-based lubricants.

TROUBLESHOOTING

| Problem                               | Possible Cause                                        | Solution                                                                                                                 |
|---------------------------------------|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Device does not turn on.              | Battery is depleted.                                  | Charge the device fully using the provided USB cable.                                                                    |
| Vibrations are weak or inconsistent.  | Low battery.                                          | Recharge the device.                                                                                                     |
| Electroshock function is not working. | Not activated or low battery.                         | Ensure the device is on and press the electroshock button. Recharge if necessary.                                        |
| Device not charging.                  | Cable not properly connected or faulty cable/adapter. | Ensure the USB cable is securely connected to both the device and the power source. Try a different USB port or adapter. |

SPECIFICATIONS

- **Product Name:** Hector Vibrator with ElectroShock
- **Brand:** Pretty Love
- **Model Number:** 6959532325003
- **ASIN:** B08C5PDGGR
- **Material:** Silicone
- **Color:** Rose
- **Dimensions (L x W x H):** 19.5 x 3.2 x 3.2 cm (7.68 x 1.26 x 1.26 inches)
- **Weight:** 200 grams (0.44 lbs)
- **Water Resistance:** Waterproof
- **Charging:** USB Rechargeable
- **Vibration Modes:** 7
- **ElectroShock Modes:** 5

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Pretty Love website. Keep your proof of purchase for warranty claims.

*Note: Specific warranty terms may vary by region and retailer.*

© 2023 Pretty Love. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B08C5PDGGR>

More documents and user manuals: <https://manuals.plus/>